


Backplane Header Removal Tool



Application Tooling Specification Sheet

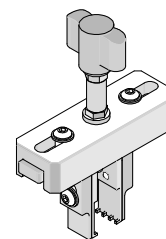

Order No. 62100-9610

FEATURES

- Universal tool used for removal of GbX-U™, I-Trac™, Impact™, or Molex TinMan headers
- Removes connector without damage to the PCB

SCOPE

Products: GbX-U™, I-Trac™, Impact™, or TinMan backplane headers. See Product List below for order numbers.

Product List

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on www.molex.com.

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 75705 Unguided	5	75705-0502	75705-0503	75705-0504	75705-0505	75705-0512	75705-0513	
		75705-0514	75705-0515	75705-0522	75705-0523	75705-0524	75705-0525	
		75705-0532	75705-0533	75705-0534	75705-0535	75705-1502	75705-1503	
		75705-1504	75705-1505	75705-1512	75705-1513	75705-1514	75705-1515	
		75705-1522	75705-1523	75705-1524	75705-1525	75705-1532	75705-1533	
		75705-1534	75705-1535					
	6	75705-0602	75705-0603	75705-0604	75705-0605	75705-0612	75705-0613	
		75705-0614	75705-0615	75705-0622	75705-0623	75705-0624	75705-0625	
		75705-0632	75705-0633	75705-0634	75705-0635	75705-1602	75705-1603	
		75705-1604	75705-1605	75705-1612	75705-1613	75705-1614	75705-1615	
		75705-1622	75705-1623	75705-1624	75705-1625	75705-1632	75705-1633	
		75705-1634	75705-1635					
	8	75705-0802	75705-0803	75705-0804	75705-0805	75705-0812	75705-0813	
		75705-0814	75705-0815	75705-0822	75705-0823	75705-0824	75705-0825	
		75705-0832	75705-0833	75705-0834	75705-0835	75705-1802	75705-1803	
		75705-1804	75705-1805	75705-1812	75705-1813	75705-1814	75705-1815	
		75705-1822	75705-1823	75705-1824	75705-1825	75705-1832	75705-1833	
		75705-1834	75705-1835					
	10	75705-0102	75705-0103	75705-0104	75705-0105	75705-0112	75705-0113	
		75705-0114	75705-0115	75705-0122	75705-0123	75705-0124	75705-0125	
		75705-0132	75705-0133	75705-0134	75705-0135	75705-1102	75705-1103	
		75705-1104	75705-1105	75705-1112	75705-1113	75705-1114	75705-1115	
		75705-1122	75705-1123	75705-1124	75705-1125	75705-1132	75705-1133	
		75705-1134	75705-1135					
	I-Trac™ 75705 Guide Left	5	75705-2502	75705-2503	75705-2504	75705-2505	75705-2512	75705-2513
			75705-2514	75705-2515	75705-2522	75705-2523	75705-2524	75705-2525
			75705-2532	75705-2533	75705-2534	75705-2535	75705-2542	75705-2543
			75705-2544	75705-2545	75705-2552	75705-2553	75705-2554	75705-2555
75705-2562			75705-2563	75705-2564	75705-2565	75705-2572	75705-2573	
75705-2574			75705-2575	75705-2582	75705-2583	75705-2584	75705-2585	
75705-3502			75705-3503	75705-3504	75705-3505	75705-3512	75705-3513	
75705-3514			75705-3515	75705-3522	75705-3523	75705-3524	75705-3525	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 75705 Guide Left	5	75705-3532	75705-3533	75705-3534	75705-3535	75705-3542	75705-3543	
		75705-3544	75705-3545	75705-3552	75705-3553	75705-3554	75705-3555	
		75705-3562	75705-3563	75705-3564	75705-3565	75705-3572	75705-3573	
		75705-3574	75705-3575	75705-3582	75705-3583	75705-3584	75705-3585	
		75705-6502	75705-6503	75705-6504	75705-6505	75705-6512	75705-6513	
		75705-6514	75705-6515	75705-6522	75705-6523	75705-6524	75705-6525	
		75705-6532	75705-6533	75705-6534	75705-6535	75705-6542	75705-6543	
		75705-6544	75705-6545	75705-6552	75705-6553	75705-6554	75705-6555	
		75705-6562	75705-6563	75705-6564	75705-6565	75705-6572	75705-6573	
		75705-6574	75705-6575	75705-6582	75705-6583	75705-6584	75705-6585	
		75705-7502	75705-7503	75705-7504	75705-7505	75705-7512	75705-7513	
		75705-7514	75705-7515	75705-7522	75705-7523	75705-7524	75705-7525	
		75705-7532	75705-7533	75705-7534	75705-7535	75705-7542	75705-7543	
		75705-7544	75705-7545	75705-7552	75705-7553	75705-7554	75705-7555	
		75705-7562	75705-7563	75705-7564	75705-7565	75705-7572	75705-7573	
		75705-7574	75705-7575	75705-7582	75705-7583	75705-7584	75705-7585	
		6	75705-2602	75705-2603	75705-2604	75705-2605	75705-2612	75705-2613
			75705-2614	75705-2615	75705-2622	75705-2623	75705-2624	75705-2625
	75705-2632		75705-2633	75705-2634	75705-2635	75705-2642	75705-2643	
	75705-2644		75705-2645	75705-2652	75705-2653	75705-2654	75705-2655	
	75705-2662		75705-2663	75705-2664	75705-2665	75705-2672	75705-2673	
	75705-2674		75705-2675	75705-2682	75705-2683	75705-2684	75705-2685	
	75705-3602		75705-3603	75705-3604	75705-3605	75705-3612	75705-3613	
	75705-3614		75705-3615	75705-3622	75705-3623	75705-3624	75705-3625	
	75705-3632		75705-3633	75705-3634	75705-3635	75705-3642	75705-3643	
	75705-3644		75705-3645	75705-3652	75705-3653	75705-3654	75705-3655	
	75705-3662		75705-3663	75705-3664	75705-3665	75705-3672	75705-3673	
	75705-3674		75705-3675	75705-3682	75705-3683	75705-3684	75705-3685	
	75705-6602		75705-6603	75705-6604	75705-6605	75705-6612	75705-6613	
	75705-6614		75705-6615	75705-6622	75705-6623	75705-6624	75705-6625	
	75705-6632		75705-6633	75705-6634	75705-6635	75705-6642	75705-6643	
	75705-6644		75705-6645	75705-6652	75705-6653	75705-6654	75705-6655	
	75705-6662		75705-6663	75705-6664	75705-6665	75705-6672	75705-6673	
	75705-6674		75705-6675	75705-6682	75705-6683	75705-6684	75705-6685	
	8	75705-2802	75705-2803	75705-2804	75705-2805	75705-2812	75705-2813	
		75705-2814	75705-2815	75705-2822	75705-2823	75705-2824	75705-2825	
		75705-2832	75705-2833	75705-2834	75705-2835	75705-2842	75705-2843	
		75705-2844	75705-2845	75705-2852	75705-2853	75705-2854	75705-2855	
		75705-2862	75705-2863	75705-2864	75705-2865	75705-2872	75705-2873	
		75705-2874	75705-2875	75705-2882	75705-2883	75705-2884	75705-2885	
		75705-3802	75705-3803	75705-3804	75705-3805	75705-3812	75705-3813	
		75705-3814	75705-3815	75705-3822	75705-3823	75705-3824	75705-3825	
75705-3832		75705-3833	75705-3834	75705-3835	75705-3842	75705-3843		
75705-3844		75705-3845	75705-3852	75705-3853	75705-3854	75705-3855		
75705-3862		75705-3863	75705-3864	75705-3865	75705-3872	75705-3873		
75705-3874		75705-3875	75705-3882	75705-3883	75705-3884	75705-3885		
75705-6802		75705-6803	75705-6804	75705-6805	75705-6812	75705-6813		
75705-6814		75705-6815	75705-6822	75705-6823	75705-6824	75705-6825		
75705-6832		75705-6833	75705-6834	75705-6835	75705-6842	75705-6843		
75705-6844		75705-6845	75705-6852	75705-6853	75705-6854	75705-6855		
75705-6862		75705-6863	75705-6864	75705-6865	75705-6872	75705-6873		
75705-6874		75705-6875	75705-6882	75705-6883	75705-6884	75705-6885		
75705-7802		75705-7803	75705-7804	75705-7805	75705-7812	75705-7813		
75705-7814		75705-7815	75705-7822	75705-7823	75705-7824	75705-7825		
75705-7832	75705-7833	75705-7834	75705-7835	75705-7842	75705-7843			
75705-7844	75705-7845	75705-7852	75705-7853	75705-7854	75705-7855			

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
I-Trac™ 75705 Guide Left	8	75705-7862	75705-7863	75705-7864	75705-7865	75705-7872	75705-7873
		75705-7874	75705-7875	75705-7882	75705-7883	75705-7884	75705-7885
	10	75705-2102	75705-2103	75705-2104	75705-2105	75705-2112	75705-2113
		75705-2114	75705-2115	75705-2122	75705-2123	75705-2124	75705-2125
		75705-2132	75705-2133	75705-2134	75705-2135	75705-2142	75705-2143
		75705-2144	75705-2145	75705-2152	75705-2153	75705-2154	75705-2155
		75705-2162	75705-2163	75705-2164	75705-2165	75705-2172	75705-2173
		75705-2174	75705-2175	75705-2182	75705-2183	75705-2184	75705-2185
		75705-3102	75705-3103	75705-3104	75705-3105	75705-3112	75705-3113
		75705-3114	75705-3115	75705-3122	75705-3123	75705-3124	75705-3125
		75705-3132	75705-3133	75705-3134	75705-3135	75705-3142	75705-3143
		75705-3144	75705-3145	75705-3152	75705-3153	75705-3154	75705-3155
		75705-3162	75705-3163	75705-3164	75705-3165	75705-3172	75705-3173
		75705-3174	75705-3175	75705-3182	75705-3183	75705-3184	75705-3185
		75705-6102	75705-6103	75705-6104	75705-6105	75705-6112	75705-6113
		75705-6114	75705-6115	75705-6122	75705-6123	75705-6124	75705-6125
		75705-6132	75705-6133	75705-6134	75705-6135	75705-6142	75705-6143
		75705-6144	75705-6145	75705-6152	75705-6153	75705-6154	75705-6155
		75705-6162	75705-6163	75705-6164	75705-6165	75705-6172	75705-6173
		75705-6174	75705-6175	75705-6182	75705-6183	75705-6184	75705-6185
		75705-7102	75705-7103	75705-7104	75705-7105	75705-7112	75705-7113
		75705-7114	75705-7115	75705-7122	75705-7123	75705-7124	75705-7125
		75705-7132	75705-7133	75705-7134	75705-7135	75705-7142	75705-7143
		75705-7144	75705-7145	75705-7152	75705-7153	75705-7154	75705-7155
		75705-7162	75705-7163	75705-7164	75705-7165	75705-7172	75705-7173
		75705-7174	75705-7175	75705-7182	75705-7183	75705-7184	75705-7185
I-Trac™ 75705 Guide Right	5	75705-4502	75705-4503	75705-4504	75705-4505	75705-4512	75705-4513
		75705-4514	75705-4515	75705-4522	75705-4523	75705-4524	75705-4525
		75705-4532	75705-4533	75705-4534	75705-4535	75705-4542	75705-4543
		75705-4544	75705-4545	75705-4552	75705-4553	75705-4554	75705-4555
		75705-4562	75705-4563	75705-4564	75705-4565	75705-4572	75705-4573
		75705-4574	75705-4575	75705-4582	75705-4583	75705-4584	75705-4585
		75705-5502	75705-5503	75705-5504	75705-5505	75705-5512	75705-5513
		75705-5514	75705-5515	75705-5522	75705-5523	75705-5524	75705-5525
		75705-5532	75705-5533	75705-5534	75705-5535	75705-5542	75705-5543
		75705-5544	75705-5545	75705-5552	75705-5553	75705-5554	75705-5555
		75705-5562	75705-5563	75705-5564	75705-5565	75705-5572	75705-5573
		75705-5574	75705-5575	75705-5582	75705-5583	75705-5584	75705-5585
		75705-8502	75705-8503	75705-8504	75705-8505	75705-8512	75705-8513
		75705-8514	75705-8515	75705-8522	75705-8523	75705-8524	75705-8525
		75705-8532	75705-8533	75705-8534	75705-8535	75705-8542	75705-8543
		75705-8544	75705-8545	75705-8552	75705-8553	75705-8554	75705-8555
		75705-8562	75705-8563	75705-8564	75705-8565	75705-8572	75705-8573
		75705-8574	75705-8575	75705-8582	75705-8583	75705-8584	75705-8585
		75705-9502	75705-9503	75705-9504	75705-9505	75705-9512	75705-9513
		75705-9514	75705-9515	75705-9522	75705-9523	75705-9524	75705-9525
		75705-9532	75705-9533	75705-9534	75705-9535	75705-9542	75705-9543
		75705-9544	75705-9545	75705-9552	75705-9553	75705-9554	75705-9555
		75705-9562	75705-9563	75705-9564	75705-9565	75705-9572	75705-9573
		75705-9574	75705-9575	75705-9582	75705-9583	75705-9584	75705-9585
	6	75705-4602	75705-4603	75705-4604	75705-4605	75705-4612	75705-4613
		75705-4614	75705-4615	75705-4622	75705-4623	75705-4624	75705-4625
		75705-4632	75705-4633	75705-4634	75705-4635	75705-4642	75705-4643
		75705-4644	75705-4645	75705-4652	75705-4653	75705-4654	75705-4655
		75705-4662	75705-4663	75705-4664	75705-4665	75705-4672	75705-4673
		75705-4674	75705-4675	75705-4682	75705-4683	75705-4684	75705-4685

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
I-Trac™ 75705 Guide Right	6	75705-5602	75705-5603	75705-5604	75705-5605	75705-5612	75705-5613
		75705-5614	75705-5615	75705-5622	75705-5623	75705-5624	75705-5625
		75705-5632	75705-5633	75705-5634	75705-5635	75705-5642	75705-5643
		75705-5644	75705-5645	75705-5652	75705-5653	75705-5654	75705-5655
		75705-5662	75705-5663	75705-5664	75705-5665	75705-5672	75705-5673
		75705-5674	75705-5675	75705-5682	75705-5683	75705-5684	75705-5685
		75705-7602	75705-7603	75705-7604	75705-7605	75705-7612	75705-7613
		75705-7614	75705-7615	75705-7622	75705-7623	75705-7624	75705-7625
		75705-7632	75705-7633	75705-7634	75705-7635	75705-7642	75705-7643
		75705-7644	75705-7645	75705-7652	75705-7653	75705-7654	75705-7655
		75705-7662	75705-7663	75705-7664	75705-7665	75705-7672	75705-7673
		75705-7674	75705-7675	75705-7682	75705-7683	75705-7684	75705-7685
		75705-8602	75705-8603	75705-8604	75705-8605	75705-8612	75705-8613
		75705-8614	75705-8615	75705-8622	75705-8623	75705-8624	75705-8625
		75705-8632	75705-8633	75705-8634	75705-8635	75705-8642	75705-8643
		75705-8644	75705-8645	75705-8652	75705-8653	75705-8654	75705-8655
		75705-8662	75705-8663	75705-8664	75705-8665	75705-8672	75705-8673
		75705-8674	75705-8675	75705-8682	75705-8683	75705-8684	75705-8685
		75705-9602	75705-9603	75705-9604	75705-9605	75705-9612	75705-9613
		75705-9614	75705-9615	75705-9622	75705-9623	75705-9624	75705-9625
		75705-9632	75705-9633	75705-9634	75705-9635	75705-9642	75705-9643
		75705-9644	75705-9645	75705-9652	75705-9653	75705-9654	75705-9655
		75705-9662	75705-9663	75705-9664	75705-9665	75705-9672	75705-9673
		75705-9674	75705-9675	75705-9682	75705-9683	75705-9684	75705-9685
	75705-9602	75705-9603	75705-9604	75705-9605	75705-9612	75705-9613	
	75705-4802	75705-4803	75705-4804	75705-4805	75705-4812	75705-4813	
	75705-4814	75705-4815	75705-4822	75705-4823	75705-4824	75705-4825	
	75705-4832	75705-4833	75705-4834	75705-4835	75705-4842	75705-4843	
	75705-4844	75705-4845	75705-4852	75705-4853	75705-4854	75705-4855	
	75705-4862	75705-4863	75705-4864	75705-4865	75705-4872	75705-4873	
	75705-4874	75705-4875	75705-4882	75705-4883	75705-4884	75705-4885	
	75705-5802	75705-5803	75705-5804	75705-5805	75705-5812	75705-5813	
	75705-5814	75705-5815	75705-5822	75705-5823	75705-5824	75705-5825	
	75705-5832	75705-5833	75705-5834	75705-5835	75705-5842	75705-5843	
	75705-5844	75705-5845	75705-5852	75705-5853	75705-5854	75705-5855	
	75705-5862	75705-5863	75705-5864	75705-5865	75705-5872	75705-5873	
	75705-5874	75705-5875	75705-5882	75705-5883	75705-5884	75705-5885	
	75705-8802	75705-8803	75705-8804	75705-8805	75705-8812	75705-8813	
	75705-8814	75705-8815	75705-8822	75705-8823	75705-8824	75705-8825	
	75705-8832	75705-8833	75705-8834	75705-8835	75705-8842	75705-8843	
	75705-8844	75705-8845	75705-8852	75705-8853	75705-8854	75705-8855	
	75705-8862	75705-8863	75705-8864	75705-8865	75705-8872	75705-8873	
	75705-8874	75705-8875	75705-8882	75705-8883	75705-8884	75705-8885	
	75705-9802	75705-9803	75705-9804	75705-9805	75705-9812	75705-9813	
	75705-9814	75705-9815	75705-9822	75705-9823	75705-9824	75705-9825	
75705-9832	75705-9833	75705-9834	75705-9835	75705-9842	75705-9843		
75705-9844	75705-9845	75705-9852	75705-9853	75705-9854	75705-9855		
75705-9862	75705-9863	75705-9864	75705-9865	75705-9872	75705-9873		
75705-9874	75705-9875	75705-9882	75705-9883	75705-9884	75705-9885		
75705-4102	75705-4103	75705-4104	75705-4105	75705-4112	75705-4113		
75705-4114	75705-4115	75705-4122	75705-4123	75705-4124	75705-4125		
75705-4132	75705-4133	75705-4134	75705-4135	75705-4142	75705-4143		
75705-4144	75705-4145	75705-4152	75705-4153	75705-4154	75705-4155		
75705-4162	75705-4163	75705-4164	75705-4165	75705-4172	75705-4173		
75705-4174	75705-4175	75705-4182	75705-4183	75705-4184	75705-4185		
75705-5102	75705-5103	75705-5104	75705-5105	75705-5112	75705-5113		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 75705 Guide Right	10	75705-5114	75705-5115	75705-5122	75705-5123	75705-5124	75705-5125	
		75705-5132	75705-5133	75705-5134	75705-5135	75705-5142	75705-5143	
		75705-5144	75705-5145	75705-5152	75705-5153	75705-5154	75705-5155	
		75705-5162	75705-5163	75705-5164	75705-5165	75705-5172	75705-5173	
		75705-5174	75705-5175	75705-5182	75705-5183	75705-5184	75705-5185	
		75705-8102	75705-8103	75705-8104	75705-8105	75705-8112	75705-8113	
		75705-8114	75705-8115	75705-8122	75705-8123	75705-8124	75705-8125	
		75705-8132	75705-8133	75705-8134	75705-8135	75705-8142	75705-8143	
		75705-8144	75705-8145	75705-8152	75705-8153	75705-8154	75705-8155	
		75705-8162	75705-8163	75705-8164	75705-8165	75705-8172	75705-8173	
		75705-8174	75705-8175	75705-8182	75705-8183	75705-8184	75705-8185	
		75705-9102	75705-9103	75705-9104	75705-9105	75705-9112	75705-9113	
		75705-9114	75705-9115	75705-9122	75705-9123	75705-9124	75705-9125	
		75705-9132	75705-9133	75705-9134	75705-9135	75705-9142	75705-9143	
		75705-9144	75705-9145	75705-9152	75705-9153	75705-9154	75705-9155	
		75705-9162	75705-9163	75705-9164	75705-9165	75705-9172	75705-9173	
		75705-9174	75705-9175	75705-9182	75705-9183	75705-9184	75705-9185	
I-Trac™ 76015 Unguided	4	76015-0402	76015-0403	76015-0404	76015-0405	76015-0412	76015-0413	
		76015-0414	76015-0415	76015-0422	76015-0423	76015-0424	76015-0425	
		76015-0432	76015-0433	76015-0434	76015-0435	76015-1402	76015-1403	
		76015-1404	76015-1405	76015-1412	76015-1413	76015-1422	76015-1423	
		76015-1424	76015-1425	76015-1432	76015-1433	76015-1434	76015-1435	
	6	76015-0602	76015-0603	76015-0604	76015-0605	76015-0612	76015-0613	
		76015-0614	76015-0615	76015-0622	76015-0623	76015-0624	76015-0625	
		76015-0632	76015-0633	76015-0634	76015-0635	76015-1602	76015-1603	
		76015-1604	76015-1605	76015-1612	76015-1613	76015-1614	76015-1615	
		76015-1622	76015-1623	76015-1624	76015-1625	76015-1632	76015-1633	
	76015-1634	76015-1635						
	10	76015-0102	76015-0103	76015-0104	76015-0105	76015-0112	76015-0113	
		76015-0114	76015-0115	76015-0122	76015-0123	76015-0124	76015-0125	
		76015-0132	76015-0133	76015-0134	76015-0135	76015-1102	76015-1103	
		76015-1104	76015-1105	76015-1112	76015-1113	76015-1114	76015-1115	
		76015-1122	76015-1123	76015-1124	76015-1125	76015-1132	76015-1133	
		76015-1134	76015-1135					
	I-Trac™ 76015 Guided Left	4	76015-2402	76015-2403	76015-2404	76015-2405	76015-2412	76015-2413
			76015-2414	76015-2415	76015-2422	76015-2423	76015-2424	76015-2425
76015-2432			76015-2433	76015-2434	76015-2435	76015-2442	76015-2443	
76015-2444			76015-2445	76015-2452	76015-2453	76015-2454	76015-2455	
76015-2462			76015-2463	76015-2464	76015-2465	76015-2472	76015-2473	
76015-2474			76015-2475	76015-2482	76015-2483	76015-2484	76015-2485	
76015-3402			76015-3403	76015-3404	76015-3405	76015-3412	76015-3413	
76015-3414			76015-3415	76015-3422	76015-3423	76015-3424	76015-3425	
76015-3432			76015-3433	76015-3434	76015-3435	76015-3442	76015-3443	
76015-3444			76015-3445	76015-3452	76015-3453	76015-3454	76015-3455	
76015-3462			76015-3463	76015-3464	76015-3465	76015-3472	76015-3473	
76015-3474			76015-3475	76015-3482	76015-3483	76015-3484	76015-3485	
76015-6402			76015-6403	76015-6404	76015-6405	76015-6412	76015-6413	
76015-6414			76015-6415	76015-6422	76015-6423	76015-6424	76015-6425	
76015-6432			76015-6433	76015-6434	76015-6435	76015-6442	76015-6443	
76015-6444			76015-6445	76015-6452	76015-6453	76015-6454	76015-6455	
76015-6462			76015-6463	76015-6464	76015-6465	76015-6472	76015-6473	
76015-6474			76015-6475	76015-6482	76015-6483	76015-6484	76015-6485	
76015-7402			76015-7403	76015-7404	76015-7405	76015-7412	76015-7413	
76015-7414			76015-7415	76015-7422	76015-7423	76015-7424	76015-7425	
76015-7432			76015-7433	76015-7434	76015-7435	76015-7442	76015-7443	
76015-7444			76015-7445	76015-7452	76015-7453	76015-7454	76015-7455	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 76015 Guided Left	6	76015-7462	76015-7463	76015-7464	76015-7465	76015-7472	76015-7473	
		76015-7474	76015-7475	76015-7482	76015-7483	76015-7484	76015-7485	
		76015-2602	76015-2603	76015-2604	76015-2605	76015-2612	76015-2613	
		76015-2614	76015-2615	76015-2622	76015-2623	76015-2624	76015-2625	
		76015-2632	76015-2633	76015-2634	76015-2635	76015-2642	76015-2643	
		76015-2644	76015-2645	76015-2652	76015-2653	76015-2654	76015-2655	
		76015-2662	76015-2663	76015-2664	76015-2665	76015-2672	76015-2673	
		76015-2674	76015-2675	76015-2682	76015-2683	76015-2684	76015-2685	
		76015-3602	76015-3603	76015-3604	76015-3605	76015-3612	76015-3613	
		76015-3614	76015-3615	76015-3622	76015-3623	76015-3624	76015-3625	
		76015-3632	76015-3633	76015-3634	76015-3635	76015-3642	76015-3643	
		76015-3644	76015-3645	76015-3652	76015-3653	76015-3654	76015-3655	
		76015-3662	76015-3663	76015-3664	76015-3665	76015-3672	76015-3673	
		76015-3674	76015-3675	76015-3682	76015-3683	76015-3684	76015-3685	
		76015-6602	76015-6603	76015-6604	76015-6605	76015-6612	76015-6613	
		76015-6614	76015-6615	76015-6622	76015-6623	76015-6624	76015-6625	
		76015-6632	76015-6633	76015-6634	76015-6635	76015-6642	76015-6643	
		76015-6644	76015-6645	76015-6652	76015-6653	76015-6654	76015-6655	
		76015-6662	76015-6663	76015-6664	76015-6665	76015-6672	76015-6673	
		76015-6674	76015-6675	76015-6682	76015-6683	76015-6684	76015-6685	
		76015-7602	76015-7603	76015-7604	76015-7605	76015-7612	76015-7613	
		76015-7614	76015-7615	76015-7622	76015-7623	76015-7624	76015-7625	
		76015-7632	76015-7633	76015-7634	76015-7635	76015-7642	76015-7643	
		76015-7644	76015-7645	76015-7652	76015-7653	76015-7654	76015-7655	
		76015-7662	76015-7663	76015-7664	76015-7665	76015-7672	76015-7673	
		76015-7674	76015-7675	76015-7682	76015-7683	76015-7684	76015-7685	
	I-Trac™ 76015 Guided Right	4	76015-2102	76015-2103	76015-2104	76015-2105	76015-2112	76015-2113
			76015-2114	76015-2115	76015-2122	76015-2123	76015-2124	76015-2125
			76015-2132	76015-2133	76015-2134	76015-2135	76015-2142	76015-2143
			76015-2144	76015-2145	76015-2152	76015-2153	76015-2154	76015-2155
			76015-2162	76015-2163	76015-2164	76015-2165	76015-2172	76015-2173
			76015-2174	76015-2175	76015-2182	76015-2183	76015-2184	76015-2185
			76015-3102	76015-3103	76015-3104	76015-3105	76015-3112	76015-3113
			76015-3114	76015-3115	76015-3122	76015-3123	76015-3124	76015-3125
76015-3132			76015-3133	76015-3134	76015-3135	76015-3142	76015-3143	
76015-3144			76015-3145	76015-3152	76015-3153	76015-3154	76015-3155	
76015-3162			76015-3163	76015-3164	76015-3165	76015-3172	76015-3173	
76015-3174			76015-3175	76015-3182	76015-3183	76015-3184	76015-3185	
76015-6102			76015-6103	76015-6104	76015-6105	76015-6112	76015-6113	
76015-6114			76015-6115	76015-6122	76015-6123	76015-6124	76015-6125	
76015-6132			76015-6133	76015-6134	76015-6135	76015-6142	76015-6143	
76015-6144			76015-6145	76015-6152	76015-6153	76015-6154	76015-6155	
76015-6162			76015-6163	76015-6164	76015-6165	76015-6172	76015-6173	
76015-6174			76015-6175	76015-6182	76015-6183	76015-6184	76015-6185	
76015-7102			76015-7103	76015-7104	76015-7105	76015-7112	76015-7113	
76015-7114			76015-7115	76015-7122	76015-7123	76015-7124	76015-7125	
76015-7132			76015-7133	76015-7134	76015-7135	76015-7142	76015-7143	
76015-7144			76015-7145	76015-7152	76015-7153	76015-7154	76015-7155	
76015-7162			76015-7163	76015-7164	76015-7165	76015-7172	76015-7173	
76015-7174			76015-7175	76015-7182	76015-7183	76015-7184	76015-7185	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
I-Trac™ 76015 Guided Right	4	76015-5402	76015-5403	76015-5404	76015-5405	76015-5412	76015-5413
		76015-5414	76015-5415	76015-5422	76015-5423	76015-5424	76015-5425
		76015-5432	76015-5433	76015-5434	76015-5435	76015-5442	76015-5443
		76015-5444	76015-5445	76015-5452	76015-5453	76015-5454	76015-5455
		76015-5462	76015-5463	76015-5464	76015-5465	76015-5472	76015-5473
		76015-5474	76015-5475	76015-5482	76015-5483	76015-5484	76015-5485
		76015-8402	76015-8403	76015-8404	76015-8405	76015-8412	76015-8413
		76015-8414	76015-8415	76015-8422	76015-8423	76015-8424	76015-8425
		76015-8432	76015-8433	76015-8434	76015-8435	76015-8442	76015-8443
		76015-8444	76015-8445	76015-8452	76015-8453	76015-8454	76015-8455
		76015-8462	76015-8463	76015-8464	76015-8465	76015-8472	76015-8473
		76015-8474	76015-8475	76015-8482	76015-8483	76015-8484	76015-8485
		76015-9402	76015-9403	76015-9404	76015-9405	76015-9412	76015-9413
		76015-9414	76015-9415	76015-9422	76015-9423	76015-9424	76015-9425
		76015-9432	76015-9433	76015-9434	76015-9435	76015-9442	76015-9443
		76015-9444	76015-9445	76015-9452	76015-9453	76015-9454	76015-9455
		76015-9462	76015-9463	76015-9464	76015-9465	76015-9472	76015-9473
		76015-9474	76015-9475	76015-9482	76015-9483	76015-9484	76015-9485
	6	76015-4602	76015-4603	76015-4604	76015-4605	76015-4612	76015-4613
		76015-4614	76015-4615	76015-4622	76015-4623	76015-4624	76015-4625
		76015-4632	76015-4633	76015-4634	76015-4635	76015-4642	76015-4643
		76015-4644	76015-4645	76015-4652	76015-4653	76015-4654	76015-4655
		76015-4662	76015-4663	76015-4664	76015-4665	76015-4672	76015-4673
		76015-4674	76015-4675	76015-4682	76015-4683	76015-4684	76015-4685
		76015-5602	76015-5603	76015-5604	76015-5605	76015-5612	76015-5613
		76015-5614	76015-5615	76015-5622	76015-5623	76015-5624	76015-5625
		76015-5632	76015-5633	76015-5634	76015-5635	76015-5642	76015-5643
		76015-5644	76015-5645	76015-5652	76015-5653	76015-5654	76015-5655
		76015-5662	76015-5663	76015-5664	76015-5665	76015-5672	76015-5673
		76015-5674	76015-5675	76015-5682	76015-5683	76015-5684	76015-5685
		76015-8602	76015-8603	76015-8604	76015-8605	76015-8612	76015-8613
		76015-8614	76015-8615	76015-8622	76015-8623	76015-8624	76015-8625
		76015-8632	76015-8633	76015-8634	76015-8635	76015-8642	76015-8643
		76015-8644	76015-8645	76015-8652	76015-8653	76015-8654	76015-8655
		76015-8662	76015-8663	76015-8664	76015-8665	76015-8672	76015-8673
		76015-8674	76015-8675	76015-8682	76015-8683	76015-8684	76015-8685
10	76015-4102	76015-4103	76015-4104	76015-4105	76015-4112	76015-4113	
	76015-4114	76015-4115	76015-4122	76015-4123	76015-4124	76015-4125	
	76015-4132	76015-4133	76015-4134	76015-4135	76015-4142	76015-4143	
	76015-4144	76015-4145	76015-4152	76015-4153	76015-4154	76015-4155	
	76015-4162	76015-4163	76015-4164	76015-4165	76015-4172	76015-4173	
	76015-4174	76015-4175	76015-4182	76015-4183	76015-4184	76015-4185	
	76015-5102	76015-5103	76015-5104	76015-5105	76015-5112	76015-5113	
	76015-5114	76015-5115	76015-5122	76015-5123	76015-5124	76015-5125	
	76015-5132	76015-5133	76015-5134	76015-5135	76015-5142	76015-5143	
	76015-5144	76015-5145	76015-5152	76015-5153	76015-5154	76015-5155	
	76015-5162	76015-5163	76015-5164	76015-5165	76015-5172	76015-5173	
	76015-5174	76015-5175	76015-5182	76015-5183	76015-5184	76015-5185	
	76015-8102	76015-8103	76015-8104	76015-8105	76015-8112	76015-8113	
	76015-8114	76015-8115	76015-8122	76015-8123	76015-8124	76015-8125	
	76015-8132	76015-8133	76015-8134	76015-8135	76015-8142	76015-8143	
	76015-8144	76015-8145	76015-8152	76015-8153	76015-8154	76015-8155	
	76015-8162	76015-8163	76015-8164	76015-8165	76015-8172	76015-8173	
	76015-8174	76015-8175	76015-8182	76015-8183	76015-8184	76015-8185	
76015-9102	76015-9103	76015-9104	76015-9105	76015-9112	76015-9113		
76015-9114	76015-9115	76015-9122	76015-9123	76015-9124	76015-9125		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 76015 Guided Right	10	76015-9132	76015-9133	76015-9134	76015-9135	76015-9142	76015-9143	
		76015-9144	76015-9145	76015-9152	76015-9153	76015-9154	76015-9155	
		76015-9162	76015-9163	76015-9164	76015-9165	76015-9172	76015-9173	
		76015-9174	76015-9175	76015-9182	76015-9183	76015-9184	76015-9185	
		76015-9602	76015-9603	76015-9604	76015-9605	76015-9612	76015-9613	
		76015-9614	76015-9615	76015-9622	76015-9623	76015-9624	76015-9625	
		76015-9632	76015-9633	76015-9634	76015-9635	76015-9642	76015-9643	
		76015-9644	76015-9645	76015-9652	76015-9653	76015-9654	76015-9655	
		76015-9662	76015-9663	76015-9664	76015-9665	76015-9672	76015-9673	
		76015-9674	76015-9675	76015-9682	76015-9683	76015-9684	76015-9685	
I-Trac™ 76035 Unguided	8	76035-0802	76035-0803	76035-0804	76035-0805	76035-0812	76035-0813	
		76035-0814	76035-0815	76035-0822	76035-0823	76035-0824	76035-0825	
		76035-0832	76035-0833	76035-0834	76035-0835	76035-1802	76035-1803	
		76035-1804	76035-1805	76035-1812	76035-1813	76035-1814	76035-1815	
		76035-1822	76035-1823	76035-1824	76035-1825	76035-1832	76035-1833	
		76035-1834	76035-1835					
	9	76035-0902	76035-0903	76035-0904	76035-0905	76035-0912	76035-0913	
		76035-0914	76035-0915	76035-0922	76035-0923	76035-0924	76035-0925	
		76035-0932	76035-0933	76035-0934	76035-0935	76035-1902	76035-1903	
		76035-1904	76035-1905	76035-1912	76035-1913	76035-1914	76035-1915	
		76035-1922	76035-1923	76035-1924	76035-1925	76035-1932	76035-1933	
		76035-1934	76035-1935					
	10	76035-0102	76035-0103	76035-0104	76035-0105	76035-0112	76035-0113	
		76035-0114	76035-0115	76035-0122	76035-0123	76035-0124	76035-0125	
		76035-0132	76035-0133	76035-0134	76035-0135	76035-1102	76035-1103	
		76035-1104	76035-1105	76035-1112	76035-1113	76035-1114	76035-1115	
		76035-1122	76035-1123	76035-1124	76035-1125	76035-1132	76035-1133	
		76035-1134	76035-1135					
I-Trac™ 76035 Guided Left	8	76035-2802	76035-2803	76035-2804	76035-2805	76035-2812	76035-2813	
		76035-2814	76035-2815	76035-2822	76035-2823	76035-2824	76035-2825	
		76035-2832	76035-2833	76035-2834	76035-2835	76035-2842	76035-2843	
		76035-2844	76035-2845	76035-2852	76035-2853	76035-2854	76035-2855	
		76035-2862	76035-2863	76035-2864	76035-2865	76035-2872	76035-2873	
		76035-2874	76035-2875	76035-2882	76035-2883	76035-2884	76035-2885	
		76035-3802	76035-3803	76035-3804	76035-3805	76035-3812	76035-3813	
		76035-3814	76035-3815	76035-3822	76035-3823	76035-3824	76035-3825	
		76035-3832	76035-3833	76035-3834	76035-3835	76035-3842	76035-3843	
		76035-3844	76035-3845	76035-3852	76035-3853	76035-3854	76035-3855	
		76035-3862	76035-3863	76035-3864	76035-3865	76035-3872	76035-3873	
		76035-3874	76035-3875	76035-3882	76035-3883	76035-3884	76035-3885	
		76035-6802	76035-6803	76035-6804	76035-6805	76035-6812	76035-6813	
		76035-6814	76035-6815	76035-6822	76035-6823	76035-6824	76035-6825	
		76035-6832	76035-6833	76035-6834	76035-6835	76035-6842	76035-6843	
		76035-6844	76035-6845	76035-6852	76035-6853	76035-6854	76035-6855	
		76035-6862	76035-6863	76035-6864	76035-6865	76035-6872	76035-6873	
		76035-6874	76035-6875	76035-6882	76035-6883	76035-6884	76035-6885	
		76035-6802	76035-6803	76035-6804	76035-6805	76035-6812	76035-6813	
		76035-7802	76035-7803	76035-7804	76035-7805	76035-7812	76035-7813	
		76035-7814	76035-7815	76035-7822	76035-7823	76035-7824	76035-7825	
		76035-7832	76035-7833	76035-7834	76035-7835	76035-7842	76035-7843	
		76035-7844	76035-7845	76035-7852	76035-7853	76035-7854	76035-7855	
		76035-7862	76035-7863	76035-7864	76035-7865	76035-7872	76035-7873	
		76035-7874	76035-7875	76035-7882	76035-7883	76035-7884	76035-7885	
		9	76035-2902	76035-2903	76035-2904	76035-2905	76035-2912	76035-2913
			76035-2914	76035-2915	76035-2922	76035-2923	76035-2924	76035-2925
	76035-2932		76035-2933	76035-2934	76035-2935	76035-2942	76035-2943	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
I-Trac™ 76035 Guided Left	9	76035-2944	76035-2945	76035-2952	76035-2953	76035-2954	76035-2955	
		76035-2962	76035-2963	76035-2964	76035-2965	76035-2972	76035-2973	
		76035-2974	76035-2975	76035-2982	76035-2983	76035-2984	76035-2985	
		76035-3902	76035-3903	76035-3904	76035-3905	76035-3912	76035-3913	
		76035-3914	76035-3915	76035-3922	76035-3923	76035-3924	76035-3925	
		76035-3932	76035-3933	76035-3934	76035-3935	76035-3942	76035-3943	
		76035-3944	76035-3945	76035-3952	76035-3953	76035-3954	76035-3955	
		76035-3962	76035-3963	76035-3964	76035-3965	76035-3972	76035-3973	
		76035-3974	76035-3975	76035-3982	76035-3983	76035-3984	76035-3985	
		76035-6902	76035-6903	76035-6904	76035-6905	76035-6912	76035-6913	
		76035-6914	76035-6915	76035-6922	76035-6923	76035-6924	76035-6925	
		76035-6932	76035-6933	76035-6934	76035-6935	76035-6942	76035-6943	
		76035-6944	76035-6945	76035-6952	76035-6953	76035-6954	76035-6955	
		76035-6962	76035-6963	76035-6964	76035-6965	76035-6972	76035-6973	
		76035-6974	76035-6975	76035-6982	76035-6983	76035-6984	76035-6985	
		76035-6902	76035-6903	76035-6904	76035-6905	76035-6912	76035-6913	
		76035-7902	76035-7903	76035-7904	76035-7905	76035-7912	76035-7913	
		76035-7914	76035-7915	76035-7922	76035-7923	76035-7924	76035-7925	
		76035-7932	76035-7933	76035-7934	76035-7935	76035-7942	76035-7943	
		76035-7944	76035-7945	76035-7952	76035-7953	76035-7954	76035-7955	
	76035-7962	76035-7963	76035-7964	76035-7965	76035-7972	76035-7973		
	76035-7974	76035-7975	76035-7982	76035-7983	76035-7984	76035-7985		
	I-Trac™ 76035 Guided Right	8	76035-2102	76035-2103	76035-2104	76035-2105	76035-2112	76035-2113
			76035-2114	76035-2115	76035-2122	76035-2123	76035-2124	76035-2125
			76035-2132	76035-2133	76035-2134	76035-2135	76035-2142	76035-2143
			76035-2144	76035-2145	76035-2152	76035-2153	76035-2154	76035-2155
			76035-2162	76035-2163	76035-2164	76035-2165	76035-2172	76035-2173
			76035-2174	76035-2175	76035-2182	76035-2183	76035-2184	76035-2185
			76035-3102	76035-3103	76035-3104	76035-3105	76035-3112	76035-3113
			76035-3114	76035-3115	76035-3122	76035-3123	76035-3124	76035-3125
			76035-3132	76035-3133	76035-3134	76035-3135	76035-3142	76035-3143
			76035-3144	76035-3145	76035-3152	76035-3153	76035-3154	76035-3155
			76035-3162	76035-3163	76035-3164	76035-3165	76035-3172	76035-3173
76035-3174			76035-3175	76035-3182	76035-3183	76035-3184	76035-3185	
76035-6102			76035-6103	76035-6104	76035-6105	76035-6112	76035-6113	
76035-6114			76035-6115	76035-6122	76035-6123	76035-6124	76035-6125	
76035-6132			76035-6133	76035-6134	76035-6135	76035-6142	76035-6143	
76035-6144			76035-6145	76035-6152	76035-6153	76035-6154	76035-6155	
76035-6162			76035-6163	76035-6164	76035-6165	76035-6172	76035-6173	
76035-6174			76035-6175	76035-6182	76035-6183	76035-6184	76035-6185	
76035-7102			76035-7103	76035-7104	76035-7105	76035-7112	76035-7113	
76035-7114			76035-7115	76035-7122	76035-7123	76035-7124	76035-7125	
76035-7132	76035-7133	76035-7134	76035-7135	76035-7142	76035-7143			
76035-7144	76035-7145	76035-7152	76035-7153	76035-7154	76035-7155			
76035-7162	76035-7163	76035-7164	76035-7165	76035-7172	76035-7173			
76035-7174	76035-7175	76035-7182	76035-7183	76035-7184	76035-7185			

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
I-Trac™ 76035 Guided Right	8	76035-5862	76035-5863	76035-5864	76035-5865	76035-5872	76035-5873
		76035-5874	76035-5875	76035-5882	76035-5883	76035-5884	76035-5885
		76035-8802	76035-8803	76035-8804	76035-8805	76035-8812	76035-8813
		76035-8814	76035-8815	76035-8822	76035-8823	76035-8824	76035-8825
		76035-8832	76035-8833	76035-8834	76035-8835	76035-8842	76035-8843
		76035-8844	76035-8845	76035-8852	76035-8853	76035-8854	76035-8855
		76035-8862	76035-8863	76035-8864	76035-8865	76035-8872	76035-8873
		76035-8874	76035-8875	76035-8882	76035-8883	76035-8884	76035-8885
		76035-9802	76035-9803	76035-9804	76035-9805	76035-9812	76035-9813
		76035-9814	76035-9815	76035-9822	76035-9823	76035-9824	76035-9825
		76035-9832	76035-9833	76035-9834	76035-9835	76035-9842	76035-9843
		76035-9844	76035-9845	76035-9852	76035-9853	76035-9854	76035-9855
		76035-9862	76035-9863	76035-9864	76035-9865	76035-9872	76035-9873
		76035-9874	76035-9875	76035-9882	76035-9883	76035-9884	76035-9885
	9	76035-4902	76035-4903	76035-4904	76035-4905	76035-4912	76035-4913
		76035-4914	76035-4915	76035-4922	76035-4923	76035-4924	76035-4925
		76035-4932	76035-4933	76035-4934	76035-4935	76035-4942	76035-4943
		76035-4944	76035-4945	76035-4952	76035-4953	76035-4954	76035-4955
		76035-4962	76035-4963	76035-4964	76035-4965	76035-4972	76035-4973
		76035-4974	76035-4975	76035-4982	76035-4983	76035-4984	76035-4985
		76035-5902	76035-5903	76035-5904	76035-5905	76035-5912	76035-5913
		76035-5914	76035-5915	76035-5922	76035-5923	76035-5924	76035-5925
		76035-5932	76035-5933	76035-5934	76035-5935	76035-5942	76035-5943
		76035-5944	76035-5945	76035-5952	76035-5953	76035-5954	76035-5955
		76035-5962	76035-5963	76035-5964	76035-5965	76035-5972	76035-5973
		76035-5974	76035-5975	76035-5982	76035-5983	76035-5984	76035-5985
		76035-8902	76035-8903	76035-8904	76035-8905	76035-8912	76035-8913
		76035-8914	76035-8915	76035-8922	76035-8923	76035-8924	76035-8925
		76035-8932	76035-8933	76035-8934	76035-8935	76035-8942	76035-8943
		76035-8944	76035-8945	76035-8952	76035-8953	76035-8954	76035-8955
		76035-8962	76035-8963	76035-8964	76035-8965	76035-8972	76035-8973
		76035-8974	76035-8975	76035-8982	76035-8983	76035-8984	76035-8985
		76035-9902	76035-9903	76035-9904	76035-9905	76035-9912	76035-9913
		76035-9914	76035-9915	76035-9922	76035-9923	76035-9924	76035-9925
	76035-9932	76035-9933	76035-9934	76035-9935	76035-9942	76035-9943	
	76035-9944	76035-9945	76035-9952	76035-9953	76035-9954	76035-9955	
76035-9962	76035-9963	76035-9964	76035-9965	76035-9972	76035-9973		
76035-9974	76035-9975	76035-9982	76035-9983	76035-9984	76035-9985		
10	76035-4102	76035-4103	76035-4104	76035-4105	76035-4112	76035-4113	
	76035-4114	76035-4115	76035-4122	76035-4123	76035-4124	76035-4125	
	76035-4132	76035-4133	76035-4134	76035-4135	76035-4142	76035-4143	
	76035-4144	76035-4145	76035-4152	76035-4153	76035-4154	76035-4155	
	76035-4162	76035-4163	76035-4164	76035-4165	76035-4172	76035-4173	
	76035-4174	76035-4175	76035-4182	76035-4183	76035-4184	76035-4185	
	76035-5102	76035-5103	76035-5104	76035-5105	76035-5112	76035-5113	
	76035-5114	76035-5115	76035-5122	76035-5123	76035-5124	76035-5125	
	76035-5132	76035-5133	76035-5134	76035-5135	76035-5142	76035-5143	
	76035-5144	76035-5145	76035-5152	76035-5153	76035-5154	76035-5155	
	76035-5162	76035-5163	76035-5164	76035-5165	76035-5172	76035-5173	
	76035-5174	76035-5175	76035-5182	76035-5183	76035-5184	76035-5185	
	76035-8102	76035-8103	76035-8104	76035-8105	76035-8112	76035-8113	
	76035-8114	76035-8115	76035-8122	76035-8123	76035-8124	76035-8125	
	76035-8132	76035-8133	76035-8134	76035-8135	76035-8142	76035-8143	
	76035-8144	76035-8145	76035-8152	76035-8153	76035-8154	76035-8155	
76035-8162	76035-8163	76035-8164	76035-8165	76035-8172	76035-8173		
76035-8174	76035-8175	76035-8182	76035-8183	760			

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
I-Trac™ 76035 Guided Right	10	76035-9102	76035-9103	76035-9104	76035-9105	76035-9112	76035-9113
		76035-9114	76035-9115	76035-9122	76035-9123	76035-9124	76035-9125
		76035-9132	76035-9133	76035-9134	76035-9135	76035-9142	76035-9143
		76035-9144	76035-9145	76035-9152	76035-9153	76035-9154	76035-9155
		76035-9162	76035-9163	76035-9164	76035-9165	76035-9172	76035-9173
		76035-9174	76035-9175	76035-9182	76035-9183	76035-9184	76035-9185
Impact™ 76055	8	76055-0803	76055-0804	76055-0805	76055-0806	76055-0807	76055-0808
		76055-0813	76055-0814	76055-0815	76055-0816	76055-0817	76055-0818
		76055-0823	76055-0824	76055-0825	76055-0826	76055-0827	76055-0828
		76055-0833	76055-0834	76055-0835	76055-0836	76055-0837	76055-0838
		76055-1803	76055-1804	76055-1805	76055-1806	76055-1807	76055-1808
		76055-1813	76055-1814	76055-1815	76055-1816	76055-1817	76055-1818
		76055-1823	76055-1824	76055-1825	76055-1826	76055-1827	76055-1828
		76055-1833	76055-1834	76055-1835	76055-1836	76055-1837	76055-1838
		76055-2803	76055-2804	76055-2805	76055-2806	76055-2807	76055-2808
		76055-2813	76055-2814	76055-2815	76055-2816	76055-2817	76055-2818
		76055-2823	76055-2824	76055-2825	76055-2826	76055-2827	76055-2828
		76055-2833	76055-2834	76055-2835	76055-2836	76055-2837	76055-2838
		76055-2843	76055-2844	76055-2845	76055-2846	76055-2847	76055-2848
		76055-2853	76055-2854	76055-2855	76055-2856	76055-2857	76055-2858
		76055-2863	76055-2864	76055-2865	76055-2866	76055-2867	76055-2868
		76055-2873	76055-2874	76055-2875	76055-2876	76055-2877	76055-2878
		76055-2883	76055-2884	76055-2885	76055-2886	76055-2887	76055-2888
		76055-3803	76055-3804	76055-3805	76055-3806	76055-3807	76055-3808
		76055-3813	76055-3814	76055-3815	76055-3816	76055-3817	76055-3818
		76055-3823	76055-3824	76055-3825	76055-3826	76055-3827	76055-3828
		76055-3833	76055-3834	76055-3835	76055-3836	76055-3837	76055-3838
		76055-3843	76055-3844	76055-3845	76055-3846	76055-3847	76055-3848
		76055-3853	76055-3854	76055-3855	76055-3856	76055-3857	76055-3858
		76055-3863	76055-3864	76055-3865	76055-3866	76055-3867	76055-3868
		76055-3873	76055-3874	76055-3875	76055-3876	76055-3877	76055-3878
		76055-3883	76055-3884	76055-3885	76055-3886	76055-3887	76055-3888
		76055-4803	76055-4804	76055-4805	76055-4806	76055-4807	76055-4808
		76055-4813	76055-4814	76055-4815	76055-4816	76055-4817	76055-4818
		76055-4823	76055-4824	76055-4825	76055-4826	76055-4827	76055-4828
		76055-4833	76055-4834	76055-4835	76055-4836	76055-4837	76055-4838
		76055-4843	76055-4844	76055-4845	76055-4846	76055-4847	76055-4848
		76055-4853	76055-4854	76055-4855	76055-4856	76055-4857	76055-4858
		76055-4863	76055-4864	76055-4865	76055-4866	76055-4867	76055-4868
		76055-4873	76055-4874	76055-4875	76055-4876	76055-4877	76055-4878
		76055-4883	76055-4884	76055-4885	76055-4886	76055-4887	76055-4888
		76055-5803	76055-5804	76055-5805	76055-5806	76055-5807	76055-5808
76055-5813	76055-5814	76055-5815	76055-5816	76055-5817	76055-5818		
76055-5823	76055-5824	76055-5825	76055-5826	76055-5827	76055-5828		
76055-5833	76055-5834	76055-5835	76055-5836	76055-5837	76055-5838		
76055-5843	76055-5844	76055-5845	76055-5846	76055-5847	76055-5848		
76055-5853	76055-5854	76055-5855	76055-5856	76055-5857	76055-5858		
76055-5863	76055-5864	76055-5865	76055-5866	76055-5867	76055-5868		
76055-5873	76055-5874	76055-5875	76055-5876	76055-5877	76055-5878		
76055-5883	76055-5884	76055-5885	76055-5886	76055-5887	76055-5888		
76055-6803	76055-6804	76055-6805	76055-6806	76055-6807	76055-6808		
76055-6813	76055-6814	76055-6815	76055-6816	76055-6817	76055-6818		
76055-6823	76055-6824	76055-6825	76055-6826	76055-6827	76055-6828		
76055-6833	76055-6834	76055-6835	76055-6836	76055-6837	76055-6838		
76055-6843	76055-6844	76055-6845	76055-6846	76055-6847	76055-6848		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	8	76055-6853	76055-6854	76055-6855	76055-6856	76055-6857	76055-6858
		76055-6863	76055-6864	76055-6865	76055-6866	76055-6867	76055-6868
		76055-6873	76055-6874	76055-6875	76055-6876	76055-6877	76055-6878
		76055-6883	76055-6884	76055-6885	76055-6886	76055-6887	76055-6888
		76055-7803	76055-7804	76055-7805	76055-7806	76055-7807	76055-7808
		76055-7813	76055-7814	76055-7815	76055-7816	76055-7817	76055-7818
		76055-7823	76055-7824	76055-7825	76055-7826	76055-7827	76055-7828
		76055-7833	76055-7834	76055-7835	76055-7836	76055-7837	76055-7838
		76055-7843	76055-7844	76055-7845	76055-7846	76055-7847	76055-7848
		76055-7853	76055-7854	76055-7855	76055-7856	76055-7857	76055-7858
		76055-7863	76055-7864	76055-7865	76055-7866	76055-7867	76055-7868
		76055-7873	76055-7874	76055-7875	76055-7876	76055-7877	76055-7878
		76055-7883	76055-7884	76055-7885	76055-7886	76055-7887	76055-7888
		76055-7803	76055-7804	76055-7805	76055-7806	76055-7807	76055-7808
		76055-7813	76055-7814	76055-7815	76055-7816	76055-7817	76055-7818
		76055-7823	76055-7824	76055-7825	76055-7826	76055-7827	76055-7828
		76055-7833	76055-7834	76055-7835	76055-7836	76055-7837	76055-7838
		76055-8803	76055-8804	76055-8805	76055-8806	76055-8807	76055-8808
		76055-8813	76055-8814	76055-8815	76055-8816	76055-8817	76055-8818
		76055-8823	76055-8824	76055-8825	76055-8826	76055-8827	76055-8828
		76055-8833	76055-8834	76055-8835	76055-8836	76055-8837	76055-8838
		76055-8843	76055-8844	76055-8845	76055-8846	76055-8847	76055-8848
		76055-8853	76055-8854	76055-8855	76055-8856	76055-8857	76055-8858
		76055-8863	76055-8864	76055-8865	76055-8866	76055-8867	76055-8868
		76055-8873	76055-8874	76055-8875	76055-8876	76055-8877	76055-8878
		76055-8883	76055-8884	76055-8885	76055-8886	76055-8887	76055-8888
		76055-9813	76055-9814	76055-9815	76055-9816	76055-9817	76055-9818
		76055-9823	76055-9824	76055-9825	76055-9826	76055-9827	76055-9828
		76055-9833	76055-9834	76055-9835	76055-9836	76055-9837	76055-9838
		76055-9843	76055-9844	76055-9845	76055-9846	76055-9847	76055-9848
		76055-9853	76055-9854	76055-9855	76055-9856	76055-9857	76055-9858
		76055-9863	76055-9864	76055-9865	76055-9866	76055-9867	76055-9868
	76055-9873	76055-9874	76055-9875	76055-9876	76055-9877	76055-9878	
	76055-9883	76055-9884	76055-9885	76055-9886	76055-9887	76055-9888	
	76055-9813	76055-9814	76055-9815	76055-9816	76055-9817	76055-9818	
	10	76055-0103	76055-0104	76055-0105	76055-0106	76055-0107	76055-0108
		76055-0113	76055-0114	76055-0115	76055-0116	76055-0117	76055-0118
		76055-0123	76055-0124	76055-0125	76055-0126	76055-0127	76055-0128
		76055-0133	76055-0134	76055-0135	76055-0136	76055-0137	76055-0138
		76055-1103	76055-1104	76055-1105	76055-1106	76055-1107	76055-1108
		76055-1113	76055-1114	76055-1115	76055-1116	76055-1117	76055-1118
		76055-1123	76055-1124	76055-1125	76055-1126	76055-1127	76055-1128
76055-1133		76055-1134	76055-1135	76055-1136	76055-1137	76055-1138	
76055-2103		76055-2104	76055-2105	76055-2106	76055-2107	76055-2108	
76055-2113		76055-2114	76055-2115	76055-2116	76055-2117	76055-2118	
76055-2123		76055-2124	76055-2125	76055-2126	76055-2127	76055-2128	
76055-2133		76055-2134	76055-2135	76055-2136	76055-2137	76055-2138	
76055-2143		76055-2144	76055-2145	76055-2146	76055-2147	76055-2148	
76055-2153		76055-2154	76055-2155	76055-2156	76055-2157	76055-2158	
76055-2163		76055-2164	76055-2165	76055-2166	76055-2167	76055-2168	
76055-2173		76055-2174	76055-2175	76055-2176	76055-2177	76055-2178	
76055-2183		76055-2184	76055-2185	76055-2186	76055-2187	76055-2188	
76055-3103		76055-3104	76055-3105	76055-3106	76055-3107	76055-3108	
76055-3113	76055-3114	76055-3115	76055-3116	76055-3117	76055-3118		
76055-3123	76055-3124	76055-3125	76055-3126	76055-3127	76055-3128		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	10	76055-3133	76055-3134	76055-3135	76055-3136	76055-3137	76055-3138
		76055-3143	76055-3144	76055-3145	76055-3146	76055-3147	76055-3148
		76055-3153	76055-3154	76055-3155	76055-3156	76055-3157	76055-3158
		76055-3163	76055-3164	76055-3165	76055-3166	76055-3167	76055-3168
		76055-3173	76055-3174	76055-3175	76055-3176	76055-3177	76055-3178
		76055-3183	76055-3184	76055-3185	76055-3186	76055-3187	76055-3188
		76055-4103	76055-4104	76055-4105	76055-4106	76055-4107	76055-4108
		76055-4113	76055-4114	76055-4115	76055-4116	76055-4117	76055-4118
		76055-4123	76055-4124	76055-4125	76055-4126	76055-4127	76055-4128
		76055-4133	76055-4134	76055-4135	76055-4136	76055-4137	76055-4138
		76055-4143	76055-4144	76055-4145	76055-4146	76055-4147	76055-4148
		76055-4153	76055-4154	76055-4155	76055-4156	76055-4157	76055-4158
		76055-4163	76055-4164	76055-4165	76055-4166	76055-4167	76055-4168
		76055-4173	76055-4174	76055-4175	76055-4176	76055-4177	76055-4178
		76055-4183	76055-4184	76055-4185	76055-4186	76055-4187	76055-4188
		76055-5103	76055-5104	76055-5105	76055-5106	76055-5107	76055-5108
		76055-5113	76055-5114	76055-5115	76055-5116	76055-5117	76055-5118
		76055-5123	76055-5124	76055-5125	76055-5126	76055-5127	76055-5128
		76055-5133	76055-5134	76055-5135	76055-5136	76055-5137	76055-5138
		76055-5143	76055-5144	76055-5145	76055-5146	76055-5147	76055-5148
		76055-5153	76055-5154	76055-5155	76055-5156	76055-5157	76055-5158
		76055-5163	76055-5164	76055-5165	76055-5166	76055-5167	76055-5168
		76055-5173	76055-5174	76055-5175	76055-5176	76055-5177	76055-5178
		76055-5183	76055-5184	76055-5185	76055-5186	76055-5187	76055-5188
		76055-6103	76055-6104	76055-6105	76055-6106	76055-6107	76055-6108
		76055-6113	76055-6114	76055-6115	76055-6116	76055-6117	76055-6118
		76055-6123	76055-6124	76055-6125	76055-6126	76055-6127	76055-6128
		76055-6133	76055-6134	76055-6135	76055-6136	76055-6137	76055-6138
		76055-6143	76055-6144	76055-6145	76055-6146	76055-6147	76055-6148
		76055-6153	76055-6154	76055-6155	76055-6156	76055-6157	76055-6158
		76055-6163	76055-6164	76055-6165	76055-6166	76055-6167	76055-6168
		76055-6173	76055-6174	76055-6175	76055-6176	76055-6177	76055-6178
		76055-6183	76055-6184	76055-6185	76055-6186	76055-6187	76055-6188
		76055-7103	76055-7104	76055-7105	76055-7106	76055-7107	76055-7108
		76055-7113	76055-7114	76055-7115	76055-7116	76055-7117	76055-7118
		76055-7123	76055-7124	76055-7125	76055-7126	76055-7127	76055-7128
		76055-7133	76055-7134	76055-7135	76055-7136	76055-7137	76055-7138
		76055-7143	76055-7144	76055-7145	76055-7146	76055-7147	76055-7148
		76055-7153	76055-7154	76055-7155	76055-7156	76055-7157	76055-7158
		76055-7163	76055-7164	76055-7165	76055-7166	76055-7167	76055-7168
		76055-7173	76055-7174	76055-7175	76055-7176	76055-7177	76055-7178
		76055-7183	76055-7184	76055-7185	76055-7186	76055-7187	76055-7188
		76055-8103	76055-8104	76055-8105	76055-8106	76055-8107	76055-8108
		76055-8113	76055-8114	76055-8115	76055-8116	76055-8117	76055-8118
76055-8123	76055-8124	76055-8125	76055-8126	76055-8127	76055-8128		
76055-8133	76055-8134	76055-8135	76055-8136	76055-8137	76055-8138		
76055-8143	76055-8144	76055-8145	76055-8146	76055-8147	76055-8148		
76055-8153	76055-8154	76055-8155	76055-8156	76055-8157	76055-8158		
76055-8163	76055-8164	76055-8165	76055-8166	76055-8167	76055-8168		
76055-8173	76055-8174	76055-8175	76055-8176	76055-8177	76055-8178		
76055-8183	76055-8184	76055-8185	76055-8186	76055-8187	76055-8188		
76055-9103	76055-9104	76055-9105	76055-9106	76055-9107	76055-9108		
76055-9113	76055-9114	76055-9115	76055-9116	76055-9117	76055-9118		
76055-9123	76055-9124	76055-9125	76055-9126	76055-9127	76055-9128		
76055-9133	76055-9134	76055-9135	76055-9136	76055-9137	76055-9138		
76055-9143	76055-9144	76055-9145	76055-9146	76055-9147	76055-9148		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	10	76055-9153	76055-9154	76055-9155	76055-9156	76055-9157	76055-9158
		76055-9163	76055-9164	76055-9165	76055-9166	76055-9167	76055-9168
		76055-9173	76055-9174	76055-9175	76055-9176	76055-9177	76055-9178
		76055-9183	76055-9184	76055-9185	76055-9186	76055-9187	76055-9188
	12	76055-0203	76055-0204	76055-0205	76055-0206	76055-0207	76055-0208
		76055-0213	76055-0214	76055-0215	76055-0216	76055-0217	76055-0218
		76055-0223	76055-0224	76055-0225	76055-0226	76055-0227	76055-0228
		76055-0233	76055-0234	76055-0235	76055-0236	76055-0237	76055-0238
		76055-1203	76055-1204	76055-1205	76055-1206	76055-1207	76055-1208
		76055-1213	76055-1214	76055-1215	76055-1216	76055-1217	76055-1218
		76055-1223	76055-1224	76055-1225	76055-1226	76055-1227	76055-1228
		76055-1233	76055-1234	76055-1235	76055-1236	76055-1237	76055-1238
		76055-2203	76055-2204	76055-2205	76055-2206	76055-2207	76055-2208
		76055-2213	76055-2214	76055-2215	76055-2216	76055-2217	76055-2218
		76055-2223	76055-2224	76055-2225	76055-2226	76055-2227	76055-2228
		76055-2233	76055-2234	76055-2235	76055-2236	76055-2237	76055-2238
		76055-2243	76055-2244	76055-2245	76055-2246	76055-2247	76055-2248
		76055-2253	76055-2254	76055-2255	76055-2256	76055-2257	76055-2258
		76055-2263	76055-2264	76055-2265	76055-2266	76055-2267	76055-2268
		76055-2273	76055-2274	76055-2275	76055-2276	76055-2277	76055-2278
		76055-2283	76055-2284	76055-2285	76055-2286	76055-2287	76055-2288
		76055-3203	76055-3204	76055-3205	76055-3206	76055-3207	76055-3208
		76055-3213	76055-3214	76055-3215	76055-3216	76055-3217	76055-3218
		76055-3223	76055-3224	76055-3225	76055-3226	76055-3227	76055-3228
		76055-3233	76055-3234	76055-3235	76055-3236	76055-3237	76055-3238
		76055-3243	76055-3244	76055-3245	76055-3246	76055-3247	76055-3248
		76055-3253	76055-3254	76055-3255	76055-3256	76055-3257	76055-3258
		76055-3263	76055-3264	76055-3265	76055-3266	76055-3267	76055-3268
		76055-3273	76055-3274	76055-3275	76055-3276	76055-3277	76055-3278
		76055-3283	76055-3284	76055-3285	76055-3286	76055-3287	76055-3288
		76055-4203	76055-4204	76055-4205	76055-4206	76055-4207	76055-4208
		76055-4213	76055-4214	76055-4215	76055-4216	76055-4217	76055-4218
		76055-4223	76055-4224	76055-4225	76055-4226	76055-4227	76055-4228
		76055-4233	76055-4234	76055-4235	76055-4236	76055-4237	76055-4238
		76055-4243	76055-4244	76055-4245	76055-4246	76055-4247	76055-4248
		76055-4253	76055-4254	76055-4255	76055-4256	76055-4257	76055-4258
		76055-4263	76055-4264	76055-4265	76055-4266	76055-4267	76055-4268
		76055-4273	76055-4274	76055-4275	76055-4276	76055-4277	76055-4278
		76055-4283	76055-4284	76055-4285	76055-4286	76055-4287	76055-4288
		76055-5203	76055-5204	76055-5205	76055-5206	76055-5207	76055-5208
		76055-5213	76055-5214	76055-5215	76055-5216	76055-5217	76055-5218
		76055-5223	76055-5224	76055-5225	76055-5226	76055-5227	76055-5228
		76055-5233	76055-5234	76055-5235	76055-5236	76055-5237	76055-5238
		76055-5243	76055-5244	76055-5245	76055-5246	76055-5247	76055-5248
76055-5253	76055-5254	76055-5255	76055-5256	76055-5257	76055-5258		
76055-5263	76055-5264	76055-5265	76055-5266	76055-5267	76055-5268		
76055-5273	76055-5274	76055-5275	76055-5276	76055-5277	76055-5278		
76055-5283	76055-5284	76055-5285	76055-5286	76055-5287	76055-5288		
76055-6203	76055-6204	76055-6205	76055-6206	76055-6207	76055-6208		
76055-6213	76055-6214	76055-6215	76055-6216	76055-6217	76055-6218		
76055-6223	76055-6224	76055-6225	76055-6226	76055-6227	76055-6228		
76055-6233	76055-6234	76055-6235	76055-6236	76055-6237	76055-6238		
76055-6243	76055-6244	76055-6245	76055-6246	76055-6247	76055-6248		
76055-6253	76055-6254	76055-6255	76055-6256	76055-6257	76055-6258		
76055-6263	76055-6264	76055-6265	76055-6266	76055-6267	76055-6268		
76055-6273	76055-6274	76055-6275	76055-6276	76055-6277	76055-6278		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	12	76055-6283	76055-6284	76055-6285	76055-6286	76055-6287	76055-6288
		76055-7203	76055-7204	76055-7205	76055-7206	76055-7207	76055-7208
		76055-7213	76055-7214	76055-7215	76055-7216	76055-7217	76055-7218
		76055-7223	76055-7224	76055-7225	76055-7226	76055-7227	76055-7228
		76055-7233	76055-7234	76055-7235	76055-7236	76055-7237	76055-7238
		76055-7243	76055-7244	76055-7245	76055-7246	76055-7247	76055-7248
		76055-7253	76055-7254	76055-7255	76055-7256	76055-7257	76055-7258
		76055-7263	76055-7264	76055-7265	76055-7266	76055-7267	76055-7268
		76055-7273	76055-7274	76055-7275	76055-7276	76055-7277	76055-7278
		76055-7283	76055-7284	76055-7285	76055-7286	76055-7287	76055-7288
		76055-8203	76055-8204	76055-8205	76055-8206	76055-8207	76055-8208
		76055-8213	76055-8214	76055-8215	76055-8216	76055-8217	76055-8218
		76055-8223	76055-8224	76055-8225	76055-8226	76055-8227	76055-8228
		76055-8233	76055-8234	76055-8235	76055-8236	76055-8237	76055-8238
		76055-8243	76055-8244	76055-8245	76055-8246	76055-8247	76055-8248
		76055-8253	76055-8254	76055-8255	76055-8256	76055-8257	76055-8258
		76055-8263	76055-8264	76055-8265	76055-8266	76055-8267	76055-8268
		76055-8273	76055-8274	76055-8275	76055-8276	76055-8277	76055-8278
		76055-8283	76055-8284	76055-8285	76055-8286	76055-8287	76055-8288
		76055-9203	76055-9204	76055-9205	76055-9206	76055-9207	76055-9208
		76055-9213	76055-9214	76055-9215	76055-9216	76055-9217	76055-9218
		76055-9223	76055-9224	76055-9225	76055-9226	76055-9227	76055-9228
		76055-9233	76055-9234	76055-9235	76055-9236	76055-9237	76055-9238
		76055-9243	76055-9244	76055-9245	76055-9246	76055-9247	76055-9248
		76055-9253	76055-9254	76055-9255	76055-9256	76055-9257	76055-9258
		76055-9263	76055-9264	76055-9265	76055-9266	76055-9267	76055-9268
		76055-9273	76055-9274	76055-9275	76055-9276	76055-9277	76055-9278
		76055-9283	76055-9284	76055-9285	76055-9286	76055-9287	76055-9288
	14	76055-0703	76055-0704	76055-0705	76055-0706	76055-0707	76055-0708
		76055-0713	76055-0714	76055-0715	76055-0716	76055-0717	76055-0718
		76055-0723	76055-0724	76055-0725	76055-0726	76055-0727	76055-0728
		76055-0733	76055-0734	76055-0735	76055-0736	76055-0737	76055-0738
		76055-1703	76055-1704	76055-1705	76055-1706	76055-1707	76055-1708
		76055-1713	76055-1714	76055-1715	76055-1716	76055-1717	76055-1718
		76055-1723	76055-1724	76055-1725	76055-1726	76055-1727	76055-1728
		76055-1733	76055-1734	76055-1735	76055-1736	76055-1737	76055-1738
76055-2703		76055-2704	76055-2705	76055-2706	76055-2707	76055-2708	
76055-2713		76055-2714	76055-2715	76055-2716	76055-2717	76055-2718	
76055-2723		76055-2724	76055-2725	76055-2726	76055-2727	76055-2728	
76055-2733		76055-2734	76055-2735	76055-2736	76055-2737	76055-2738	
76055-2743		76055-2744	76055-2745	76055-2746	76055-2747	76055-2748	
76055-2753		76055-2754	76055-2755	76055-2756	76055-2757	76055-2758	
76055-2763		76055-2764	76055-2765	76055-2766	76055-2767	76055-2768	
76055-2773		76055-2774	76055-2775	76055-2776	76055-2777	76055-2778	
76055-2783		76055-2784	76055-2785	76055-2786	76055-2787	76055-2788	
76055-2703		76055-2704	76055-2705	76055-2706	76055-2707	76055-2708	
76055-3703		76055-3704	76055-3705	76055-3706	76055-3707	76055-3708	
76055-3713		76055-3714	76055-3715	76055-3716	76055-3717	76055-3718	
76055-3723		76055-3724	76055-3725	76055-3726	76055-3727	76055-3728	
76055-3733		76055-3734	76055-3735	76055-3736	76055-3737	76055-3738	
76055-3743		76055-3744	76055-3745	76055-3746	76055-3747	76055-3748	
76055-3753		76055-3754	76055-3755	76055-3756	76055-3757	76055-3758	
76055-3763		76055-3764	76055-3765	76055-3766	76055-3767	76055-3768	
76055-3773		76055-3774	76055-3775	76055-3776	76055-3777	76055-3778	
76055-3783		76055-3784	76055-3785	76055-3786	76055-3787	76055-3788	
76055-4703		76055-4704	76055-4705	76055-4706	76055-4707	76055-4708	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	14	76055-4713	76055-4714	76055-4715	76055-4716	76055-4717	76055-4718
		76055-4723	76055-4724	76055-4725	76055-4726	76055-4727	76055-4728
		76055-4733	76055-4734	76055-4735	76055-4736	76055-4737	76055-4738
		76055-4743	76055-4744	76055-4745	76055-4746	76055-4747	76055-4748
		76055-4753	76055-4754	76055-4755	76055-4756	76055-4757	76055-4758
		76055-4763	76055-4764	76055-4765	76055-4766	76055-4767	76055-4768
		76055-4773	76055-4774	76055-4775	76055-4776	76055-4777	76055-4778
		76055-4783	76055-4784	76055-4785	76055-4786	76055-4787	76055-4788
		76055-4703	76055-4704	76055-4705	76055-4706	76055-4707	76055-4708
		76055-5703	76055-5704	76055-5705	76055-5706	76055-5707	76055-5708
		76055-5713	76055-5714	76055-5715	76055-5716	76055-5717	76055-5718
		76055-5723	76055-5724	76055-5725	76055-5726	76055-5727	76055-5728
		76055-5733	76055-5734	76055-5735	76055-5736	76055-5737	76055-5738
		76055-5743	76055-5744	76055-5745	76055-5746	76055-5747	76055-5748
		76055-5753	76055-5754	76055-5755	76055-5756	76055-5757	76055-5758
		76055-5763	76055-5764	76055-5765	76055-5766	76055-5767	76055-5768
		76055-5773	76055-5774	76055-5775	76055-5776	76055-5777	76055-5778
		76055-5783	76055-5784	76055-5785	76055-5786	76055-5787	76055-5788
		76055-6703	76055-6704	76055-6705	76055-6706	76055-6707	76055-6708
		76055-6713	76055-6714	76055-6715	76055-6716	76055-6717	76055-6718
		76055-6723	76055-6724	76055-6725	76055-6726	76055-6727	76055-6728
		76055-6733	76055-6734	76055-6735	76055-6736	76055-6737	76055-6738
		76055-6743	76055-6744	76055-6745	76055-6746	76055-6747	76055-6748
		76055-6753	76055-6754	76055-6755	76055-6756	76055-6757	76055-6758
		76055-6763	76055-6764	76055-6765	76055-6766	76055-6767	76055-6768
		76055-6773	76055-6774	76055-6775	76055-6776	76055-6777	76055-6778
		76055-6783	76055-6784	76055-6785	76055-6786	76055-6787	76055-6788
		76055-7703	76055-7704	76055-7705	76055-7706	76055-7707	76055-7708
		76055-7713	76055-7714	76055-7715	76055-7716	76055-7717	76055-7718
		76055-7723	76055-7724	76055-7725	76055-7726	76055-7727	76055-7728
		76055-7733	76055-7734	76055-7735	76055-7736	76055-7737	76055-7738
		76055-7743	76055-7744	76055-7745	76055-7746	76055-7747	76055-7748
		76055-7753	76055-7754	76055-7755	76055-7756	76055-7757	76055-7758
		76055-7763	76055-7764	76055-7765	76055-7766	76055-7767	76055-7768
		76055-7773	76055-7774	76055-7775	76055-7776	76055-7777	76055-7778
		76055-7783	76055-7784	76055-7785	76055-7786	76055-7787	76055-7788
		76055-8703	76055-8704	76055-8705	76055-8706	76055-8707	76055-8708
		76055-8713	76055-8714	76055-8715	76055-8716	76055-8717	76055-8718
		76055-8723	76055-8724	76055-8725	76055-8726	76055-8727	76055-8728
		76055-8733	76055-8734	76055-8735	76055-8736	76055-8737	76055-8738
		76055-8743	76055-8744	76055-8745	76055-8746	76055-8747	76055-8748
		76055-8753	76055-8754	76055-8755	76055-8756	76055-8757	76055-8758
		76055-8763	76055-8764	76055-8765	76055-8766	76055-8767	76055-8768
		76055-8773	76055-8774	76055-8775	76055-8776	76055-8777	76055-8778
		76055-8783	76055-8784	76055-8785	76055-8786	76055-8787	76055-8788
		76055-9703	76055-9704	76055-9705	76055-9706	76055-9707	76055-9708
		76055-9713	76055-9714	76055-9715	76055-9716	76055-9717	76055-9718
	76055-9723	76055-9724	76055-9725	76055-9726	76055-9727	76055-9728	
76055-9733	76055-9734	76055-9735	76055-9736	76055-9737	76055-9738		
76055-9743	76055-9744	76055-9745	76055-9746	76055-9747	76055-9748		
76055-9753	76055-9754	76055-9755	76055-9756	76055-9757	76055-9758		
76055-9763	76055-9764	76055-9765	76055-9766	76055-9767	76055-9768		
76055-9773	76055-9774	76055-9775	76055-9776	76055-9777	76055-9778		
76055-9783	76055-9784	76055-9785	76055-9786	76055-9787	76055-9788		
16	76055-0603	76055-0604	76055-0605	76055-0606	76055-0607	76055-0608	
	76055-0613	76055-0614	76055-0615	76055-0616	76055-0617	76055-0618	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76055	16	76055-0623	76055-0624	76055-0625	76055-0626	76055-0627	76055-0628
		76055-0633	76055-0634	76055-0635	76055-0636	76055-0637	76055-0638
		76055-1603	76055-1604	76055-1605	76055-1606	76055-1607	76055-1608
		76055-1613	76055-1614	76055-1615	76055-1616	76055-1617	76055-1618
		76055-1623	76055-1624	76055-1625	76055-1626	76055-1627	76055-1628
		76055-1633	76055-1634	76055-1635	76055-1636	76055-1637	76055-1638
		76055-2603	76055-2604	76055-2605	76055-2606	76055-2607	76055-2608
		76055-2613	76055-2614	76055-2615	76055-2616	76055-2617	76055-2618
		76055-2623	76055-2624	76055-2625	76055-2626	76055-2627	76055-2628
		76055-2633	76055-2634	76055-2635	76055-2636	76055-2637	76055-2638
		76055-2643	76055-2644	76055-2645	76055-2646	76055-2647	76055-2648
		76055-2653	76055-2654	76055-2655	76055-2656	76055-2657	76055-2658
		76055-2663	76055-2664	76055-2665	76055-2666	76055-2667	76055-2668
		76055-2673	76055-2674	76055-2675	76055-2676	76055-2677	76055-2678
		76055-2683	76055-2684	76055-2685	76055-2686	76055-2687	76055-2688
		76055-3603	76055-3604	76055-3605	76055-3606	76055-3607	76055-3608
		76055-3613	76055-3614	76055-3615	76055-3616	76055-3617	76055-3618
		76055-3623	76055-3624	76055-3625	76055-3626	76055-3627	76055-3628
		76055-3633	76055-3634	76055-3635	76055-3636	76055-3637	76055-3638
		76055-3643	76055-3644	76055-3645	76055-3646	76055-3647	76055-3648
		76055-3653	76055-3654	76055-3655	76055-3656	76055-3657	76055-3658
		76055-3663	76055-3664	76055-3665	76055-3666	76055-3667	76055-3668
		76055-3673	76055-3674	76055-3675	76055-3676	76055-3677	76055-3678
		76055-3683	76055-3684	76055-3685	76055-3686	76055-3687	76055-3688
		76055-4603	76055-4604	76055-4605	76055-4606	76055-4607	76055-4608
		76055-4613	76055-4614	76055-4615	76055-4616	76055-4617	76055-4618
		76055-4623	76055-4624	76055-4625	76055-4626	76055-4627	76055-4628
		76055-4633	76055-4634	76055-4635	76055-4636	76055-4637	76055-4638
		76055-4643	76055-4644	76055-4645	76055-4646	76055-4647	76055-4648
		76055-4653	76055-4654	76055-4655	76055-4656	76055-4657	76055-4658
		76055-4663	76055-4664	76055-4665	76055-4666	76055-4667	76055-4668
		76055-4673	76055-4674	76055-4675	76055-4676	76055-4677	76055-4678
		76055-4683	76055-4684	76055-4685	76055-4686	76055-4687	76055-4688
		76055-5603	76055-5604	76055-5605	76055-5606	76055-5607	76055-5608
		76055-5613	76055-5614	76055-5615	76055-5616	76055-5617	76055-5618
		76055-5623	76055-5624	76055-5625	76055-5626	76055-5627	76055-5628
		76055-5633	76055-5634	76055-5635	76055-5636	76055-5637	76055-5638
		76055-5643	76055-5644	76055-5645	76055-5646	76055-5647	76055-5648
		76055-5653	76055-5654	76055-5655	76055-5656	76055-5657	76055-5658
		76055-5663	76055-5664	76055-5665	76055-5666	76055-5667	76055-5668
		76055-5673	76055-5674	76055-5675	76055-5676	76055-5677	76055-5678
		76055-5683	76055-5684	76055-5685	76055-5686	76055-5687	76055-5688
		76055-6603	76055-6604	76055-6605	76055-6606	76055-6607	76055-6608
		76055-6613	76055-6614	76055-6615	76055-6616	76055-6617	76055-6618
		76055-6623	76055-6624	76055-6625	76055-6626	76055-6627	76055-6628
		76055-6633	76055-6634	76055-6635	76055-6636	76055-6637	76055-6638
		76055-6643	76055-6644	76055-6645	76055-6646	76055-6647	76055-6648
		76055-6653	76055-6654	76055-6655	76055-6656	76055-6657	76055-6658
76055-6663	76055-6664	76055-6665	76055-6666	76055-6667	76055-6668		
76055-6673	76055-6674	76055-6675	76055-6676	76055-6677	76055-6678		
76055-6683	76055-6684	76055-6685	76055-6686	76055-6687	76055-6688		
76055-7603	76055-7604	76055-7605	76055-7606	76055-7607	76055-7608		
76055-7613	76055-7614	76055-7615	76055-7616	76055-7617	76055-7618		
76055-7623	76055-7624	76055-7625	76055-7626	76055-7627	76055-7628		
76055-7633	76055-7634	76055-7635	76055-7636	76055-7637	76055-7638		
76055-7643	76055-7644	76055-7645	76055-7646	76055-7647	76055-7648		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76145	16	76055-7653	76055-7654	76055-7655	76055-7656	76055-7657	76055-7658
		76055-7663	76055-7664	76055-7665	76055-7666	76055-7667	76055-7668
		76055-7673	76055-7674	76055-7675	76055-7676	76055-7677	76055-7678
		76055-7683	76055-7684	76055-7685	76055-7686	76055-7687	76055-7688
		76055-8603	76055-8604	76055-8605	76055-8606	76055-8607	76055-8608
		76055-8613	76055-8614	76055-8615	76055-8616	76055-8617	76055-8618
		76055-8623	76055-8624	76055-8625	76055-8626	76055-8627	76055-8628
		76055-8633	76055-8634	76055-8635	76055-8636	76055-8637	76055-8638
		76055-8643	76055-8644	76055-8645	76055-8646	76055-8647	76055-8648
		76055-8653	76055-8654	76055-8655	76055-8656	76055-8657	76055-8658
		76055-8663	76055-8664	76055-8665	76055-8666	76055-8667	76055-8668
		76055-8673	76055-8674	76055-8675	76055-8676	76055-8677	76055-8678
		76055-8683	76055-8684	76055-8685	76055-8686	76055-8687	76055-8688
		76055-9603	76055-9604	76055-9605	76055-9606	76055-9607	76055-9608
		76055-9613	76055-9614	76055-9615	76055-9616	76055-9617	76055-9618
		76055-9623	76055-9624	76055-9625	76055-9626	76055-9627	76055-9628
	76055-9633	76055-9634	76055-9635	76055-9636	76055-9637	76055-9638	
	76055-9643	76055-9644	76055-9645	76055-9646	76055-9647	76055-9648	
	76055-9653	76055-9654	76055-9655	76055-9656	76055-9657	76055-9658	
	76055-9663	76055-9664	76055-9665	76055-9666	76055-9667	76055-9668	
	76055-9673	76055-9674	76055-9675	76055-9676	76055-9677	76055-9678	
	76055-9683	76055-9684	76055-9685	76055-9686	76055-9687	76055-9688	
	10	76145-0103	76145-0104	76145-0105	76145-0106	76145-0107	76145-0108
		76145-0113	76145-0114	76145-0115	76145-0116	76145-0117	76145-0118
		76145-0123	76145-0124	76145-0125	76145-0126	76145-0127	76145-0128
		76145-0133	76145-0134	76145-0135	76145-0136	76145-0137	76145-0138
		76145-1103	76145-1104	76145-1105	76145-1106	76145-1107	76145-1108
		76145-1113	76145-1114	76145-1115	76145-1116	76145-1117	76145-1118
		76145-1123	76145-1124	76145-1125	76145-1126	76145-1127	76145-1128
		76145-1133	76145-1134	76145-1135	76145-1136	76145-1137	76145-1138
		76145-2103	76145-2104	76145-2105	76145-2106	76145-2107	76145-2108
		76145-2113	76145-2114	76145-2115	76145-2116	76145-2117	76145-2118
		76145-2123	76145-2124	76145-2125	76145-2126	76145-2127	76145-2128
		76145-2133	76145-2134	76145-2135	76145-2136	76145-2137	76145-2138
		76145-2143	76145-2144	76145-2145	76145-2146	76145-2147	76145-2148
		76145-2153	76145-2154	76145-2155	76145-2156	76145-2157	76145-2158
76145-2163		76145-2164	76145-2165	76145-2166	76145-2167	76145-2168	
76145-2173		76145-2174	76145-2175	76145-2176	76145-2177	76145-2178	
76145-2183		76145-2184	76145-2185	76145-2186	76145-2187	76145-2188	
76145-3103		76145-3104	76145-3105	76145-3106	76145-3107	76145-3108	
76145-3113		76145-3114	76145-3115	76145-3116	76145-3117	76145-3118	
76145-3123		76145-3124	76145-3125	76145-3126	76145-3127	76145-3128	
76145-3133		76145-3134	76145-3135	76145-3136	76145-3137	76145-3138	
76145-3143		76145-3144	76145-3145	76145-3146	76145-3147	76145-3148	
76145-3153		76145-3154	76145-3155	76145-3156	76145-3157	76145-3158	
76145-3163		76145-3164	76145-3165	76145-3166	76145-3167	76145-3168	
76145-3173		76145-3174	76145-3175	76145-3176	76145-3177	76145-3178	
76145-3183		76145-3184	76145-3185	76145-3186	76145-3187	76145-3188	
76145-4103		76145-4104	76145-4105	76145-4106	76145-4107	76145-4108	
76145-4113		76145-4114	76145-4115	76145-4116	76145-4117	76145-4118	
76145-4123	76145-4124	76145-4125	76145-4126	76145-4127	76145-4128		
76145-4133	76145-4134	76145-4135	76145-4136	76145-4137	76145-4138		
76145-4143	76145-4144	76145-4145	76145-4146	76145-4147	76145-4148		
76145-4153	76145-4154	76145-4155	76145-4156	76145-4157	76145-4158		
76145-4163	76145-4164	76145-4165	76145-4166	76145-4167	76145-4168		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76145	10	76145-4173	76145-4174	76145-4175	76145-4176	76145-4177	76145-4178
		76145-4183	76145-4184	76145-4185	76145-4186	76145-4187	76145-4188
		76145-5103	76145-5104	76145-5105	76145-5106	76145-5107	76145-5108
		76145-5113	76145-5114	76145-5115	76145-5116	76145-5117	76145-5118
		76145-5123	76145-5124	76145-5125	76145-5126	76145-5127	76145-5128
		76145-5133	76145-5134	76145-5135	76145-5136	76145-5137	76145-5138
		76145-5143	76145-5144	76145-5145	76145-5146	76145-5147	76145-5148
		76145-5153	76145-5154	76145-5155	76145-5156	76145-5157	76145-5158
		76145-5163	76145-5164	76145-5165	76145-5166	76145-5167	76145-5168
		76145-5173	76145-5174	76145-5175	76145-5176	76145-5177	76145-5178
		76145-5183	76145-5184	76145-5185	76145-5186	76145-5187	76145-5188
		76145-6103	76145-6104	76145-6105	76145-6106	76145-6107	76145-6108
		76145-6113	76145-6114	76145-6115	76145-6116	76145-6117	76145-6118
		76145-6123	76145-6124	76145-6125	76145-6126	76145-6127	76145-6128
		76145-6133	76145-6134	76145-6135	76145-6136	76145-6137	76145-6138
		76145-6143	76145-6144	76145-6145	76145-6146	76145-6147	76145-6148
		76145-6153	76145-6154	76145-6155	76145-6156	76145-6157	76145-6158
		76145-6163	76145-6164	76145-6165	76145-6166	76145-6167	76145-6168
		76145-6173	76145-6174	76145-6175	76145-6176	76145-6177	76145-6178
		76145-6183	76145-6184	76145-6185	76145-6186	76145-6187	76145-6188
		76145-7103	76145-7104	76145-7105	76145-7106	76145-7107	76145-7108
		76145-7113	76145-7114	76145-7115	76145-7116	76145-7117	76145-7118
		76145-7123	76145-7124	76145-7125	76145-7126	76145-7127	76145-7128
		76145-7133	76145-7134	76145-7135	76145-7136	76145-7137	76145-7138
		76145-7143	76145-7144	76145-7145	76145-7146	76145-7147	76145-7148
		76145-7153	76145-7154	76145-7155	76145-7156	76145-7157	76145-7158
		76145-7163	76145-7164	76145-7165	76145-7166	76145-7167	76145-7168
		76145-7173	76145-7174	76145-7175	76145-7176	76145-7177	76145-7178
		76145-7183	76145-7184	76145-7185	76145-7186	76145-7187	76145-7188
		76145-8103	76145-8104	76145-8105	76145-8106	76145-8107	76145-8108
		76145-8113	76145-8114	76145-8115	76145-8116	76145-8117	76145-8118
		76145-8123	76145-8124	76145-8125	76145-8126	76145-8127	76145-8128
		76145-8133	76145-8134	76145-8135	76145-8136	76145-8137	76145-8138
		76145-8143	76145-8144	76145-8145	76145-8146	76145-8147	76145-8148
		76145-8153	76145-8154	76145-8155	76145-8156	76145-8157	76145-8158
		76145-8163	76145-8164	76145-8165	76145-8166	76145-8167	76145-8168
		76145-8173	76145-8174	76145-8175	76145-8176	76145-8177	76145-8178
		76145-8183	76145-8184	76145-8185	76145-8186	76145-8187	76145-8188
		76145-9103	76145-9104	76145-9105	76145-9106	76145-9107	76145-9108
		76145-9113	76145-9114	76145-9115	76145-9116	76145-9117	76145-9118
		76145-9123	76145-9124	76145-9125	76145-9126	76145-9127	76145-9128
		76145-9133	76145-9134	76145-9135	76145-9136	76145-9137	76145-9138
76145-9143	76145-9144	76145-9145	76145-9146	76145-9147	76145-9148		
76145-9153	76145-9154	76145-9155	76145-9156	76145-9157	76145-9158		
76145-9163	76145-9164	76145-9165	76145-9166	76145-9167	76145-9168		
76145-9173	76145-9174	76145-9175	76145-9176	76145-9177	76145-9178		
76145-9183	76145-9184	76145-9185	76145-9186	76145-9187	76145-9188		
14	76145-0703	76145-0704	76145-0705	76145-0706	76145-0707	76145-0708	
	76145-0713	76145-0714	76145-0715	76145-0716	76145-0717	76145-0718	
	76145-0723	76145-0724	76145-0725	76145-0726	76145-0727	76145-0728	
	76145-0733	76145-0734	76145-0735	76145-0736	76145-0737	76145-0738	
	76145-1703	76145-1704	76145-1705	76145-1706	76145-1707	76145-1708	
	76145-1713	76145-1714	76145-1715	76145-1716	76145-1717	76145-1718	
	76145-1723	76145-1724	76145-1725	76145-1726	76145-1727	76145-1728	
76145-1733	76145-1734	76145-1735	76145-1736	76145-1737	76145-1738		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76145	14	76145-2703	76145-2704	76145-2705	76145-2706	76145-2707	76145-2708
		76145-2713	76145-2714	76145-2715	76145-2716	76145-2717	76145-2718
		76145-2723	76145-2724	76145-2725	76145-2726	76145-2727	76145-2728
		76145-2733	76145-2734	76145-2735	76145-2736	76145-2737	76145-2738
		76145-2743	76145-2744	76145-2745	76145-2746	76145-2747	76145-2748
		76145-2753	76145-2754	76145-2755	76145-2756	76145-2757	76145-2758
		76145-2763	76145-2764	76145-2765	76145-2766	76145-2767	76145-2768
		76145-2773	76145-2774	76145-2775	76145-2776	76145-2777	76145-2778
		76145-2783	76145-2784	76145-2785	76145-2786	76145-2787	76145-2788
		76145-3703	76145-3704	76145-3705	76145-3706	76145-3707	76145-3708
		76145-3713	76145-3714	76145-3715	76145-3716	76145-3717	76145-3718
		76145-3723	76145-3724	76145-3725	76145-3726	76145-3727	76145-3728
		76145-3733	76145-3734	76145-3735	76145-3736	76145-3737	76145-3738
		76145-3743	76145-3744	76145-3745	76145-3746	76145-3747	76145-3748
		76145-3753	76145-3754	76145-3755	76145-3756	76145-3757	76145-3758
		76145-3763	76145-3764	76145-3765	76145-3766	76145-3767	76145-3768
		76145-3773	76145-3774	76145-3775	76145-3776	76145-3777	76145-3778
		76145-3783	76145-3784	76145-3785	76145-3786	76145-3787	76145-3788
		76145-4703	76145-4704	76145-4705	76145-4706	76145-4707	76145-4708
		76145-4713	76145-4714	76145-4715	76145-4716	76145-4717	76145-4718
		76145-4723	76145-4724	76145-4725	76145-4726	76145-4727	76145-4728
		76145-4733	76145-4734	76145-4735	76145-4736	76145-4737	76145-4738
		76145-4743	76145-4744	76145-4745	76145-4746	76145-4747	76145-4748
		76145-4753	76145-4754	76145-4755	76145-4756	76145-4757	76145-4758
		76145-4763	76145-4764	76145-4765	76145-4766	76145-4767	76145-4768
		76145-4773	76145-4774	76145-4775	76145-4776	76145-4777	76145-4778
		76145-4783	76145-4784	76145-4785	76145-4786	76145-4787	76145-4788
		76145-5703	76145-5704	76145-5705	76145-5706	76145-5707	76145-5708
		76145-5713	76145-5714	76145-5715	76145-5716	76145-5717	76145-5718
		76145-5723	76145-5724	76145-5725	76145-5726	76145-5727	76145-5728
		76145-5733	76145-5734	76145-5735	76145-5736	76145-5737	76145-5738
		76145-5743	76145-5744	76145-5745	76145-5746	76145-5747	76145-5748
		76145-5753	76145-5754	76145-5755	76145-5756	76145-5757	76145-5758
		76145-5763	76145-5764	76145-5765	76145-5766	76145-5767	76145-5768
		76145-5773	76145-5774	76145-5775	76145-5776	76145-5777	76145-5778
		76145-5783	76145-5784	76145-5785	76145-5786	76145-5787	76145-5788
		76145-6703	76145-6704	76145-6705	76145-6706	76145-6707	76145-6708
		76145-6713	76145-6714	76145-6715	76145-6716	76145-6717	76145-6718
		76145-6723	76145-6724	76145-6725	76145-6726	76145-6727	76145-6728
		76145-6733	76145-6734	76145-6735	76145-6736	76145-6737	76145-6738
		76145-6743	76145-6744	76145-6745	76145-6746	76145-6747	76145-6748
		76145-6753	76145-6754	76145-6755	76145-6756	76145-6757	76145-6758
		76145-6763	76145-6764	76145-6765	76145-6766	76145-6767	76145-6768
		76145-6773	76145-6774	76145-6775	76145-6776	76145-6777	76145-6778
		76145-6783	76145-6784	76145-6785	76145-6786	76145-6787	76145-6788
		76145-7703	76145-7704	76145-7705	76145-7706	76145-7707	76145-7708
		76145-7713	76145-7714	76145-7715	76145-7716	76145-7717	76145-7718
		76145-7723	76145-7724	76145-7725	76145-7726	76145-7727	76145-7728
76145-7733	76145-7734	76145-7735	76145-7736	76145-7737	76145-7738		
76145-7743	76145-7744	76145-7745	76145-7746	76145-7747	76145-7748		
76145-7753	76145-7754	76145-7755	76145-7756	76145-7757	76145-7758		
76145-7763	76145-7764	76145-7765	76145-7766	76145-7767	76145-7768		
76145-7773	76145-7774	76145-7775	76145-7776	76145-7777	76145-7778		
76145-7783	76145-7784	76145-7785	76145-7786	76145-7787	76145-7788		
76145-8703	76145-8704	76145-8705	76145-8706	76145-8707	76145-8708		
76145-8713	76145-8714	76145-8715	76145-8716	76145-8717	76145-8718		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76145	14	76145-8723	76145-8724	76145-8725	76145-8726	76145-8727	76145-8728
		76145-8733	76145-8734	76145-8735	76145-8736	76145-8737	76145-8738
		76145-8743	76145-8744	76145-8745	76145-8746	76145-8747	76145-8748
		76145-8753	76145-8754	76145-8755	76145-8756	76145-8757	76145-8758
		76145-8763	76145-8764	76145-8765	76145-8766	76145-8767	76145-8768
		76145-8773	76145-8774	76145-8775	76145-8776	76145-8777	76145-8778
		76145-8783	76145-8784	76145-8785	76145-8786	76145-8787	76145-8788
		76145-9703	76145-9704	76145-9705	76145-9706	76145-9707	76145-9708
		76145-9713	76145-9714	76145-9715	76145-9716	76145-9717	76145-9718
		76145-9723	76145-9724	76145-9725	76145-9726	76145-9727	76145-9728
		76145-9733	76145-9734	76145-9735	76145-9736	76145-9737	76145-9738
		76145-9743	76145-9744	76145-9745	76145-9746	76145-9747	76145-9748
		76145-9753	76145-9754	76145-9755	76145-9756	76145-9757	76145-9758
		76145-9763	76145-9764	76145-9765	76145-9766	76145-9767	76145-9768
	76145-9773	76145-9774	76145-9775	76145-9776	76145-9777	76145-9778	
	76145-9783	76145-9784	76145-9785	76145-9786	76145-9787	76145-9788	
	16	76145-0603	76145-0604	76145-0605	76145-0606	76145-0607	76145-0608
		76145-0613	76145-0614	76145-0615	76145-0616	76145-0617	76145-0618
		76145-0623	76145-0624	76145-0625	76145-0626	76145-0627	76145-0628
		76145-0633	76145-0634	76145-0635	76145-0636	76145-0637	76145-0638
		76145-1603	76145-1604	76145-1605	76145-1606	76145-1607	76145-1608
		76145-1613	76145-1614	76145-1615	76145-1616	76145-1617	76145-1618
		76145-1623	76145-1624	76145-1625	76145-1626	76145-1627	76145-1628
		76145-1633	76145-1634	76145-1635	76145-1636	76145-1637	76145-1638
		76145-2603	76145-2604	76145-2605	76145-2606	76145-2607	76145-2608
		76145-2613	76145-2614	76145-2615	76145-2616	76145-2617	76145-2618
		76145-2623	76145-2624	76145-2625	76145-2626	76145-2627	76145-2628
		76145-2633	76145-2634	76145-2635	76145-2636	76145-2637	76145-2638
		76145-2643	76145-2644	76145-2645	76145-2646	76145-2647	76145-2648
		76145-2653	76145-2654	76145-2655	76145-2656	76145-2657	76145-2658
		76145-2663	76145-2664	76145-2665	76145-2666	76145-2667	76145-2668
		76145-2673	76145-2674	76145-2675	76145-2676	76145-2677	76145-2678
		76145-2683	76145-2684	76145-2685	76145-2686	76145-2687	76145-2688
		76145-3603	76145-3604	76145-3605	76145-3606	76145-3607	76145-3608
76145-3613		76145-3614	76145-3615	76145-3616	76145-3617	76145-3618	
76145-3623		76145-3624	76145-3625	76145-3626	76145-3627	76145-3628	
76145-3633		76145-3634	76145-3635	76145-3636	76145-3637	76145-3638	
76145-3643		76145-3644	76145-3645	76145-3646	76145-3647	76145-3648	
76145-3653		76145-3654	76145-3655	76145-3656	76145-3657	76145-3658	
76145-3663		76145-3664	76145-3665	76145-3666	76145-3667	76145-3668	
76145-3673		76145-3674	76145-3675	76145-3676	76145-3677	76145-3678	
76145-3683		76145-3684	76145-3685	76145-3686	76145-3687	76145-3688	
76145-4603		76145-4604	76145-4605	76145-4606	76145-4607	76145-4608	
76145-4613		76145-4614	76145-4615	76145-4616	76145-4617	76145-4618	
76145-4623		76145-4624	76145-4625	76145-4626	76145-4627	76145-4628	
76145-4633		76145-4634	76145-4635	76145-4636	76145-4637	76145-4638	
76145-4643	76145-4644	76145-4645	76145-4646	76145-4647	76145-4648		
76145-4653	76145-4654	76145-4655	76145-4656	76145-4657	76145-4658		
76145-4663	76145-4664	76145-4665	76145-4666	76145-4667	76145-4668		
76145-4673	76145-4674	76145-4675	76145-4676	76145-4677	76145-4678		
76145-4683	76145-4684	76145-4685	76145-4686	76145-4687	76145-4688		
76145-5603	76145-5604	76145-5605	76145-5606	76145-5607	76145-5608		
76145-5613	76145-5614	76145-5615	76145-5616	76145-5617	76145-5618		
76145-5623	76145-5624	76145-5625	76145-5626	76145-5627	76145-5628		
76145-5633	76145-5634	76145-5635	76145-5636	76145-5637	76145-5638		
76145-5643	76145-5644	76145-5645	76145-5646	76145-5647	76145-5648		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76145	16	76145-5653	76145-5654	76145-5655	76145-5656	76145-5657	76145-5658
		76145-5663	76145-5664	76145-5665	76145-5666	76145-5667	76145-5668
		76145-5673	76145-5674	76145-5675	76145-5676	76145-5677	76145-5678
		76145-5683	76145-5684	76145-5685	76145-5686	76145-5687	76145-5688
		76145-6603	76145-6604	76145-6605	76145-6606	76145-6607	76145-6608
		76145-6613	76145-6614	76145-6615	76145-6616	76145-6617	76145-6618
		76145-6623	76145-6624	76145-6625	76145-6626	76145-6627	76145-6628
		76145-6633	76145-6634	76145-6635	76145-6636	76145-6637	76145-6638
		76145-6643	76145-6644	76145-6645	76145-6646	76145-6647	76145-6648
		76145-6653	76145-6654	76145-6655	76145-6656	76145-6657	76145-6658
		76145-6663	76145-6664	76145-6665	76145-6666	76145-6667	76145-6668
		76145-6673	76145-6674	76145-6675	76145-6676	76145-6677	76145-6678
		76145-6683	76145-6684	76145-6685	76145-6686	76145-6687	76145-6688
		76145-7603	76145-7604	76145-7605	76145-7606	76145-7607	76145-7608
		76145-7613	76145-7614	76145-7615	76145-7616	76145-7617	76145-7618
		76145-7623	76145-7624	76145-7625	76145-7626	76145-7627	76145-7628
		76145-7633	76145-7634	76145-7635	76145-7636	76145-7637	76145-7638
		76145-7643	76145-7644	76145-7645	76145-7646	76145-7647	76145-7648
		76145-7653	76145-7654	76145-7655	76145-7656	76145-7657	76145-7658
		76145-7663	76145-7664	76145-7665	76145-7666	76145-7667	76145-7668
		76145-7673	76145-7674	76145-7675	76145-7676	76145-7677	76145-7678
		76145-7683	76145-7684	76145-7685	76145-7686	76145-7687	76145-7688
		76145-8603	76145-8604	76145-8605	76145-8606	76145-8607	76145-8608
		76145-8613	76145-8614	76145-8615	76145-8616	76145-8617	76145-8618
		76145-8623	76145-8624	76145-8625	76145-8626	76145-8627	76145-8628
		76145-8633	76145-8634	76145-8635	76145-8636	76145-8637	76145-8638
		76145-8643	76145-8644	76145-8645	76145-8646	76145-8647	76145-8648
		76145-8653	76145-8654	76145-8655	76145-8656	76145-8657	76145-8658
		76145-8663	76145-8664	76145-8665	76145-8666	76145-8667	76145-8668
		76145-8673	76145-8674	76145-8675	76145-8676	76145-8677	76145-8678
		76145-8683	76145-8684	76145-8685	76145-8686	76145-8687	76145-8688
		76145-9603	76145-9604	76145-9605	76145-9606	76145-9607	76145-9608
		76145-9613	76145-9614	76145-9615	76145-9616	76145-9617	76145-9618
76145-9623	76145-9624	76145-9625	76145-9626	76145-9627	76145-9628		
76145-9633	76145-9634	76145-9635	76145-9636	76145-9637	76145-9638		
76145-9643	76145-9644	76145-9645	76145-9646	76145-9647	76145-9648		
76145-9653	76145-9654	76145-9655	76145-9656	76145-9657	76145-9658		
76145-9663	76145-9664	76145-9665	76145-9666	76145-9667	76145-9668		
76145-9673	76145-9674	76145-9675	76145-9676	76145-9677	76145-9678		
76145-9683	76145-9684	76145-9685	76145-9686	76145-9687	76145-9688		
Impact™ 76155	6	76155-0303	76155-0304	76155-0305	76155-0306	76155-0307	76155-0308
		76155-0313	76155-0314	76155-0315	76155-0316	76155-0317	76155-0318
		76155-0323	76155-0324	76155-0325	76155-0326	76155-0327	76155-0328
		76155-0333	76155-0334	76155-0335	76155-0336	76155-0337	76155-0338
		76155-1303	76155-1304	76155-1305	76155-1306	76155-1307	76155-1308
		76155-1313	76155-1314	76155-1315	76155-1316	76155-1317	76155-1318
		76155-1323	76155-1324	76155-1325	76155-1326	76155-1327	76155-1328
		76155-1333	76155-1334	76155-1335	76155-1336	76155-1337	76155-1338
		76155-2303	76155-2304	76155-2305	76155-2306	76155-2307	76155-2308
		76155-2313	76155-2314	76155-2315	76155-2316	76155-2317	76155-2318
		76155-2323	76155-2324	76155-2325	76155-2326	76155-2327	76155-2328
		76155-2333	76155-2334	76155-2335	76155-2336	76155-2337	76155-2338
		76155-2343	76155-2344	76155-2345	76155-2346	76155-2347	76155-2348
		76155-2353	76155-2354	76155-2355	76155-2356	76155-2357	76155-2358
		76155-2363	76155-2364	76155-2365	76155-2366	76155-2367	76155-2368
		76155-2373	76155-2374	76155-2375	76155-2376	76155-2377	76155-2378

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	6	76155-2383	76155-2384	76155-2385	76155-2386	76155-2387	76155-2388
		76155-3303	76155-3304	76155-3305	76155-3306	76155-3307	76155-3308
		76155-3313	76155-3314	76155-3315	76155-3316	76155-3317	76155-3318
		76155-3323	76155-3324	76155-3325	76155-3326	76155-3327	76155-3328
		76155-3333	76155-3334	76155-3335	76155-3336	76155-3337	76155-3338
		76155-3343	76155-3344	76155-3345	76155-3346	76155-3347	76155-3348
		76155-3353	76155-3354	76155-3355	76155-3356	76155-3357	76155-3358
		76155-3363	76155-3364	76155-3365	76155-3366	76155-3367	76155-3368
		76155-3373	76155-3374	76155-3375	76155-3376	76155-3377	76155-3378
		76155-3383	76155-3384	76155-3385	76155-3386	76155-3387	76155-3388
		76155-4303	76155-4304	76155-4305	76155-4306	76155-4307	76155-4308
		76155-4313	76155-4314	76155-4315	76155-4316	76155-4317	76155-4318
		76155-4323	76155-4324	76155-4325	76155-4326	76155-4327	76155-4328
		76155-4333	76155-4334	76155-4335	76155-4336	76155-4337	76155-4338
		76155-4343	76155-4344	76155-4345	76155-4346	76155-4347	76155-4348
		76155-4353	76155-4354	76155-4355	76155-4356	76155-4357	76155-4358
		76155-4363	76155-4364	76155-4365	76155-4366	76155-4367	76155-4368
		76155-4373	76155-4374	76155-4375	76155-4376	76155-4377	76155-4378
		76155-4383	76155-4384	76155-4385	76155-4386	76155-4387	76155-4388
		76155-5303	76155-5304	76155-5305	76155-5306	76155-5307	76155-5308
		76155-5313	76155-5314	76155-5315	76155-5316	76155-5317	76155-5318
		76155-5323	76155-5324	76155-5325	76155-5326	76155-5327	76155-5328
		76155-5333	76155-5334	76155-5335	76155-5336	76155-5337	76155-5338
		76155-5343	76155-5344	76155-5345	76155-5346	76155-5347	76155-5348
		76155-5353	76155-5354	76155-5355	76155-5356	76155-5357	76155-5358
		76155-5363	76155-5364	76155-5365	76155-5366	76155-5367	76155-5368
		76155-5373	76155-5374	76155-5375	76155-5376	76155-5377	76155-5378
		76155-5383	76155-5384	76155-5385	76155-5386	76155-5387	76155-5388
		76155-6303	76155-6304	76155-6305	76155-6306	76155-6307	76155-6308
		76155-6313	76155-6314	76155-6315	76155-6316	76155-6317	76155-6318
		76155-6323	76155-6324	76155-6325	76155-6326	76155-6327	76155-6328
		76155-6333	76155-6334	76155-6335	76155-6336	76155-6337	76155-6338
		76155-6343	76155-6344	76155-6345	76155-6346	76155-6347	76155-6348
		76155-6353	76155-6354	76155-6355	76155-6356	76155-6357	76155-6358
		76155-6363	76155-6364	76155-6365	76155-6366	76155-6367	76155-6368
		76155-6373	76155-6374	76155-6375	76155-6376	76155-6377	76155-6378
		76155-6383	76155-6384	76155-6385	76155-6386	76155-6387	76155-6388
		76155-7303	76155-7304	76155-7305	76155-7306	76155-7307	76155-7308
		76155-7313	76155-7314	76155-7315	76155-7316	76155-7317	76155-7318
		76155-7323	76155-7324	76155-7325	76155-7326	76155-7327	76155-7328
		76155-7333	76155-7334	76155-7335	76155-7336	76155-7337	76155-7338
		76155-7343	76155-7344	76155-7345	76155-7346	76155-7347	76155-7348
76155-7353	76155-7354	76155-7355	76155-7356	76155-7357	76155-7358		
76155-7363	76155-7364	76155-7365	76155-7366	76155-7367	76155-7368		
76155-7373	76155-7374	76155-7375	76155-7376	76155-7377	76155-7378		
76155-7383	76155-7384	76155-7385	76155-7386	76155-7387	76155-7388		
76155-8303	76155-8304	76155-8305	76155-8306	76155-8307	76155-8308		
76155-8313	76155-8314	76155-8315	76155-8316	76155-8317	76155-8318		
76155-8323	76155-8324	76155-8325	76155-8326	76155-8327	76155-8328		
76155-8333	76155-8334	76155-8335	76155-8336	76155-8337	76155-8338		
76155-8343	76155-8344	76155-8345	76155-8346	76155-8347	76155-8348		
76155-8353	76155-8354	76155-8355	76155-8356	76155-8357	76155-8358		
76155-8363	76155-8364	76155-8365	76155-8366	76155-8367	76155-8368		
76155-8373	76155-8374	76155-8375	76155-8376	76155-8377	76155-8378		
76155-8383	76155-8384	76155-8385	76155-8386	76155-8387	76155-8388		
76155-9303	76155-9304	76155-9305	76155-9306	76155-9307	76155-9308		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	6	76155-9313	76155-9314	76155-9315	76155-9316	76155-9317	76155-9318
		76155-9323	76155-9324	76155-9325	76155-9326	76155-9327	76155-9328
		76155-9333	76155-9334	76155-9335	76155-9336	76155-9337	76155-9338
		76155-9343	76155-9344	76155-9345	76155-9346	76155-9347	76155-9348
		76155-9353	76155-9354	76155-9355	76155-9356	76155-9357	76155-9358
		76155-9363	76155-9364	76155-9365	76155-9366	76155-9367	76155-9368
		76155-9373	76155-9374	76155-9375	76155-9376	76155-9377	76155-9378
		76155-9383	76155-9384	76155-9385	76155-9386	76155-9387	76155-9388
	8	76155-0803	76155-0804	76155-0805	76155-0806	76155-0807	76155-0808
		76155-0813	76155-0814	76155-0815	76155-0816	76155-0817	76155-0818
		76155-0823	76155-0824	76155-0825	76155-0826	76155-0827	76155-0828
		76155-0833	76155-0834	76155-0835	76155-0836	76155-0837	76155-0838
		76155-1803	76155-1804	76155-1805	76155-1806	76155-1807	76155-1808
		76155-1813	76155-1814	76155-1815	76155-1816	76155-1817	76155-1818
		76155-1823	76155-1824	76155-1825	76155-1826	76155-1827	76155-1828
		76155-1833	76155-1834	76155-1835	76155-1836	76155-1837	76155-1838
		76155-2803	76155-2804	76155-2805	76155-2806	76155-2807	76155-2808
		76155-2813	76155-2814	76155-2815	76155-2816	76155-2817	76155-2818
		76155-2823	76155-2824	76155-2825	76155-2826	76155-2827	76155-2828
		76155-2833	76155-2834	76155-2835	76155-2836	76155-2837	76155-2838
		76155-2843	76155-2844	76155-2845	76155-2846	76155-2847	76155-2848
		76155-2853	76155-2854	76155-2855	76155-2856	76155-2857	76155-2858
		76155-2863	76155-2864	76155-2865	76155-2866	76155-2867	76155-2868
		76155-2873	76155-2874	76155-2875	76155-2876	76155-2877	76155-2878
		76155-2883	76155-2884	76155-2885	76155-2886	76155-2887	76155-2888
		76155-3803	76155-3804	76155-3805	76155-3806	76155-3807	76155-3808
		76155-3813	76155-3814	76155-3815	76155-3816	76155-3817	76155-3818
		76155-3823	76155-3824	76155-3825	76155-3826	76155-3827	76155-3828
		76155-3833	76155-3834	76155-3835	76155-3836	76155-3837	76155-3838
		76155-3843	76155-3844	76155-3845	76155-3846	76155-3847	76155-3848
		76155-3853	76155-3854	76155-3855	76155-3856	76155-3857	76155-3858
		76155-3863	76155-3864	76155-3865	76155-3866	76155-3867	76155-3868
		76155-3873	76155-3874	76155-3875	76155-3876	76155-3877	76155-3878
		76155-3883	76155-3884	76155-3885	76155-3886	76155-3887	76155-3888
76155-4803		76155-4804	76155-4805	76155-4806	76155-4807	76155-4808	
76155-4813		76155-4814	76155-4815	76155-4816	76155-4817	76155-4818	
76155-4823		76155-4824	76155-4825	76155-4826	76155-4827	76155-4828	
76155-4833		76155-4834	76155-4835	76155-4836	76155-4837	76155-4838	
76155-4843	76155-4844	76155-4845	76155-4846	76155-4847	76155-4848		
76155-4853	76155-4854	76155-4855	76155-4856	76155-4857	76155-4858		
76155-4863	76155-4864	76155-4865	76155-4866	76155-4867	76155-4868		
76155-4873	76155-4874	76155-4875	76155-4876	76155-4877	76155-4878		
76155-4883	76155-4884	76155-4885	76155-4886	76155-4887	76155-4888		
76155-5803	76155-5804	76155-5805	76155-5806	76155-5807	76155-5808		
76155-5813	76155-5814	76155-5815	76155-5816	76155-5817	76155-5818		
76155-5823	76155-5824	76155-5825	76155-5826	76155-5827	76155-5828		
76155-5833	76155-5834	76155-5835	76155-5836	76155-5837	76155-5838		
76155-5843	76155-5844	76155-5845	76155-5846	76155-5847	76155-5848		
76155-5853	76155-5854	76155-5855	76155-5856	76155-5857	76155-5858		
76155-5863	76155-5864	76155-5865	76155-5866	76155-5867	76155-5868		
76155-5873	76155-5874	76155-5875	76155-5876	76155-5877	76155-5878		
76155-5883	76155-5884	76155-5885	76155-5886	76155-5887	76155-5888		
76155-6803	76155-6804	76155-6805	76155-6806	76155-6807	76155-6808		
76155-6813	76155-6814	76155-6815	76155-6816	76155-6817	76155-6818		
76155-6823	76155-6824	76155-6825	76155-6826	76155-6827	76155-6828		
76155-6833	76155-6834	76155-6835	76155-6836	76155-6837	76155-6838		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	8	76155-6843	76155-6844	76155-6845	76155-6846	76155-6847	76155-6848
		76155-6853	76155-6854	76155-6855	76155-6856	76155-6857	76155-6858
		76155-6863	76155-6864	76155-6865	76155-6866	76155-6867	76155-6868
		76155-6873	76155-6874	76155-6875	76155-6876	76155-6877	76155-6878
		76155-6883	76155-6884	76155-6885	76155-6886	76155-6887	76155-6888
		76155-7803	76155-7804	76155-7805	76155-7806	76155-7807	76155-7808
		76155-7813	76155-7814	76155-7815	76155-7816	76155-7817	76155-7818
		76155-7823	76155-7824	76155-7825	76155-7826	76155-7827	76155-7828
		76155-7833	76155-7834	76155-7835	76155-7836	76155-7837	76155-7838
		76155-7843	76155-7844	76155-7845	76155-7846	76155-7847	76155-7848
		76155-7853	76155-7854	76155-7855	76155-7856	76155-7857	76155-7858
		76155-7863	76155-7864	76155-7865	76155-7866	76155-7867	76155-7868
		76155-7873	76155-7874	76155-7875	76155-7876	76155-7877	76155-7878
		76155-7883	76155-7884	76155-7885	76155-7886	76155-7887	76155-7888
		76155-8803	76155-8804	76155-8805	76155-8806	76155-8807	76155-8808
		76155-8813	76155-8814	76155-8815	76155-8816	76155-8817	76155-8818
		76155-8823	76155-8824	76155-8825	76155-8826	76155-8827	76155-8828
		76155-8833	76155-8834	76155-8835	76155-8836	76155-8837	76155-8838
		76155-8843	76155-8844	76155-8845	76155-8846	76155-8847	76155-8848
		76155-8853	76155-8854	76155-8855	76155-8856	76155-8857	76155-8858
		76155-8863	76155-8864	76155-8865	76155-8866	76155-8867	76155-8868
		76155-8873	76155-8874	76155-8875	76155-8876	76155-8877	76155-8878
		76155-8883	76155-8884	76155-8885	76155-8886	76155-8887	76155-8888
		76155-8803	76155-8804	76155-8805	76155-8806	76155-8807	76155-8808
		76155-9803	76155-9804	76155-9805	76155-9806	76155-9807	76155-9808
		76155-9813	76155-9814	76155-9815	76155-9816	76155-9817	76155-9818
		76155-9823	76155-9824	76155-9825	76155-9826	76155-9827	76155-9828
		76155-9833	76155-9834	76155-9835	76155-9836	76155-9837	76155-9838
		76155-9843	76155-9844	76155-9845	76155-9846	76155-9847	76155-9848
		76155-9853	76155-9854	76155-9855	76155-9856	76155-9857	76155-9858
		76155-9863	76155-9864	76155-9865	76155-9866	76155-9867	76155-9868
		76155-9873	76155-9874	76155-9875	76155-9876	76155-9877	76155-9878
	76155-9883	76155-9884	76155-9885	76155-9886	76155-9887	76155-9888	
	10	76155-0103	76155-0104	76155-0105	76155-0106	76155-0107	76155-0108
		76155-0113	76155-0114	76155-0115	76155-0116	76155-0117	76155-0118
		76155-0123	76155-0124	76155-0125	76155-0126	76155-0127	76155-0128
		76155-0133	76155-0134	76155-0135	76155-0136	76155-0137	76155-0138
		76155-1103	76155-1104	76155-1105	76155-1106	76155-1107	76155-1108
		76155-1113	76155-1114	76155-1115	76155-1116	76155-1117	76155-1118
		76155-1123	76155-1124	76155-1125	76155-1126	76155-1127	76155-1128
		76155-1133	76155-1134	76155-1135	76155-1136	76155-1137	76155-1138
		76155-2103	76155-2104	76155-2105	76155-2106	76155-2107	76155-2108
		76155-2113	76155-2114	76155-2115	76155-2116	76155-2117	76155-2118
		76155-2123	76155-2124	76155-2125	76155-2126	76155-2127	76155-2128
76155-2133		76155-2134	76155-2135	76155-2136	76155-2137	76155-2138	
76155-2143		76155-2144	76155-2145	76155-2146	76155-2147	76155-2148	
76155-2153		76155-2154	76155-2155	76155-2156	76155-2157	76155-2158	
76155-2163		76155-2164	76155-2165	76155-2166	76155-2167	76155-2168	
76155-2173		76155-2174	76155-2175	76155-2176	76155-2177	76155-2178	
76155-2183		76155-2184	76155-2185	76155-2186	76155-2187	76155-2188	
76155-3103		76155-3104	76155-3105	76155-3106	76155-3107	76155-3108	
76155-3113		76155-3114	76155-3115	76155-3116	76155-3117	76155-3118	
76155-3123		76155-3124	76155-3125	76155-3126	76155-3127	76155-3128	
76155-3133	76155-3134	76155-3135	76155-3136	76155-3137	76155-3138		
76155-3143	76155-3144	76155-3145	76155-3146	76155-3147	76155-3148		
76155-3153	76155-3154	76155-3155	76155-3156	76155-3157	76155-3158		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	10	76155-3163	76155-3164	76155-3165	76155-3166	76155-3167	76155-3168
		76155-3173	76155-3174	76155-3175	76155-3176	76155-3177	76155-3178
		76155-3183	76155-3184	76155-3185	76155-3186	76155-3187	76155-3188
		76155-4103	76155-4104	76155-4105	76155-4106	76155-4107	76155-4108
		76155-4113	76155-4114	76155-4115	76155-4116	76155-4117	76155-4118
		76155-4123	76155-4124	76155-4125	76155-4126	76155-4127	76155-4128
		76155-4133	76155-4134	76155-4135	76155-4136	76155-4137	76155-4138
		76155-4143	76155-4144	76155-4145	76155-4146	76155-4147	76155-4148
		76155-4153	76155-4154	76155-4155	76155-4156	76155-4157	76155-4158
		76155-4163	76155-4164	76155-4165	76155-4166	76155-4167	76155-4168
		76155-4173	76155-4174	76155-4175	76155-4176	76155-4177	76155-4178
		76155-4183	76155-4184	76155-4185	76155-4186	76155-4187	76155-4188
		76155-5103	76155-5104	76155-5105	76155-5106	76155-5107	76155-5108
		76155-5113	76155-5114	76155-5115	76155-5116	76155-5117	76155-5118
		76155-5123	76155-5124	76155-5125	76155-5126	76155-5127	76155-5128
		76155-5133	76155-5134	76155-5135	76155-5136	76155-5137	76155-5138
		76155-5143	76155-5144	76155-5145	76155-5146	76155-5147	76155-5148
		76155-5153	76155-5154	76155-5155	76155-5156	76155-5157	76155-5158
		76155-5163	76155-5164	76155-5165	76155-5166	76155-5167	76155-5168
		76155-5173	76155-5174	76155-5175	76155-5176	76155-5177	76155-5178
		76155-5183	76155-5184	76155-5185	76155-5186	76155-5187	76155-5188
		76155-6103	76155-6104	76155-6105	76155-6106	76155-6107	76155-6108
		76155-6113	76155-6114	76155-6115	76155-6116	76155-6117	76155-6118
		76155-6123	76155-6124	76155-6125	76155-6126	76155-6127	76155-6128
		76155-6133	76155-6134	76155-6135	76155-6136	76155-6137	76155-6138
		76155-6143	76155-6144	76155-6145	76155-6146	76155-6147	76155-6148
		76155-6153	76155-6154	76155-6155	76155-6156	76155-6157	76155-6158
		76155-6163	76155-6164	76155-6165	76155-6166	76155-6167	76155-6168
		76155-6173	76155-6174	76155-6175	76155-6176	76155-6177	76155-6178
		76155-6183	76155-6184	76155-6185	76155-6186	76155-6187	76155-6188
		76155-7103	76155-7104	76155-7105	76155-7106	76155-7107	76155-7108
		76155-7113	76155-7114	76155-7115	76155-7116	76155-7117	76155-7118
		76155-7123	76155-7124	76155-7125	76155-7126	76155-7127	76155-7128
		76155-7133	76155-7134	76155-7135	76155-7136	76155-7137	76155-7138
		76155-7143	76155-7144	76155-7145	76155-7146	76155-7147	76155-7148
		76155-7153	76155-7154	76155-7155	76155-7156	76155-7157	76155-7158
		76155-7163	76155-7164	76155-7165	76155-7166	76155-7167	76155-7168
		76155-7173	76155-7174	76155-7175	76155-7176	76155-7177	76155-7178
		76155-7183	76155-7184	76155-7185	76155-7186	76155-7187	76155-7188
		76155-8103	76155-8104	76155-8105	76155-8106	76155-8107	76155-8108
		76155-8113	76155-8114	76155-8115	76155-8116	76155-8117	76155-8118
		76155-8123	76155-8124	76155-8125	76155-8126	76155-8127	76155-8128
		76155-8133	76155-8134	76155-8135	76155-8136	76155-8137	76155-8138
		76155-8143	76155-8144	76155-8145	76155-8146	76155-8147	76155-8148
		76155-8153	76155-8154	76155-8155	76155-8156	76155-8157	76155-8158
		76155-8163	76155-8164	76155-8165	76155-8166	76155-8167	76155-8168
		76155-8173	76155-8174	76155-8175	76155-8176	76155-8177	76155-8178
		76155-8183	76155-8184	76155-8185	76155-8186	76155-8187	76155-8188
76155-9103	76155-9104	76155-9105	76155-9106	76155-9107	76155-9108		
76155-9113	76155-9114	76155-9115	76155-9116	76155-9117	76155-9118		
76155-9123	76155-9124	76155-9125	76155-9126	76155-9127	76155-9128		
76155-9133	76155-9134	76155-9135	76155-9136	76155-9137	76155-9138		
76155-9143	76155-9144	76155-9145	76155-9146	76155-9147	76155-9148		
76155-9153	76155-9154	76155-9155	76155-9156	76155-9157	76155-9158		
76155-9163	76155-9164	76155-9165	76155-9166	76155-9167	76155-9168		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	10	76155-9173	76155-9174	76155-9175	76155-9176	76155-9177	76155-9178
		76155-9183	76155-9184	76155-9185	76155-9186	76155-9187	76155-9188
	16	76155-0603	76155-0604	76155-0605	76155-0606	76155-0607	76155-0608
		76155-0613	76155-0614	76155-0615	76155-0616	76155-0617	76155-0618
		76155-0623	76155-0624	76155-0625	76155-0626	76155-0627	76155-0628
		76155-0633	76155-0634	76155-0635	76155-0636	76155-0637	76155-0638
		76155-1603	76155-1604	76155-1605	76155-1606	76155-1607	76155-1608
		76155-1613	76155-1614	76155-1615	76155-1616	76155-1617	76155-1618
		76155-1623	76155-1624	76155-1625	76155-1626	76155-1627	76155-1628
		76155-1633	76155-1634	76155-1635	76155-1636	76155-1637	76155-1638
		76155-2603	76155-2604	76155-2605	76155-2606	76155-2607	76155-2608
		76155-2613	76155-2614	76155-2615	76155-2616	76155-2617	76155-2618
		76155-2623	76155-2624	76155-2625	76155-2626	76155-2627	76155-2628
		76155-2633	76155-2634	76155-2635	76155-2636	76155-2637	76155-2638
		76155-2643	76155-2644	76155-2645	76155-2646	76155-2647	76155-2648
		76155-2653	76155-2654	76155-2655	76155-2656	76155-2657	76155-2658
		76155-2663	76155-2664	76155-2665	76155-2666	76155-2667	76155-2668
		76155-2673	76155-2674	76155-2675	76155-2676	76155-2677	76155-2678
		76155-2683	76155-2684	76155-2685	76155-2686	76155-2687	76155-2688
		76155-3603	76155-3604	76155-3605	76155-3606	76155-3607	76155-3608
		76155-3613	76155-3614	76155-3615	76155-3616	76155-3617	76155-3618
		76155-3623	76155-3624	76155-3625	76155-3626	76155-3627	76155-3628
		76155-3633	76155-3634	76155-3635	76155-3636	76155-3637	76155-3638
		76155-3643	76155-3644	76155-3645	76155-3646	76155-3647	76155-3648
		76155-3653	76155-3654	76155-3655	76155-3656	76155-3657	76155-3658
		76155-3663	76155-3664	76155-3665	76155-3666	76155-3667	76155-3668
		76155-3673	76155-3674	76155-3675	76155-3676	76155-3677	76155-3678
		76155-3683	76155-3684	76155-3685	76155-3686	76155-3687	76155-3688
		76155-4603	76155-4604	76155-4605	76155-4606	76155-4607	76155-4608
		76155-4613	76155-4614	76155-4615	76155-4616	76155-4617	76155-4618
		76155-4623	76155-4624	76155-4625	76155-4626	76155-4627	76155-4628
		76155-4633	76155-4634	76155-4635	76155-4636	76155-4637	76155-4638
		76155-4643	76155-4644	76155-4645	76155-4646	76155-4647	76155-4648
		76155-4653	76155-4654	76155-4655	76155-4656	76155-4657	76155-4658
		76155-4663	76155-4664	76155-4665	76155-4666	76155-4667	76155-4668
		76155-4673	76155-4674	76155-4675	76155-4676	76155-4677	76155-4678
		76155-4683	76155-4684	76155-4685	76155-4686	76155-4687	76155-4688
		76155-5603	76155-5604	76155-5605	76155-5606	76155-5607	76155-5608
		76155-5613	76155-5614	76155-5615	76155-5616	76155-5617	76155-5618
		76155-5623	76155-5624	76155-5625	76155-5626	76155-5627	76155-5628
		76155-5633	76155-5634	76155-5635	76155-5636	76155-5637	76155-5638
		76155-5643	76155-5644	76155-5645	76155-5646	76155-5647	76155-5648
		76155-5653	76155-5654	76155-5655	76155-5656	76155-5657	76155-5658
		76155-5663	76155-5664	76155-5665	76155-5666	76155-5667	76155-5668
		76155-5673	76155-5674	76155-5675	76155-5676	76155-5677	76155-5678
		76155-5683	76155-5684	76155-5685	76155-5686	76155-5687	76155-5688
		76155-6603	76155-6604	76155-6605	76155-6606	76155-6607	76155-6608
		76155-6613	76155-6614	76155-6615	76155-6616	76155-6617	76155-6618
76155-6623	76155-6624	76155-6625	76155-6626	76155-6627	76155-6628		
76155-6633	76155-6634	76155-6635	76155-6636	76155-6637	76155-6638		
76155-6643	76155-6644	76155-6645	76155-6646	76155-6647	76155-6648		
76155-6653	76155-6654	76155-6655	76155-6656	76155-6657	76155-6658		
76155-6663	76155-6664	76155-6665	76155-6666	76155-6667	76155-6668		
76155-6673	76155-6674	76155-6675	76155-6676	76155-6677	76155-6678		
76155-6683	76155-6684	76155-6685	76155-6686	76155-6687	76155-6688		
76155-7603	76155-7604	76155-7605	76155-7606	76155-7607	76155-7608		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.							
Impact™ 76155	16	76155-7613	76155-7614	76155-7615	76155-7616	76155-7617	76155-7618		
		76155-7623	76155-7624	76155-7625	76155-7626	76155-7627	76155-7628		
		76155-7633	76155-7634	76155-7635	76155-7636	76155-7637	76155-7638		
		76155-7643	76155-7644	76155-7645	76155-7646	76155-7647	76155-7648		
		76155-7653	76155-7654	76155-7655	76155-7656	76155-7657	76155-7658		
		76155-7663	76155-7664	76155-7665	76155-7666	76155-7667	76155-7668		
		76155-7673	76155-7674	76155-7675	76155-7676	76155-7677	76155-7678		
		76155-7683	76155-7684	76155-7685	76155-7686	76155-7687	76155-7688		
		76155-8603	76155-8604	76155-8605	76155-8606	76155-8607	76155-8608		
		76155-8613	76155-8614	76155-8615	76155-8616	76155-8617	76155-8618		
		76155-8623	76155-8624	76155-8625	76155-8626	76155-8627	76155-8628		
		76155-8633	76155-8634	76155-8635	76155-8636	76155-8637	76155-8638		
		76155-8643	76155-8644	76155-8645	76155-8646	76155-8647	76155-8648		
		76155-8653	76155-8654	76155-8655	76155-8656	76155-8657	76155-8658		
		76155-8663	76155-8664	76155-8665	76155-8666	76155-8667	76155-8668		
		76155-8673	76155-8674	76155-8675	76155-8676	76155-8677	76155-8678		
		76155-8683	76155-8684	76155-8685	76155-8686	76155-8687	76155-8688		
		76155-9603	76155-9604	76155-9605	76155-9606	76155-9607	76155-9608		
		76155-9613	76155-9614	76155-9615	76155-9616	76155-9617	76155-9618		
		76155-9623	76155-9624	76155-9625	76155-9626	76155-9627	76155-9628		
		76155-9633	76155-9634	76155-9635	76155-9636	76155-9637	76155-9638		
		76155-9643	76155-9644	76155-9645	76155-9646	76155-9647	76155-9648		
		76155-9653	76155-9654	76155-9655	76155-9656	76155-9657	76155-9658		
		76155-9663	76155-9664	76155-9665	76155-9666	76155-9667	76155-9668		
		76155-9673	76155-9674	76155-9675	76155-9676	76155-9677	76155-9678		
		76155-9683	76155-9684	76155-9685	76155-9686	76155-9687	76155-9688		
		Impact™ 76165	6	76165-0303	76165-0304	76165-0305	76165-0306	76165-0307	76165-0308
				76165-0313	76165-0314	76165-0315	76165-0316	76165-0317	76165-0318
76165-0323	76165-0324			76165-0325	76165-0326	76165-0327	76165-0328		
76165-0333	76165-0334			76165-0335	76165-0336	76165-0337	76165-0338		
76165-1303	76165-1304			76165-1305	76165-1306	76165-1307	76165-1308		
76165-1313	76165-1314			76165-1315	76165-1316	76165-1317	76165-1318		
76165-1323	76165-1324			76165-1325	76165-1326	76165-1327	76165-1328		
76165-1333	76165-1334			76165-1335	76165-1336	76165-1337	76165-1338		
76165-2303	76165-2304			76165-2305	76165-2306	76165-2307	76165-2308		
76165-2313	76165-2314			76165-2315	76165-2316	76165-2317	76165-2318		
76165-2323	76165-2324			76165-2325	76165-2326	76165-2327	76165-2328		
76165-2333	76165-2334			76165-2335	76165-2336	76165-2337	76165-2338		
76165-2343	76165-2344			76165-2345	76165-2346	76165-2347	76165-2348		
76165-2353	76165-2354			76165-2355	76165-2356	76165-2357	76165-2358		
76165-2363	76165-2364			76165-2365	76165-2366	76165-2367	76165-2368		
76165-2373	76165-2374			76165-2375	76165-2376	76165-2377	76165-2378		
76165-2383	76165-2384			76165-2385	76165-2386	76165-2387	76165-2388		
76165-3303	76165-3304			76165-3305	76165-3306	76165-3307	76165-3308		
76165-3313	76165-3314			76165-3315	76165-3316	76165-3317	76165-3318		
76165-3323	76165-3324			76165-3325	76165-3326	76165-3327	76165-3328		
76165-3333	76165-3334			76165-3335	76165-3336	76165-3337	76165-3338		
76165-3343	76165-3344			76165-3345	76165-3346	76165-3347	76165-3348		
76165-3353	76165-3354			76165-3355	76165-3356	76165-3357	76165-3358		
76165-3363	76165-3364			76165-3365	76165-3366	76165-3367	76165-3368		
76165-3373	76165-3374			76165-3375	76165-3376	76165-3377	76165-3378		
76165-3383	76165-3384			76165-3385	76165-3386	76165-3387	76165-3388		
76165-4303	76165-4304			76165-4305	76165-4306	76165-4307	76165-4308		
76165-4313	76165-4314			76165-4315	76165-4316	76165-4317	76165-4318		
76165-4323	76165-4324	76165-4325	76165-4326	76165-4327	76165-4328				
76165-4333	76165-4334	76165-4335	76165-4336	76165-4337	76165-4338				

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76165	6	76165-4343	76165-4344	76165-4345	76165-4346	76165-4347	76165-4348
		76165-4353	76165-4354	76165-4355	76165-4356	76165-4357	76165-4358
		76165-4363	76165-4364	76165-4365	76165-4366	76165-4367	76165-4368
		76165-4373	76165-4374	76165-4375	76165-4376	76165-4377	76165-4378
		76165-4383	76165-4384	76165-4385	76165-4386	76165-4387	76165-4388
		76165-5303	76165-5304	76165-5305	76165-5306	76165-5307	76165-5308
		76165-5313	76165-5314	76165-5315	76165-5316	76165-5317	76165-5318
		76165-5323	76165-5324	76165-5325	76165-5326	76165-5327	76165-5328
		76165-5333	76165-5334	76165-5335	76165-5336	76165-5337	76165-5338
		76165-5343	76165-5344	76165-5345	76165-5346	76165-5347	76165-5348
		76165-5353	76165-5354	76165-5355	76165-5356	76165-5357	76165-5358
		76165-5363	76165-5364	76165-5365	76165-5366	76165-5367	76165-5368
		76165-5373	76165-5374	76165-5375	76165-5376	76165-5377	76165-5378
		76165-5383	76165-5384	76165-5385	76165-5386	76165-5387	76165-5388
		76165-6303	76165-6304	76165-6305	76165-6306	76165-6307	76165-6308
		76165-6313	76165-6314	76165-6315	76165-6316	76165-6317	76165-6318
		76165-6323	76165-6324	76165-6325	76165-6326	76165-6327	76165-6328
		76165-6333	76165-6334	76165-6335	76165-6336	76165-6337	76165-6338
		76165-6343	76165-6344	76165-6345	76165-6346	76165-6347	76165-6348
		76165-6353	76165-6354	76165-6355	76165-6356	76165-6357	76165-6358
		76165-6363	76165-6364	76165-6365	76165-6366	76165-6367	76165-6368
		76165-6373	76165-6374	76165-6375	76165-6376	76165-6377	76165-6378
		76165-6383	76165-6384	76165-6385	76165-6386	76165-6387	76165-6388
		76165-7303	76165-7304	76165-7305	76165-7306	76165-7307	76165-7308
		76165-7313	76165-7314	76165-7315	76165-7316	76165-7317	76165-7318
		76165-7323	76165-7324	76165-7325	76165-7326	76165-7327	76165-7328
		76165-7333	76165-7334	76165-7335	76165-7336	76165-7337	76165-7338
		76165-7343	76165-7344	76165-7345	76165-7346	76165-7347	76165-7348
		76165-7353	76165-7354	76165-7355	76165-7356	76165-7357	76165-7358
		76165-7363	76165-7364	76165-7365	76165-7366	76165-7367	76165-7368
		76165-7373	76165-7374	76165-7375	76165-7376	76165-7377	76165-7378
		76165-7383	76165-7384	76165-7385	76165-7386	76165-7387	76165-7388
		76165-8303	76165-8304	76165-8305	76165-8306	76165-8307	76165-8308
		76165-8313	76165-8314	76165-8315	76165-8316	76165-8317	76165-8318
		76165-8323	76165-8324	76165-8325	76165-8326	76165-8327	76165-8328
		76165-8333	76165-8334	76165-8335	76165-8336	76165-8337	76165-8338
		76165-8343	76165-8344	76165-8345	76165-8346	76165-8347	76165-8348
		76165-8353	76165-8354	76165-8355	76165-8356	76165-8357	76165-8358
		76165-8363	76165-8364	76165-8365	76165-8366	76165-8367	76165-8368
		76165-8373	76165-8374	76165-8375	76165-8376	76165-8377	76165-8378
		76165-8383	76165-8384	76165-8385	76165-8386	76165-8387	76165-8388
		76165-9303	76165-9304	76165-9305	76165-9306	76165-9307	76165-9308
		76165-9313	76165-9314	76165-9315	76165-9316	76165-9317	76165-9318
		76165-9323	76165-9324	76165-9325	76165-9326	76165-9327	76165-9328
		76165-9333	76165-9334	76165-9335	76165-9336	76165-9337	76165-9338
		76165-9343	76165-9344	76165-9345	76165-9346	76165-9347	76165-9348
		76165-9353	76165-9354	76165-9355	76165-9356	76165-9357	76165-9358
		76165-9363	76165-9364	76165-9365	76165-9366	76165-9367	76165-9368
76165-9373	76165-9374	76165-9375	76165-9376	76165-9377	76165-9378		
76165-9383	76165-9384	76165-9385	76165-9386	76165-9387	76165-9388		
8	76165-0803	76165-0804	76165-0805	76165-0806	76165-0807	76165-0808	
	76165-0813	76165-0814	76165-0815	76165-0816	76165-0817	76165-0828	
	76165-0823	76165-0824	76165-0825	76165-0826	76165-0827	76165-0828	
	76165-0833	76165-0834	76165-0835	76165-0836	76165-0837	76165-0838	
	76165-1803	76165-1804	76165-1805	76165-1806	76165-1807	76165-1808	
	76165-1813	76165-1814	76165-1815	76165-1816	76165-1817	76165-1828	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76165	8	76165-1823	76165-1824	76165-1825	76165-1826	76165-1827	76165-1828
		76165-1833	76165-1834	76165-1835	76165-1836	76165-1837	76165-1838
		76165-2803	76165-2804	76165-2805	76165-2806	76165-2807	76165-2808
		76165-2813	76165-2814	76165-2815	76165-2816	76165-2817	76165-2818
		76165-2823	76165-2824	76165-2825	76165-2826	76165-2827	76165-2828
		76165-2833	76165-2834	76165-2835	76165-2836	76165-2837	76165-2838
		76165-2843	76165-2844	76165-2845	76165-2846	76165-2847	76165-2848
		76165-2853	76165-2854	76165-2855	76165-2856	76165-2857	76165-2858
		76165-2863	76165-2864	76165-2865	76165-2866	76165-2867	76165-2868
		76165-2873	76165-2874	76165-2875	76165-2876	76165-2877	76165-2878
		76165-2883	76165-2884	76165-2885	76165-2886	76165-2887	76165-2888
		76165-3803	76165-3804	76165-3805	76165-3806	76165-3807	76165-3808
		76165-3813	76165-3814	76165-3815	76165-3816	76165-3817	76165-3818
		76165-3823	76165-3824	76165-3825	76165-3826	76165-3827	76165-3828
		76165-3833	76165-3834	76165-3835	76165-3836	76165-3837	76165-3838
		76165-3843	76165-3844	76165-3845	76165-3846	76165-3847	76165-3848
		76165-3853	76165-3854	76165-3855	76165-3856	76165-3857	76165-3858
		76165-3863	76165-3864	76165-3865	76165-3866	76165-3867	76165-3868
		76165-3873	76165-3874	76165-3875	76165-3876	76165-3877	76165-3878
		76165-3883	76165-3884	76165-3885	76165-3886	76165-3887	76165-3888
		76165-4803	76165-4804	76165-4805	76165-4806	76165-4807	76165-4808
		76165-4813	76165-4814	76165-4815	76165-4816	76165-4817	76165-4818
		76165-4823	76165-4824	76165-4825	76165-4826	76165-4827	76165-4828
		76165-4833	76165-4834	76165-4835	76165-4836	76165-4837	76165-4838
		76165-4843	76165-4844	76165-4845	76165-4846	76165-4847	76165-4848
		76165-4853	76165-4854	76165-4855	76165-4856	76165-4857	76165-4858
		76165-4863	76165-4864	76165-4865	76165-4866	76165-4867	76165-4868
		76165-4873	76165-4874	76165-4875	76165-4876	76165-4877	76165-4878
		76165-4883	76165-4884	76165-4885	76165-4886	76165-4887	76165-4888
		76165-5803	76165-5804	76165-5805	76165-5806	76165-5807	76165-5808
		76165-5813	76165-5814	76165-5815	76165-5816	76165-5817	76165-5818
		76165-5823	76165-5824	76165-5825	76165-5826	76165-5827	76165-5828
		76165-5833	76165-5834	76165-5835	76165-5836	76165-5837	76165-5838
		76165-5843	76165-5844	76165-5845	76165-5846	76165-5847	76165-5848
		76165-5853	76165-5854	76165-5855	76165-5856	76165-5857	76165-5858
		76165-5863	76165-5864	76165-5865	76165-5866	76165-5867	76165-5868
		76165-5873	76165-5874	76165-5875	76165-5876	76165-5877	76165-5878
		76165-5883	76165-5884	76165-5885	76165-5886	76165-5887	76165-5888
		76165-6803	76165-6804	76165-6805	76165-6806	76165-6807	76165-6808
		76165-6813	76165-6814	76165-6815	76165-6816	76165-6817	76165-6818
		76165-6823	76165-6824	76165-6825	76165-6826	76165-6827	76165-6828
		76165-6833	76165-6834	76165-6835	76165-6836	76165-6837	76165-6838
		76165-6843	76165-6844	76165-6845	76165-6846	76165-6847	76165-6848
		76165-6853	76165-6854	76165-6855	76165-6856	76165-6857	76165-6858
		76165-6863	76165-6864	76165-6865	76165-6866	76165-6867	76165-6868
		76165-6873	76165-6874	76165-6875	76165-6876	76165-6877	76165-6878
		76165-6883	76165-6884	76165-6885	76165-6886	76165-6887	76165-6888
		76165-7803	76165-7804	76165-7805	76165-7806	76165-7807	76165-7808
76165-7813	76165-7814	76165-7815	76165-7816	76165-7817	76165-7818		
76165-7823	76165-7824	76165-7825	76165-7826	76165-7827	76165-7828		
76165-7833	76165-7834	76165-7835	76165-7836	76165-7837	76165-7838		
76165-7843	76165-7844	76165-7845	76165-7846	76165-7847	76165-7848		
76165-7853	76165-7854	76165-7855	76165-7856	76165-7857	76165-7858		
76165-7863	76165-7864	76165-7865	76165-7866	76165-7867	76165-7868		
76165-7873	76165-7874	76165-7875	76165-7876	76165-7877	76165-7878		
76165-7883	76165-7884	76165-7885	76165-7886	76165-7887	76165-7888		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76165	8	76165-8803	76165-8804	76165-8805	76165-8806	76165-8807	76165-8808
		76165-8813	76165-8814	76165-8815	76165-8816	76165-8817	76165-8818
		76165-8823	76165-8824	76165-8825	76165-8826	76165-8827	76165-8828
		76165-8833	76165-8834	76165-8835	76165-8836	76165-8837	76165-8838
		76165-8843	76165-8844	76165-8845	76165-8846	76165-8847	76165-8848
		76165-8853	76165-8854	76165-8855	76165-8856	76165-8857	76165-8858
		76165-8863	76165-8864	76165-8865	76165-8866	76165-8867	76165-8868
		76165-8873	76165-8874	76165-8875	76165-8876	76165-8877	76165-8878
		76165-8883	76165-8884	76165-8885	76165-8886	76165-8887	76165-8888
		76165-9803	76165-9804	76165-9805	76165-9806	76165-9807	76165-9808
		76165-9813	76165-9814	76165-9815	76165-9816	76165-9817	76165-9818
		76165-9823	76165-9824	76165-9825	76165-9826	76165-9827	76165-9828
		76165-9833	76165-9834	76165-9835	76165-9836	76165-9837	76165-9838
		76165-9843	76165-9844	76165-9845	76165-9846	76165-9847	76165-9848
	76165-9853	76165-9854	76165-9855	76165-9856	76165-9857	76165-9858	
	76165-9863	76165-9864	76165-9865	76165-9866	76165-9867	76165-9868	
	76165-9873	76165-9874	76165-9875	76165-9876	76165-9877	76165-9878	
	76165-9883	76165-9884	76165-9885	76165-9886	76165-9887	76165-9888	
	10	76165-0103	76165-0104	76165-0105	76165-0106	76165-0107	76165-0108
		76165-0113	76165-0114	76165-0115	76165-0116	76165-0117	76165-0128
		76165-0123	76165-0124	76165-0125	76165-0126	76165-0127	76165-0128
		76165-0133	76165-0134	76165-0135	76165-0136	76165-0137	76165-0138
		76165-1103	76165-1104	76165-1105	76165-1106	76165-1107	76165-1108
		76165-1113	76165-1114	76165-1115	76165-1116	76165-1117	76165-1128
		76165-1123	76165-1124	76165-1125	76165-1126	76165-1127	76165-1128
		76165-1133	76165-1134	76165-1135	76165-1136	76165-1137	76165-1138
		76165-2103	76165-2104	76165-2105	76165-2106	76165-2107	76165-2108
		76165-2113	76165-2114	76165-2115	76165-2116	76165-2117	76165-2118
76165-2123		76165-2124	76165-2125	76165-2126	76165-2127	76165-2128	
76165-2133		76165-2134	76165-2135	76165-2136	76165-2137	76165-2138	
76165-2143		76165-2144	76165-2145	76165-2146	76165-2147	76165-2148	
76165-2153		76165-2154	76165-2155	76165-2156	76165-2157	76165-2158	
76165-2163		76165-2164	76165-2165	76165-2166	76165-2167	76165-2168	
76165-2173		76165-2174	76165-2175	76165-2176	76165-2177	76165-2178	
76165-2183		76165-2184	76165-2185	76165-2186	76165-2187	76165-2188	
76165-3103		76165-3104	76165-3105	76165-3106	76165-3107	76165-3108	
76165-3113		76165-3114	76165-3115	76165-3116	76165-3117	76165-3118	
76165-3123		76165-3124	76165-3125	76165-3126	76165-3127	76165-3128	
76165-3133		76165-3134	76165-3135	76165-3136	76165-3137	76165-3138	
76165-3143		76165-3144	76165-3145	76165-3146	76165-3147	76165-3148	
76165-3153		76165-3154	76165-3155	76165-3156	76165-3157	76165-3158	
76165-3163		76165-3164	76165-3165	76165-3166	76165-3167	76165-3168	
76165-3173		76165-3174	76165-3175	76165-3176	76165-3177	76165-3178	
76165-3183		76165-3184	76165-3185	76165-3186	76165-3187	76165-3188	
76165-4103		76165-4104	76165-4105	76165-4106	76165-4107	76165-4108	
76165-4113		76165-4114	76165-4115	76165-4116	76165-4117	76165-4118	
76165-4123		76165-4124	76165-4125	76165-4126	76165-4127	76165-4128	
76165-4133		76165-4134	76165-4135	76165-4136	76165-4137	76165-4138	
76165-4143		76165-4144	76165-4145	76165-4146	76165-4147	76165-4148	
76165-4153		76165-4154	76165-4155	76165-4156	76165-4157	76165-4158	
76165-4163		76165-4164	76165-4165	76165-4166	76165-4167	76165-4168	
76165-4173		76165-4174	76165-4175	76165-4176	76165-4177	76165-4178	
76165-4183	76165-4184	76165-4185	76165-4186	76165-4187	76165-4188		
76165-5103	76165-5104	76165-5105	76165-5106	76165-5107	76165-5108		
76165-5113	76165-5114	76165-5115	76165-5116	76165-5117	76165-5118		
76165-5123	76165-5124	76165-5125	76165-5126	76165-5127	76165-5128		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76165	10	76165-5133	76165-5134	76165-5135	76165-5136	76165-5137	76165-5138
		76165-5143	76165-5144	76165-5145	76165-5146	76165-5147	76165-5148
		76165-5153	76165-5154	76165-5155	76165-5156	76165-5157	76165-5158
		76165-5163	76165-5164	76165-5165	76165-5166	76165-5167	76165-5168
		76165-5173	76165-5174	76165-5175	76165-5176	76165-5177	76165-5178
		76165-5183	76165-5184	76165-5185	76165-5186	76165-5187	76165-5188
		76165-6103	76165-6104	76165-6105	76165-6106	76165-6107	76165-6108
		76165-6113	76165-6114	76165-6115	76165-6116	76165-6117	76165-6118
		76165-6123	76165-6124	76165-6125	76165-6126	76165-6127	76165-6128
		76165-6133	76165-6134	76165-6135	76165-6136	76165-6137	76165-6138
		76165-6143	76165-6144	76165-6145	76165-6146	76165-6147	76165-6148
		76165-6153	76165-6154	76165-6155	76165-6156	76165-6157	76165-6158
		76165-6163	76165-6164	76165-6165	76165-6166	76165-6167	76165-6168
		76165-6173	76165-6174	76165-6175	76165-6176	76165-6177	76165-6178
		76165-6183	76165-6184	76165-6185	76165-6186	76165-6187	76165-6188
		76165-7103	76165-7104	76165-7105	76165-7106	76165-7107	76165-7108
		76165-7113	76165-7114	76165-7115	76165-7116	76165-7117	76165-7118
		76165-7123	76165-7124	76165-7125	76165-7126	76165-7127	76165-7128
		76165-7133	76165-7134	76165-7135	76165-7136	76165-7137	76165-7138
		76165-7143	76165-7144	76165-7145	76165-7146	76165-7147	76165-7148
		76165-7153	76165-7154	76165-7155	76165-7156	76165-7157	76165-7158
		76165-7163	76165-7164	76165-7165	76165-7166	76165-7167	76165-7168
		76165-7173	76165-7174	76165-7175	76165-7176	76165-7177	76165-7178
		76165-7183	76165-7184	76165-7185	76165-7186	76165-7187	76165-7188
		76165-8103	76165-8104	76165-8105	76165-8106	76165-8107	76165-8108
		76165-8113	76165-8114	76165-8115	76165-8116	76165-8117	76165-8118
		76165-8123	76165-8124	76165-8125	76165-8126	76165-8127	76165-8128
		76165-8133	76165-8134	76165-8135	76165-8136	76165-8137	76165-8138
		76165-8143	76165-8144	76165-8145	76165-8146	76165-8147	76165-8148
		76165-8153	76165-8154	76165-8155	76165-8156	76165-8157	76165-8158
	76165-8163	76165-8164	76165-8165	76165-8166	76165-8167	76165-8168	
	76165-8173	76165-8174	76165-8175	76165-8176	76165-8177	76165-8178	
	76165-8183	76165-8184	76165-8185	76165-8186	76165-8187	76165-8188	
	76165-9103	76165-9104	76165-9105	76165-9106	76165-9107	76165-9108	
	76165-9113	76165-9114	76165-9115	76165-9116	76165-9117	76165-9118	
	76165-9123	76165-9124	76165-9125	76165-9126	76165-9127	76165-9128	
	76165-9133	76165-9134	76165-9135	76165-9136	76165-9137	76165-9138	
	76165-9143	76165-9144	76165-9145	76165-9146	76165-9147	76165-9148	
	76165-9153	76165-9154	76165-9155	76165-9156	76165-9157	76165-9158	
	76165-9163	76165-9164	76165-9165	76165-9166	76165-9167	76165-9168	
	76165-9173	76165-9174	76165-9175	76165-9176	76165-9177	76165-9178	
	76165-9183	76165-9184	76165-9185	76165-9186	76165-9187	76165-9188	
	16	76165-0613	76165-0614	76165-0615	76165-0616	76165-0617	76165-0628
		76165-0623	76165-0624	76165-0625	76165-0626	76165-0627	76165-0628
		76165-0633	76165-0634	76165-0635	76165-0636	76165-0637	76165-0638
		76165-1603	76165-1604	76165-1605	76165-1606	76165-1607	76165-1608
		76165-1613	76165-1614	76165-1615	76165-1616	76165-1617	76165-1628
		76165-1623	76165-1624	76165-1625	76165-1626	76165-1627	76165-1628
76165-1633		76165-1634	76165-1635	76165-1636	76165-1637	76165-1638	
76165-2603		76165-2604	76165-2605	76165-2606	76165-2607	76165-2608	
76165-2613		76165-2614	76165-2615	76165-2616	76165-2617	76165-2618	
76165-2623		76165-2624	76165-2625	76165-2626	76165-2627	76165-2628	
76165-2633		76165-2634	76165-2635	76165-2636	76165-2637	76165-2638	
76165-2643		76165-2644	76165-2645	76165-2646	76165-2647	76165-2648	
76165-2653		76165-2654	76165-2655	76165-2656	76165-2657	76165-2658	
76165-2663		76165-2664	76165-2665	76165-2666	76165-2667	76165-2668	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76165	16	76165-2673	76165-2674	76165-2675	76165-2676	76165-2677	76165-2678
		76165-2683	76165-2684	76165-2685	76165-2686	76165-2687	76165-2688
		76165-3603	76165-3604	76165-3605	76165-3606	76165-3607	76165-3608
		76165-3613	76165-3614	76165-3615	76165-3616	76165-3617	76165-3618
		76165-3623	76165-3624	76165-3625	76165-3626	76165-3627	76165-3628
		76165-3633	76165-3634	76165-3635	76165-3636	76165-3637	76165-3638
		76165-3643	76165-3644	76165-3645	76165-3646	76165-3647	76165-3648
		76165-3653	76165-3654	76165-3655	76165-3656	76165-3657	76165-3658
		76165-3663	76165-3664	76165-3665	76165-3666	76165-3667	76165-3668
		76165-3673	76165-3674	76165-3675	76165-3676	76165-3677	76165-3678
		76165-3683	76165-3684	76165-3685	76165-3686	76165-3687	76165-3688
		76165-4603	76165-4604	76165-4605	76165-4606	76165-4607	76165-4608
		76165-4613	76165-4614	76165-4615	76165-4616	76165-4617	76165-4618
		76165-4623	76165-4624	76165-4625	76165-4626	76165-4627	76165-4628
		76165-4633	76165-4634	76165-4635	76165-4636	76165-4637	76165-4638
		76165-4643	76165-4644	76165-4645	76165-4646	76165-4647	76165-4648
		76165-4653	76165-4654	76165-4655	76165-4656	76165-4657	76165-4658
		76165-4663	76165-4664	76165-4665	76165-4666	76165-4667	76165-4668
		76165-4673	76165-4674	76165-4675	76165-4676	76165-4677	76165-4678
		76165-4683	76165-4684	76165-4685	76165-4686	76165-4687	76165-4688
		76165-5603	76165-5604	76165-5605	76165-5606	76165-5607	76165-5608
		76165-5613	76165-5614	76165-5615	76165-5616	76165-5617	76165-5618
		76165-5623	76165-5624	76165-5625	76165-5626	76165-5627	76165-5628
		76165-5633	76165-5634	76165-5635	76165-5636	76165-5637	76165-5638
		76165-5643	76165-5644	76165-5645	76165-5646	76165-5647	76165-5648
		76165-5653	76165-5654	76165-5655	76165-5656	76165-5657	76165-5658
		76165-5663	76165-5664	76165-5665	76165-5666	76165-5667	76165-5668
		76165-5673	76165-5674	76165-5675	76165-5676	76165-5677	76165-5678
		76165-5683	76165-5684	76165-5685	76165-5686	76165-5687	76165-5688
		76165-6603	76165-6604	76165-6605	76165-6606	76165-6607	76165-6608
		76165-6613	76165-6614	76165-6615	76165-6616	76165-6617	76165-6618
		76165-6623	76165-6624	76165-6625	76165-6626	76165-6627	76165-6628
		76165-6633	76165-6634	76165-6635	76165-6636	76165-6637	76165-6638
		76165-6643	76165-6644	76165-6645	76165-6646	76165-6647	76165-6648
		76165-6653	76165-6654	76165-6655	76165-6656	76165-6657	76165-6658
		76165-6663	76165-6664	76165-6665	76165-6666	76165-6667	76165-6668
		76165-6673	76165-6674	76165-6675	76165-6676	76165-6677	76165-6678
		76165-6683	76165-6684	76165-6685	76165-6686	76165-6687	76165-6688
		76165-7603	76165-7604	76165-7605	76165-7606	76165-7607	76165-7608
		76165-7613	76165-7614	76165-7615	76165-7616	76165-7617	76165-7618
		76165-7623	76165-7624	76165-7625	76165-7626	76165-7627	76165-7628
		76165-7633	76165-7634	76165-7635	76165-7636	76165-7637	76165-7638
		76165-7643	76165-7644	76165-7645	76165-7646	76165-7647	76165-7648
		76165-7653	76165-7654	76165-7655	76165-7656	76165-7657	76165-7658
		76165-7663	76165-7664	76165-7665	76165-7666	76165-7667	76165-7668
		76165-7673	76165-7674	76165-7675	76165-7676	76165-7677	76165-7678
		76165-7683	76165-7684	76165-7685	76165-7686	76165-7687	76165-7688
		76165-8603	76165-8604	76165-8605	76165-8606	76165-8607	76165-8608
76165-8613	76165-8614	76165-8615	76165-8616	76165-8617	76165-8618		
76165-8623	76165-8624	76165-8625	76165-8626	76165-8627	76165-8628		
76165-8633	76165-8634	76165-8635	76165-8636	76165-8637	76165-8638		
76165-8643	76165-8644	76165-8645	76165-8646	76165-8647	76165-8648		
76165-8653	76165-8654	76165-8655	76165-8656	76165-8657	76165-8658		
76165-8663	76165-8664	76165-8665	76165-8666	76165-8667	76165-8668		
76165-8673	76165-8674	76165-8675	76165-8676	76165-8677	76165-8678		
76165-8683	76165-8684	76165-8685	76165-8686	76165-8687	76165-8688		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 76155	16	76165-9603	76165-9604	76165-9605	76165-9606	76165-9607	76165-9608
		76165-9613	76165-9614	76165-9615	76165-9616	76165-9617	76165-9618
		76165-9623	76165-9624	76165-9625	76165-9626	76165-9627	76165-9628
		76165-9633	76165-9634	76165-9635	76165-9636	76165-9637	76165-9638
		76165-9643	76165-9644	76165-9645	76165-9646	76165-9647	76165-9648
		76165-9653	76165-9654	76165-9655	76165-9656	76165-9657	76165-9658
		76165-9663	76165-9664	76165-9665	76165-9666	76165-9667	76165-9668
		76165-9673	76165-9674	76165-9675	76165-9676	76165-9677	76165-9678
		76165-9683	76165-9684	76165-9685	76165-9686	76165-9687	76165-9688
Impact™ 76455	8	76455-0803	76455-0804	76455-0805	76455-0806	76455-0807	76455-0808
		76455-0813	76455-0814	76455-0815	76455-0816	76455-0817	76455-0818
		76455-0823	76455-0824	76455-0825	76455-0826	76455-0827	76455-0828
		76455-0833	76455-0834	76455-0835	76455-0836	76455-0837	76455-0838
		76455-1803	76455-1804	76455-1805	76455-1806	76455-1807	76455-1808
		76455-1813	76455-1814	76455-1815	76455-1816	76455-1817	76455-1818
		76455-1823	76455-1824	76455-1825	76455-1826	76455-1827	76455-1828
		76455-1833	76455-1834	76455-1835	76455-1836	76455-1837	76455-1838
		76455-2803	76455-2804	76455-2805	76455-2806	76455-2807	76455-2808
		76455-3803	76455-3804	76455-3805	76455-3806	76455-3807	76455-3808
		76455-4803	76455-4804	76455-4805	76455-4806	76455-4807	76455-4808
		76455-5803	76455-5804	76455-5805	76455-5806	76455-5807	76455-5808
		76455-6803	76455-6804	76455-6805	76455-6806	76455-6807	76455-6808
		76455-7803	76455-7804	76455-7805	76455-7806	76455-7807	76455-7808
	76455-8803	76455-8804	76455-8805	76455-8806	76455-8807	76455-8808	
	76455-9803	76455-9804	76455-9805	76455-9806	76455-9807	76455-9808	
	10	76455-0103	76455-0104	76455-0105	76455-0106	76455-0107	76455-0108
		76455-0113	76455-0114	76455-0115	76455-0116	76455-0117	76455-0118
		76455-0123	76455-0124	76455-0125	76455-0126	76455-0127	76455-0128
		76455-0133	76455-0134	76455-0135	76455-0136	76455-0137	76455-0138
		76455-1103	76455-1104	76455-1105	76455-1106	76455-1107	76455-1108
		76455-1113	76455-1114	76455-1115	76455-1116	76455-1117	76455-1118
		76455-1123	76455-1124	76455-1125	76455-1126	76455-1127	76455-1128
		76455-1133	76455-1134	76455-1135	76455-1136	76455-1137	76455-1138
		76455-2103	76455-2104	76455-2105	76455-2106	76455-2107	76455-2108
		76455-3103	76455-3104	76455-3105	76455-3106	76455-3107	76455-3108
		76455-4103	76455-4104	76455-4105	76455-4106	76455-4107	76455-4108
		76455-5103	76455-5104	76455-5105	76455-5106	76455-5107	76455-5108
76455-6103		76455-6104	76455-6105	76455-6106	76455-6107	76455-6108	
76455-7103		76455-7104	76455-7105	76455-7106	76455-7107	76455-7108	
76455-8103	76455-8104	76455-8105	76455-8106	76455-8107	76455-8108		
76455-9103	76455-9104	76455-9105	76455-9106	76455-9107	76455-9108		
16	76455-0603	76455-0604	76455-0605	76455-0606	76455-0607	76455-0608	
	76455-0613	76455-0614	76455-0615	76455-0616	76455-0617	76455-0618	
	76455-0623	76455-0624	76455-0625	76455-0626	76455-0627	76455-0628	
	76455-0633	76455-0634	76455-0635	76455-0636	76455-0637	76455-0638	
	76455-1603	76455-1604	76455-1605	76455-1606	76455-1607	76455-1608	
	76455-1613	76455-1614	76455-1615	76455-1616	76455-1617	76455-1618	
	76455-1623	76455-1624	76455-1625	76455-1626	76455-1627	76455-1628	
	76455-1633	76455-1634	76455-1635	76455-1636	76455-1637	76455-1638	
	76455-2603	76455-2604	76455-2605	76455-2606	76455-2607	76455-2608	
	76455-3603	76455-3604	76455-3605	76455-3606	76455-3607	76455-3608	
	76455-4603	76455-4604	76455-4605	76455-4606	76455-4607	76455-4608	
	76455-5603	76455-5604	76455-5605	76455-5606	76455-5607	76455-5608	
	76455-6603	76455-6604	76455-6605	76455-6606	76455-6607	76455-6608	
	76455-7603	76455-7604	76455-7605	76455-7606	76455-7607	76455-7608	
76455-8603	76455-8604	76455-8605	76455-8606	76455-8607	76455-8608		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
76455	16	76455-9603	76455-9604	76455-9605	76455-9606	76455-9607	76455-9608
Impact™ 170335	6	170335-1303	170335-1304	170335-1305	170335-1306	170335-1307	170335-1308
		170335-1313	170335-1314	170335-1315	170335-1316	170335-1317	170335-1318
		170335-1323	170335-1324	170335-1325	170335-1326	170335-1327	170335-1328
		170335-1333	170335-1334	170335-1335	170335-1336	170335-1337	170335-1338
		170335-3313	170335-3314	170335-3315	170335-3316	170335-3317	170335-3318
		170335-3323	170335-3324	170335-3325	170335-3326	170335-3327	170335-3328
		170335-3333	170335-3334	170335-3335	170335-3336	170335-3337	170335-3338
		170335-3343	170335-3344	170335-3345	170335-3346	170335-3347	170335-3348
		170335-3353	170335-3354	170335-3355	170335-3356	170335-3357	170335-3358
		170335-3363	170335-3364	170335-3365	170335-3366	170335-3367	170335-3368
		170335-3373	170335-3374	170335-3375	170335-3376	170335-3377	170335-3378
		170335-3383	170335-3384	170335-3385	170335-3386	170335-3387	170335-3388
		170335-5303	170335-5304	170335-5305	170335-5306	170335-5307	170335-5308
		170335-5313	170335-5314	170335-5315	170335-5316	170335-5317	170335-5318
		170335-5323	170335-5324	170335-5325	170335-5326	170335-5327	170335-5328
		170335-5333	170335-5334	170335-5335	170335-5336	170335-5337	170335-5338
		170335-5343	170335-5344	170335-5345	170335-5346	170335-5347	170335-5348
		170335-5353	170335-5354	170335-5355	170335-5356	170335-5357	170335-5358
		170335-5363	170335-5364	170335-5365	170335-5366	170335-5367	170335-5368
		170335-5373	170335-5374	170335-5375	170335-5376	170335-5377	170335-5378
		170335-5303	170335-5304	170335-5305	170335-5306	170335-5307	170335-5308
		170335-5313	170335-5314	170335-5315	170335-5316	170335-5317	170335-5318
		170335-7303	170335-7304	170335-7305	170335-7306	170335-7307	170335-7308
		170335-7313	170335-7314	170335-7315	170335-7316	170335-7317	170335-7318
		170335-7323	170335-7324	170335-7325	170335-7326	170335-7327	170335-7328
		170335-7333	170335-7334	170335-7335	170335-7336	170335-7337	170335-7338
		170335-7343	170335-7344	170335-7345	170335-7346	170335-7347	170335-7348
		170335-7353	170335-7354	170335-7355	170335-7356	170335-7357	170335-7358
	170335-7363	170335-7364	170335-7365	170335-7366	170335-7367	170335-7368	
	170335-7373	170335-7374	170335-7375	170335-7376	170335-7377	170335-7378	
	170335-7383	170335-7384	170335-7385	170335-7386	170335-7387	170335-7388	
	170335-9303	170335-9304	170335-9305	170335-9306	170335-9307	170335-9308	
	170335-9313	170335-9314	170335-9315	170335-9316	170335-9317	170335-9318	
	170335-9323	170335-9324	170335-9325	170335-9326	170335-9327	170335-9328	
	170335-9333	170335-9334	170335-9335	170335-9336	170335-9337	170335-9338	
	170335-9343	170335-9344	170335-9345	170335-9346	170335-9347	170335-9348	
	170335-9353	170335-9354	170335-9355	170335-9356	170335-9357	170335-9358	
	170335-9363	170335-9364	170335-9365	170335-9366	170335-9367	170335-9368	
	170335-9373	170335-9374	170335-9375	170335-9376	170335-9377	170335-9378	
	170335-9383	170335-9384	170335-9385	170335-9386	170335-9387	170335-9388	
	8	170335-1803	170335-1804	170335-1805	170335-1806	170335-1807	170335-1808
		170335-1813	170335-1814	170335-1815	170335-1816	170335-1817	170335-1818
		170335-1823	170335-1824	170335-1825	170335-1826	170335-1827	170335-1828
		170335-1833	170335-1834	170335-1835	170335-1836	170335-1837	170335-1838
		170335-3803	170335-3804	170335-3805	170335-3806	170335-3807	170335-3808
		170335-3813	170335-3814	170335-3815	170335-3816	170335-3817	170335-3818
		170335-3823	170335-3824	170335-3825	170335-3826	170335-3827	170335-3828
		170335-3833	170335-3834	170335-3835	170335-3836	170335-3837	170335-3838
170335-3843		170335-3844	170335-3845	170335-3846	170335-3847	170335-3848	
170335-3853		170335-3854	170335-3855	170335-3856	170335-3857	170335-3858	
170335-3863		170335-3864	170335-3865	170335-3866	170335-3867	170335-3868	
170335-3873		170335-3874	170335-3875	170335-3876	170335-3877	170335-3878	
170335-3883		170335-3884	170335-3885	170335-3886	170335-3887	170335-3888	
170335-5803		170335-5804	170335-5805	170335-5806	170335-5807	170335-5808	
170335-5813		170335-5814	170335-5815	170335-5816	170335-5817	170335-5818	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170335	8	170335-5823	170335-5824	170335-5825	170335-5826	170335-5827	170335-5828
		170335-5833	170335-5834	170335-5835	170335-5836	170335-5837	170335-5838
		170335-5843	170335-5844	170335-5845	170335-5846	170335-5847	170335-5848
		170335-5853	170335-5854	170335-5855	170335-5856	170335-5857	170335-5858
		170335-5863	170335-5864	170335-5865	170335-5866	170335-5867	170335-5868
		170335-5873	170335-5874	170335-5875	170335-5876	170335-5877	170335-5878
		170335-5883	170335-5884	170335-5885	170335-5886	170335-5887	170335-5888
		170335-7803	170335-7804	170335-7805	170335-7806	170335-7807	170335-7808
		170335-7813	170335-7814	170335-7815	170335-7816	170335-7817	170335-7818
		170335-7823	170335-7824	170335-7825	170335-7826	170335-7827	170335-7828
		170335-7833	170335-7834	170335-7835	170335-7836	170335-7837	170335-7838
		170335-7843	170335-7844	170335-7845	170335-7846	170335-7847	170335-7848
		170335-7853	170335-7854	170335-7855	170335-7856	170335-7857	170335-7858
		170335-7863	170335-7864	170335-7865	170335-7866	170335-7867	170335-7868
		170335-7873	170335-7874	170335-7875	170335-7876	170335-7877	170335-7878
		170335-7883	170335-7884	170335-7885	170335-7886	170335-7887	170335-7888
		170335-9803	170335-9804	170335-9805	170335-9806	170335-9807	170335-9808
		170335-9813	170335-9814	170335-9815	170335-9816	170335-9817	170335-9818
		170335-9823	170335-9824	170335-9825	170335-9826	170335-9827	170335-9828
		170335-9833	170335-9834	170335-9835	170335-9836	170335-9837	170335-9838
		170335-9843	170335-9844	170335-9845	170335-9846	170335-9847	170335-9848
		170335-9853	170335-9854	170335-9855	170335-9856	170335-9857	170335-9858
		170335-9863	170335-9864	170335-9865	170335-9866	170335-9867	170335-9868
		170335-9873	170335-9874	170335-9875	170335-9876	170335-9877	170335-9878
	170335-9883	170335-9884	170335-9885	170335-9886	170335-9887	170335-9888	
	10	170335-1103	170335-1104	170335-1105	170335-1106	170335-1107	170335-1108
		170335-1113	170335-1114	170335-1115	170335-1116	170335-1117	170335-1118
		170335-1123	170335-1124	170335-1125	170335-1126	170335-1127	170335-1128
		170335-1133	170335-1134	170335-1135	170335-1136	170335-1137	170335-1138
		170335-3103	170335-3104	170335-3105	170335-3106	170335-3107	170335-3108
		170335-3113	170335-3114	170335-3115	170335-3116	170335-3117	170335-3118
		170335-3123	170335-3124	170335-3125	170335-3126	170335-3127	170335-3128
		170335-3133	170335-3134	170335-3135	170335-3136	170335-3137	170335-3138
		170335-3143	170335-3144	170335-3145	170335-3146	170335-3147	170335-3148
170335-3153		170335-3154	170335-3155	170335-3156	170335-3157	170335-3158	
170335-3163		170335-3164	170335-3165	170335-3166	170335-3167	170335-3168	
170335-3173		170335-3174	170335-3175	170335-3176	170335-3177	170335-3178	
170335-3183		170335-3184	170335-3185	170335-3186	170335-3187	170335-3188	
170335-5103		170335-5104	170335-5105	170335-5106	170335-5107	170335-5108	
170335-5113		170335-5114	170335-5115	170335-5116	170335-5117	170335-5118	
170335-5123		170335-5124	170335-5125	170335-5126	170335-5127	170335-5128	
170335-5133		170335-5134	170335-5135	170335-5136	170335-5137	170335-5138	
170335-5143		170335-5144	170335-5145	170335-5146	170335-5147	170335-5148	
170335-5153		170335-5154	170335-5155	170335-5156	170335-5157	170335-5158	
170335-5163		170335-5164	170335-5165	170335-5166	170335-5167	170335-5168	
170335-5173		170335-5174	170335-5175	170335-5176	170335-5177	170335-5178	
170335-5183		170335-5184	170335-5185	170335-5186	170335-5187	170335-5188	
170335-7103		170335-7104	170335-7105	170335-7106	170335-7107	170335-7108	
170335-7113		170335-7114	170335-7115	170335-7116	170335-7117	170335-7118	
170335-7123		170335-7124	170335-7125	170335-7126	170335-7127	170335-7128	
170335-7133		170335-7134	170335-7135	170335-7136	170335-7137	170335-7138	
170335-7143	170335-7144	170335-7145	170335-7146	170335-7147	170335-7148		
170335-7153	170335-7154	170335-7155	170335-7156	170335-7157	170335-7158		
170335-7163	170335-7164	170335-7165	170335-7166	170335-7167	170335-7168		
170335-7173	170335-7174	170335-7175	170335-7176	170335-7177	170335-7178		
170335-7183	170335-7184	170335-7185	170335-7186	170335-7187	170335-7188		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170335		170335-9103	170335-9104	170335-9105	170335-9106	170335-9107	170335-9108
		170335-9113	170335-9114	170335-9115	170335-9116	170335-9117	170335-9118
		170335-9123	170335-9124	170335-9125	170335-9126	170335-9127	170335-9128
		170335-9133	170335-9134	170335-9135	170335-9136	170335-9137	170335-9138
		170335-9143	170335-9144	170335-9145	170335-9146	170335-9147	170335-9148
		170335-9153	170335-9154	170335-9155	170335-9156	170335-9157	170335-9158
		170335-9163	170335-9164	170335-9165	170335-9166	170335-9167	170335-9168
		170335-9173	170335-9174	170335-9175	170335-9176	170335-9177	170335-9178
	170335-9183	170335-9184	170335-9185	170335-9186	170335-9187	170335-9188	
	12	170335-1203	170335-1204	170335-1205	170335-1206	170335-1207	170335-1208
		170335-1213	170335-1214	170335-1215	170335-1216	170335-1217	170335-1218
		170335-1223	170335-1224	170335-1225	170335-1226	170335-1227	170335-1228
		170335-1233	170335-1234	170335-1235	170335-1236	170335-1237	170335-1238
		170335-3203	170335-3204	170335-3205	170335-3206	170335-3207	170335-3208
		170335-3213	170335-3214	170335-3215	170335-3216	170335-3217	170335-3218
		170335-3223	170335-3224	170335-3225	170335-3226	170335-3227	170335-3228
		170335-3233	170335-3234	170335-3235	170335-3236	170335-3237	170335-3238
		170335-3243	170335-3244	170335-3245	170335-3246	170335-3247	170335-3248
		170335-3253	170335-3254	170335-3255	170335-3256	170335-3257	170335-3258
		170335-3263	170335-3264	170335-3265	170335-3266	170335-3267	170335-3268
		170335-3273	170335-3274	170335-3275	170335-3276	170335-3277	170335-3278
		170335-3283	170335-3284	170335-3285	170335-3286	170335-3287	170335-3288
		170335-5203	170335-5204	170335-5205	170335-5206	170335-5207	170335-5208
		170335-5213	170335-5214	170335-5215	170335-5216	170335-5217	170335-5218
		170335-5223	170335-5224	170335-5225	170335-5226	170335-5227	170335-5228
		170335-5233	170335-5234	170335-5235	170335-5236	170335-5237	170335-5238
		170335-5243	170335-5244	170335-5245	170335-5246	170335-5247	170335-5248
		170335-5253	170335-5254	170335-5255	170335-5256	170335-5257	170335-5258
		170335-5263	170335-5264	170335-5265	170335-5266	170335-5267	170335-5268
		170335-5273	170335-5274	170335-5275	170335-5276	170335-5277	170335-5278
		170335-5283	170335-5284	170335-5285	170335-5286	170335-5287	170335-5288
		170335-7203	170335-7204	170335-7205	170335-7206	170335-7207	170335-7208
		170335-7213	170335-7214	170335-7215	170335-7216	170335-7217	170335-7218
		170335-7223	170335-7224	170335-7225	170335-7226	170335-7227	170335-7228
		170335-7233	170335-7234	170335-7235	170335-7236	170335-7237	170335-7238
		170335-7243	170335-7244	170335-7245	170335-7246	170335-7247	170335-7248
		170335-7253	170335-7254	170335-7255	170335-7256	170335-7257	170335-7258
		170335-7263	170335-7264	170335-7265	170335-7266	170335-7267	170335-7268
		170335-7273	170335-7274	170335-7275	170335-7276	170335-7277	170335-7278
		170335-7283	170335-7284	170335-7285	170335-7286	170335-7287	170335-7288
		170335-9203	170335-9204	170335-9205	170335-9206	170335-9207	170335-9208
	170335-9213	170335-9214	170335-9215	170335-9216	170335-9217	170335-9218	
170335-9223	170335-9224	170335-9225	170335-9226	170335-9227	170335-9228		
170335-9233	170335-9234	170335-9235	170335-9236	170335-9237	170335-9238		
170335-9243	170335-9244	170335-9245	170335-9246	170335-9247	170335-9248		
170335-9253	170335-9254	170335-9255	170335-9256	170335-9257	170335-9258		
170335-9263	170335-9264	170335-9265	170335-9266	170335-9267	170335-9268		
170335-9273	170335-9274	170335-9275	170335-9276	170335-9277	170335-9278		
170335-9283	170335-9284	170335-9285	170335-9286	170335-9287	170335-9288		
14	170335-1403	170335-1404	170335-1405	170335-1406	170335-1407	170335-1408	
	170335-1413	170335-1414	170335-1415	170335-1416	170335-1417	170335-1418	
	170335-1423	170335-1424	170335-1425	170335-1426	170335-1427	170335-1428	
	170335-1433	170335-1434	170335-1435	170335-1436	170335-1437	170335-1438	
	170335-3403	170335-3404	170335-3405	170335-3406	170335-3407	170335-3408	
	170335-3413	170335-3414	170335-3415	170335-3416	170335-3417	170335-3418	
170335-3423	170335-3424	170335-3425	170335-3426	170335-3427	170335-3428		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
Impact™ 170335	14	170335-3433	170335-3434	170335-3435	170335-3436	170335-3437	170335-3438	
		170335-3443	170335-3444	170335-3445	170335-3446	170335-3447	170335-3448	
		170335-3453	170335-3454	170335-3455	170335-3456	170335-3457	170335-3458	
		170335-3463	170335-3464	170335-3465	170335-3466	170335-3467	170335-3468	
		170335-3473	170335-3474	170335-3475	170335-3476	170335-3477	170335-3478	
		170335-3483	170335-3484	170335-3485	170335-3486	170335-3487	170335-3488	
		170335-5403	170335-5404	170335-5405	170335-5406	170335-5407	170335-5408	
		170335-5413	170335-5414	170335-5415	170335-5416	170335-5417	170335-5418	
		170335-5423	170335-5424	170335-5425	170335-5426	170335-5427	170335-5428	
		170335-5433	170335-5434	170335-5435	170335-5436	170335-5437	170335-5438	
		170335-5443	170335-5444	170335-5445	170335-5446	170335-5447	170335-5448	
		170335-5453	170335-5454	170335-5455	170335-5456	170335-5457	170335-5458	
		170335-5463	170335-5464	170335-5465	170335-5466	170335-5467	170335-5468	
		170335-5473	170335-5474	170335-5475	170335-5476	170335-5477	170335-5478	
		170335-5483	170335-5484	170335-5485	170335-5486	170335-5487	170335-5488	
		170335-7403	170335-7404	170335-7405	170335-7406	170335-7407	170335-7408	
		170335-7413	170335-7414	170335-7415	170335-7416	170335-7417	170335-7418	
		170335-7423	170335-7424	170335-7425	170335-7426	170335-7427	170335-7428	
		170335-7433	170335-7434	170335-7435	170335-7436	170335-7437	170335-7438	
		170335-7443	170335-7444	170335-7445	170335-7446	170335-7447	170335-7448	
		170335-7453	170335-7454	170335-7455	170335-7456	170335-7457	170335-7458	
		170335-7463	170335-7464	170335-7465	170335-7466	170335-7467	170335-7468	
		170335-7473	170335-7474	170335-7475	170335-7476	170335-7477	170335-7478	
		170335-7483	170335-7484	170335-7485	170335-7486	170335-7487	170335-7488	
		170335-9403	170335-9404	170335-9405	170335-9406	170335-9407	170335-9408	
		170335-9413	170335-9414	170335-9415	170335-9416	170335-9417	170335-9418	
		170335-9423	170335-9424	170335-9425	170335-9426	170335-9427	170335-9428	
		170335-9433	170335-9434	170335-9435	170335-9436	170335-9437	170335-9438	
		170335-9443	170335-9444	170335-9445	170335-9446	170335-9447	170335-9448	
		170335-9453	170335-9454	170335-9455	170335-9456	170335-9457	170335-9458	
		170335-9463	170335-9464	170335-9465	170335-9466	170335-9467	170335-9468	
		170335-9473	170335-9474	170335-9475	170335-9476	170335-9477	170335-9478	
		170335-9483	170335-9484	170335-9485	170335-9486	170335-9487	170335-9488	
		16	170335-1603	170335-1604	170335-1605	170335-1606	170335-1607	170335-1608
			170335-1613	170335-1614	170335-1615	170335-1616	170335-1617	170335-1618
			170335-1623	170335-1624	170335-1625	170335-1626	170335-1627	170335-1628
			170335-1633	170335-1634	170335-1635	170335-1636	170335-1637	170335-1638
			170335-3603	170335-3604	170335-3605	170335-3606	170335-3607	170335-3608
			170335-3613	170335-3614	170335-3615	170335-3616	170335-3617	170335-3618
			170335-3623	170335-3624	170335-3625	170335-3626	170335-3627	170335-3628
			170335-3633	170335-3634	170335-3635	170335-3636	170335-3637	170335-3638
			170335-3643	170335-3644	170335-3645	170335-3646	170335-3647	170335-3648
170335-3653	170335-3654		170335-3655	170335-3656	170335-3657	170335-3658		
170335-3663	170335-3664		170335-3665	170335-3666	170335-3667	170335-3668		
170335-3673	170335-3674		170335-3675	170335-3676	170335-3677	170335-3678		
170335-3683	170335-3684		170335-3685	170335-3686	170335-3687	170335-3688		
170335-5603	170335-5604		170335-5605	170335-5606	170335-5607	170335-5608		
170335-5613	170335-5614		170335-5615	170335-5616	170335-5617	170335-5618		
170335-5623	170335-5624		170335-5625	170335-5626	170335-5627	170335-5628		
170335-5633	170335-5634		170335-5635	170335-5636	170335-5637	170335-5638		
170335-5643	170335-5644		170335-5645	170335-5646	170335-5647	170335-5648		
170335-5653	170335-5654		170335-5655	170335-5656	170335-5657	170335-5658		
170335-5663	170335-5664		170335-5665	170335-5666	170335-5667	170335-5668		
170335-5673	170335-5674		170335-5675	170335-5676	170335-5677	170335-5678		
170335-5683	170335-5684		170335-5685	170335-5686	170335-5687	170335-5688		
170335-7603	170335-7604		170335-7605	170335-7606	170335-7607	170335-7608		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170335	16	170335-7613	170335-7614	170335-7615	170335-7616	170335-7617	170335-7618
		170335-7623	170335-7624	170335-7625	170335-7626	170335-7627	170335-7628
		170335-7633	170335-7634	170335-7635	170335-7636	170335-7637	170335-7638
		170335-7643	170335-7644	170335-7645	170335-7646	170335-7647	170335-7648
		170335-7653	170335-7654	170335-7655	170335-7656	170335-7657	170335-7658
		170335-7663	170335-7664	170335-7665	170335-7666	170335-7667	170335-7668
		170335-7673	170335-7674	170335-7675	170335-7676	170335-7677	170335-7678
		170335-7683	170335-7684	170335-7685	170335-7686	170335-7687	170335-7688
		170335-9603	170335-9604	170335-9605	170335-9606	170335-9607	170335-9608
		170335-9613	170335-9614	170335-9615	170335-9616	170335-9617	170335-9618
		170335-9623	170335-9624	170335-9625	170335-9626	170335-9627	170335-9628
		170335-9633	170335-9634	170335-9635	170335-9636	170335-9637	170335-9638
		170335-9643	170335-9644	170335-9645	170335-9646	170335-9647	170335-9648
		170335-9653	170335-9654	170335-9655	170335-9656	170335-9657	170335-9658
		170335-9663	170335-9664	170335-9665	170335-9666	170335-9667	170335-9668
		170335-9673	170335-9674	170335-9675	170335-9676	170335-9677	170335-9678
		170335-9683	170335-9684	170335-9685	170335-9686	170335-9687	170335-9688
		18	170335-7903	170335-7904	170335-7905	170335-7906	170335-7907
Impact™ 170475	10	170475-1103	170475-1104	170475-1105	170475-1106	170475-1107	170475-1108
		170475-1113	170475-1114	170475-1115	170475-1116	170475-1117	170475-1118
		170475-1123	170475-1124	170475-1125	170475-1126	170475-1127	170475-1128
		170475-1133	170475-1134	170475-1135	170475-1136	170475-1137	170475-1138
		170475-3103	170475-3104	170475-3105	170475-3106	170475-3107	170475-3108
		170475-3113	170475-3114	170475-3115	170475-3116	170475-3117	170475-3118
		170475-3123	170475-3124	170475-3125	170475-3126	170475-3127	170475-3128
		170475-3133	170475-3134	170475-3135	170475-3136	170475-3137	170475-3138
		170475-3143	170475-3144	170475-3145	170475-3146	170475-3147	170475-3148
		170475-3153	170475-3154	170475-3155	170475-3156	170475-3157	170475-3158
		170475-3163	170475-3164	170475-3165	170475-3166	170475-3167	170475-3168
		170475-3173	170475-3174	170475-3175	170475-3176	170475-3177	170475-3178
		170475-3183	170475-3184	170475-3185	170475-3186	170475-3187	170475-3188
		170475-5103	170475-5104	170475-5105	170475-5106	170475-5107	170475-5108
		170475-5113	170475-5114	170475-5115	170475-5116	170475-5117	170475-5118
		170475-5123	170475-5124	170475-5125	170475-5126	170475-5127	170475-5128
		170475-5133	170475-5134	170475-5135	170475-5136	170475-5137	170475-5138
		170475-5143	170475-5144	170475-5145	170475-5146	170475-5147	170475-5148
		170475-5153	170475-5154	170475-5155	170475-5156	170475-5157	170475-5158
		170475-5163	170475-5164	170475-5165	170475-5166	170475-5167	170475-5168
		170475-5173	170475-5174	170475-5175	170475-5176	170475-5177	170475-5178
		170475-5183	170475-5184	170475-5185	170475-5186	170475-5187	170475-5188
		170475-7103	170475-7104	170475-7105	170475-7106	170475-7107	170475-7108
		170475-7113	170475-7114	170475-7115	170475-7116	170475-7117	170475-7118
		170475-7123	170475-7124	170475-7125	170475-7126	170475-7127	170475-7128
		170475-7133	170475-7134	170475-7135	170475-7136	170475-7137	170475-7138
		170475-7143	170475-7144	170475-7145	170475-7146	170475-7147	170475-7148
		170475-7153	170475-7154	170475-7155	170475-7156	170475-7157	170475-7158
		170475-7163	170475-7164	170475-7165	170475-7166	170475-7167	170475-7168
		170475-7173	170475-7174	170475-7175	170475-7176	170475-7177	170475-7178
		170475-7183	170475-7184	170475-7185	170475-7186	170475-7187	170475-7188
		170475-9103	170475-9104	170475-9105	170475-9106	170475-9107	170475-9108
		170475-9113	170475-9114	170475-9115	170475-9116	170475-9117	170475-9118
170475-9123	170475-9124	170475-9125	170475-9126	170475-9127	170475-9128		
170475-9133	170475-9134	170475-9135	170475-9136	170475-9137	170475-9138		
170475-9143	170475-9144	170475-9145	170475-9146	170475-9147	170475-9148		
170475-9153	170475-9154	170475-9155	170475-9156	170475-9157	170475-9158		
170475-9163	170475-9164	170475-9165	170475-9166	170475-9167	170475-9168		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170475	10	170475-9173	170475-9174	170475-9175	170475-9176	170475-9177	170475-9178
		170475-9183	170475-9184	170475-9185	170475-9186	170475-9187	170475-9188
	12	170475-1203	170475-1204	170475-1205	170475-1206	170475-1207	170475-1208
		170475-1213	170475-1214	170475-1215	170475-1216	170475-1217	170475-1218
		170475-1223	170475-1224	170475-1225	170475-1226	170475-1227	170475-1228
		170475-1233	170475-1234	170475-1235	170475-1236	170475-1237	170475-1238
		170475-3203	170475-3204	170475-3205	170475-3206	170475-3207	170475-3208
		170475-3213	170475-3214	170475-3215	170475-3216	170475-3217	170475-3218
		170475-3223	170475-3224	170475-3225	170475-3226	170475-3227	170475-3228
		170475-3233	170475-3234	170475-3235	170475-3236	170475-3237	170475-3238
		170475-3243	170475-3244	170475-3245	170475-3246	170475-3247	170475-3248
		170475-3253	170475-3254	170475-3255	170475-3256	170475-3257	170475-3258
		170475-3263	170475-3264	170475-3265	170475-3266	170475-3267	170475-3268
		170475-3273	170475-3274	170475-3275	170475-3276	170475-3277	170475-3278
		170475-3283	170475-3284	170475-3285	170475-3286	170475-3287	170475-3288
		170475-5203	170475-5204	170475-5205	170475-5206	170475-5207	170475-5208
		170475-5213	170475-5214	170475-5215	170475-5216	170475-5217	170475-5218
		170475-5223	170475-5224	170475-5225	170475-5226	170475-5227	170475-5228
		170475-5233	170475-5234	170475-5235	170475-5236	170475-5237	170475-5238
		170475-5243	170475-5244	170475-5245	170475-5246	170475-5247	170475-5248
		170475-5253	170475-5254	170475-5255	170475-5256	170475-5257	170475-5258
		170475-5263	170475-5264	170475-5265	170475-5266	170475-5267	170475-5268
		170475-5273	170475-5274	170475-5275	170475-5276	170475-5277	170475-5278
		170475-5283	170475-5284	170475-5285	170475-5286	170475-5287	170475-5288
		170475-7203	170475-7204	170475-7205	170475-7206	170475-7207	170475-7208
		170475-7213	170475-7214	170475-7215	170475-7216	170475-7217	170475-7218
		170475-7223	170475-7224	170475-7225	170475-7226	170475-7227	170475-7228
		170475-7233	170475-7234	170475-7235	170475-7236	170475-7237	170475-7238
		170475-7243	170475-7244	170475-7245	170475-7246	170475-7247	170475-7248
		170475-7253	170475-7254	170475-7255	170475-7256	170475-7257	170475-7258
		170475-7263	170475-7264	170475-7265	170475-7266	170475-7267	170475-7268
		170475-7273	170475-7274	170475-7275	170475-7276	170475-7277	170475-7278
		170475-7283	170475-7284	170475-7285	170475-7286	170475-7287	170475-7288
		170475-9203	170475-9204	170475-9205	170475-9206	170475-9207	170475-9208
		170475-9213	170475-9214	170475-9215	170475-9216	170475-9217	170475-9218
	170475-9223	170475-9224	170475-9225	170475-9226	170475-9227	170475-9228	
	170475-9233	170475-9234	170475-9235	170475-9236	170475-9237	170475-9238	
	170475-9243	170475-9244	170475-9245	170475-9246	170475-9247	170475-9248	
	170475-9253	170475-9254	170475-9255	170475-9256	170475-9257	170475-9258	
	170475-9263	170475-9264	170475-9265	170475-9266	170475-9267	170475-9268	
	170475-9273	170475-9274	170475-9275	170475-9276	170475-9277	170475-9278	
	170475-9283	170475-9284	170475-9285	170475-9286	170475-9287	170475-9288	
	16	170475-1603	170475-1604	170475-1605	170475-1606	170475-1607	170475-1608
		170475-1613	170475-1614	170475-1615	170475-1616	170475-1617	170475-1618
		170475-1623	170475-1624	170475-1625	170475-1626	170475-1627	170475-1628
		170475-1633	170475-1634	170475-1635	170475-1636	170475-1637	170475-1638
		170475-3603	170475-3604	170475-3605	170475-3606	170475-3607	170475-3608
170475-3613		170475-3614	170475-3615	170475-3616	170475-3617	170475-3618	
170475-3623		170475-3624	170475-3625	170475-3626	170475-3627	170475-3628	
170475-3633		170475-3634	170475-3635	170475-3636	170475-3637	170475-3638	
170475-3643		170475-3644	170475-3645	170475-3646	170475-3647	170475-3648	
170475-3653		170475-3654	170475-3655	170475-3656	170475-3657	170475-3658	
170475-3663		170475-3664	170475-3665	170475-3666	170475-3667	170475-3668	
170475-3673		170475-3674	170475-3675	170475-3676	170475-3677	170475-3678	
170475-3683		170475-3684	170475-3685	170475-3686	170475-3687	170475-3688	
170475-5613	170475-5614	170475-5615	170475-5616	170475-5617	170475-5618		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170475	16	170475-5623	170475-5624	170475-5625	170475-5626	170475-5627	170475-5628
		170475-5633	170475-5634	170475-5635	170475-5636	170475-5637	170475-5638
		170475-5643	170475-5644	170475-5645	170475-5646	170475-5647	170475-5648
		170475-5653	170475-5654	170475-5655	170475-5656	170475-5657	170475-5658
		170475-5663	170475-5664	170475-5665	170475-5666	170475-5667	170475-5668
		170475-5673	170475-5674	170475-5675	170475-5676	170475-5677	170475-5678
		170475-5683	170475-5684	170475-5685	170475-5686	170475-5687	170475-5688
		170475-7603	170475-7604	170475-7605	170475-7606	170475-7607	170475-7608
		170475-7613	170475-7614	170475-7615	170475-7616	170475-7617	170475-7618
		170475-7623	170475-7624	170475-7625	170475-7626	170475-7627	170475-7628
		170475-7633	170475-7634	170475-7635	170475-7636	170475-7637	170475-7638
		170475-7643	170475-7644	170475-7645	170475-7646	170475-7647	170475-7648
		170475-7653	170475-7654	170475-7655	170475-7656	170475-7657	170475-7658
		170475-7663	170475-7664	170475-7665	170475-7666	170475-7667	170475-7668
		170475-7673	170475-7674	170475-7675	170475-7676	170475-7677	170475-7678
		170475-7683	170475-7684	170475-7685	170475-7686	170475-7687	170475-7688
		170475-9603	170475-9604	170475-9605	170475-9606	170475-9607	170475-9608
		170475-9613	170475-9614	170475-9615	170475-9616	170475-9617	170475-9618
		170475-9623	170475-9624	170475-9625	170475-9626	170475-9627	170475-9628
		170475-9633	170475-9634	170475-9635	170475-9636	170475-9637	170475-9638
		170475-9643	170475-9644	170475-9645	170475-9646	170475-9647	170475-9648
		170475-9653	170475-9654	170475-9655	170475-9656	170475-9657	170475-9658
		170475-9663	170475-9664	170475-9665	170475-9666	170475-9667	170475-9668
		170475-9673	170475-9674	170475-9675	170475-9676	170475-9677	170475-9678
170475-9683	170475-9684	170475-9685	170475-9686	170475-9687	170475-9688		
Impact™ 170515	8	170515-1803	170515-1804	170515-1805	170515-1806	170515-1807	170515-1808
		170515-1813	170515-1814	170515-1815	170515-1816	170515-1817	170515-1818
		170515-1823	170515-1824	170515-1825	170515-1826	170515-1827	170515-1828
		170515-1833	170515-1834	170515-1835	170515-1836	170515-1837	170515-1838
		170515-3803	170515-3804	170515-3805	170515-3806	170515-3807	170515-3808
		170515-3813	170515-3814	170515-3815	170515-3816	170515-3817	170515-3818
		170515-3823	170515-3824	170515-3825	170515-3826	170515-3827	170515-3828
		170515-3833	170515-3834	170515-3835	170515-3836	170515-3837	170515-3838
		170515-3843	170515-3844	170515-3845	170515-3846	170515-3847	170515-3848
		170515-3853	170515-3854	170515-3855	170515-3856	170515-3857	170515-3858
		170515-3863	170515-3864	170515-3865	170515-3866	170515-3867	170515-3868
		170515-3873	170515-3874	170515-3875	170515-3876	170515-3877	170515-3878
		170515-3883	170515-3884	170515-3885	170515-3886	170515-3887	170515-3888
		170515-5803	170515-5804	170515-5805	170515-5806	170515-5807	170515-5808
		170515-5813	170515-5814	170515-5815	170515-5816	170515-5817	170515-5818
		170515-5823	170515-5824	170515-5825	170515-5826	170515-5827	170515-5828
		170515-5833	170515-5834	170515-5835	170515-5836	170515-5837	170515-5838
		170515-5843	170515-5844	170515-5845	170515-5846	170515-5847	170515-5848
		170515-5853	170515-5854	170515-5855	170515-5856	170515-5857	170515-5858
		170515-5863	170515-5864	170515-5865	170515-5866	170515-5867	170515-5868
		170515-5873	170515-5874	170515-5875	170515-5876	170515-5877	170515-5878
		170515-5883	170515-5884	170515-5885	170515-5886	170515-5887	170515-5888
		170515-7803	170515-7804	170515-7805	170515-7806	170515-7807	170515-7808
		170515-7813	170515-7814	170515-7815	170515-7816	170515-7817	170515-7818
		170515-7823	170515-7824	170515-7825	170515-7826	170515-7827	170515-7828
		170515-7833	170515-7834	170515-7835	170515-7836	170515-7837	170515-7838
		170515-7843	170515-7844	170515-7845	170515-7846	170515-7847	170515-7848
		170515-7853	170515-7854	170515-7855	170515-7856	170515-7857	170515-7858
170515-7863	170515-7864	170515-7865	170515-7866	170515-7867	170515-7868		
170515-7873	170515-7874	170515-7875	170515-7876	170515-7877	170515-7878		
170515-7883	170515-7884	170515-7885	170515-7886	170515-7887	170515-7888		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170515	8	170515-9803	170515-9804	170515-9805	170515-9806	170515-9807	170515-9808
		170515-9813	170515-9814	170515-9815	170515-9816	170515-9817	170515-9818
		170515-9823	170515-9824	170515-9825	170515-9826	170515-9827	170515-9828
		170515-9833	170515-9834	170515-9835	170515-9836	170515-9837	170515-9838
		170515-9843	170515-9844	170515-9845	170515-9846	170515-9847	170515-9848
		170515-9853	170515-9854	170515-9855	170515-9856	170515-9857	170515-9858
		170515-9863	170515-9864	170515-9865	170515-9866	170515-9867	170515-9868
		170515-9873	170515-9874	170515-9875	170515-9876	170515-9877	170515-9878
	170515-9883	170515-9884	170515-9885	170515-9886	170515-9887	170515-9888	
	10	170515-1103	170515-1104	170515-1105	170515-1106	170515-1107	170515-1108
		170515-1113	170515-1114	170515-1115	170515-1116	170515-1117	170515-1118
		170515-1123	170515-1124	170515-1125	170515-1126	170515-1127	170515-1128
		170515-1133	170515-1134	170515-1135	170515-1136	170515-1137	170515-1138
		170515-3103	170515-3104	170515-3105	170515-3106	170515-3107	170515-3108
		170515-3113	170515-3114	170515-3115	170515-3116	170515-3117	170515-3118
		170515-3123	170515-3124	170515-3125	170515-3126	170515-3127	170515-3128
		170515-3133	170515-3134	170515-3135	170515-3136	170515-3137	170515-3138
		170515-3143	170515-3144	170515-3145	170515-3146	170515-3147	170515-3148
		170515-3153	170515-3154	170515-3155	170515-3156	170515-3157	170515-3158
		170515-3163	170515-3164	170515-3165	170515-3166	170515-3167	170515-3168
		170515-3173	170515-3174	170515-3175	170515-3176	170515-3177	170515-3178
		170515-3183	170515-3184	170515-3185	170515-3186	170515-3187	170515-3188
		170515-5103	170515-5104	170515-5105	170515-5106	170515-5107	170515-5108
		170515-5113	170515-5114	170515-5115	170515-5116	170515-5117	170515-5118
		170515-5123	170515-5124	170515-5125	170515-5126	170515-5127	170515-5128
		170515-5133	170515-5134	170515-5135	170515-5136	170515-5137	170515-5138
		170515-5143	170515-5144	170515-5145	170515-5146	170515-5147	170515-5148
		170515-5153	170515-5154	170515-5155	170515-5156	170515-5157	170515-5158
		170515-5163	170515-5164	170515-5165	170515-5166	170515-5167	170515-5168
		170515-5173	170515-5174	170515-5175	170515-5176	170515-5177	170515-5178
		170515-5183	170515-5184	170515-5185	170515-5186	170515-5187	170515-5188
		170515-7103	170515-7104	170515-7105	170515-7106	170515-7107	170515-7108
		170515-7113	170515-7114	170515-7115	170515-7116	170515-7117	170515-7118
		170515-7123	170515-7124	170515-7125	170515-7126	170515-7127	170515-7128
		170515-7133	170515-7134	170515-7135	170515-7136	170515-7137	170515-7138
		170515-7143	170515-7144	170515-7145	170515-7146	170515-7147	170515-7148
		170515-7153	170515-7154	170515-7155	170515-7156	170515-7157	170515-7158
		170515-7163	170515-7164	170515-7165	170515-7166	170515-7167	170515-7168
		170515-7173	170515-7174	170515-7175	170515-7176	170515-7177	170515-7178
		170515-7183	170515-7184	170515-7185	170515-7186	170515-7187	170515-7188
		170515-9103	170515-9104	170515-9105	170515-9106	170515-9107	170515-9108
		170515-9113	170515-9114	170515-9115	170515-9116	170515-9117	170515-9118
170515-9123		170515-9124	170515-9125	170515-9126	170515-9127	170515-9128	
170515-9133	170515-9134	170515-9135	170515-9136	170515-9137	170515-9138		
170515-9143	170515-9144	170515-9145	170515-9146	170515-9147	170515-9148		
170515-9153	170515-9154	170515-9155	170515-9156	170515-9157	170515-9158		
170515-9163	170515-9164	170515-9165	170515-9166	170515-9167	170515-9168		
170515-9173	170515-9174	170515-9175	170515-9176	170515-9177	170515-9178		
170515-9183	170515-9184	170515-9185	170515-9186	170515-9187	170515-9188		
12	170515-1203	170515-1204	170515-1205	170515-1206	170515-1207	170515-1208	
	170515-1213	170515-1214	170515-1215	170515-1216	170515-1217	170515-1218	
	170515-1223	170515-1224	170515-1225	170515-1226	170515-1227	170515-1228	
	170515-1233	170515-1234	170515-1235	170515-1236	170515-1237	170515-1238	
	170515-3203	170515-3204	170515-3205	170515-3206	170515-3207	170515-3208	
	170515-3213	170515-3214	170515-3215	170515-3216	170515-3217	170515-3218	
		170515-3223	170515-3224	170515-3225	170515-3226	170515-3227	170515-3228

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
Impact™ 170515	12	170515-3233	170515-3234	170515-3235	170515-3236	170515-3237	170515-3238	
		170515-3243	170515-3244	170515-3245	170515-3246	170515-3247	170515-3248	
		170515-3253	170515-3254	170515-3255	170515-3256	170515-3257	170515-3258	
		170515-3263	170515-3264	170515-3265	170515-3266	170515-3267	170515-3268	
		170515-3273	170515-3274	170515-3275	170515-3276	170515-3277	170515-3278	
		170515-3283	170515-3284	170515-3285	170515-3286	170515-3287	170515-3288	
		170515-5203	170515-5204	170515-5205	170515-5206	170515-5207	170515-5208	
		170515-5213	170515-5214	170515-5215	170515-5216	170515-5217	170515-5218	
		170515-5223	170515-5224	170515-5225	170515-5226	170515-5227	170515-5228	
		170515-5233	170515-5234	170515-5235	170515-5236	170515-5237	170515-5238	
		170515-5243	170515-5244	170515-5245	170515-5246	170515-5247	170515-5248	
		170515-5253	170515-5254	170515-5255	170515-5256	170515-5257	170515-5258	
		170515-5263	170515-5264	170515-5265	170515-5266	170515-5267	170515-5268	
		170515-5273	170515-5274	170515-5275	170515-5276	170515-5277	170515-5278	
		170515-5283	170515-5284	170515-5285	170515-5286	170515-5287	170515-5288	
		170515-7203	170515-7204	170515-7205	170515-7206	170515-7207	170515-7208	
		170515-7213	170515-7214	170515-7215	170515-7216	170515-7217	170515-7218	
		170515-7223	170515-7224	170515-7225	170515-7226	170515-7227	170515-7228	
		170515-7233	170515-7234	170515-7235	170515-7236	170515-7237	170515-7238	
		170515-7243	170515-7244	170515-7245	170515-7246	170515-7247	170515-7248	
		170515-7253	170515-7254	170515-7255	170515-7256	170515-7257	170515-7258	
		170515-7263	170515-7264	170515-7265	170515-7266	170515-7267	170515-7268	
		170515-7273	170515-7274	170515-7275	170515-7276	170515-7277	170515-7278	
		170515-7283	170515-7284	170515-7285	170515-7286	170515-7287	170515-7288	
		170515-9203	170515-9204	170515-9205	170515-9206	170515-9207	170515-9208	
		170515-9213	170515-9214	170515-9215	170515-9216	170515-9217	170515-9218	
		170515-9223	170515-9224	170515-9225	170515-9226	170515-9227	170515-9228	
		170515-9233	170515-9234	170515-9235	170515-9236	170515-9237	170515-9238	
		170515-9243	170515-9244	170515-9245	170515-9246	170515-9247	170515-9248	
		170515-9253	170515-9254	170515-9255	170515-9256	170515-9257	170515-9258	
		170515-9263	170515-9264	170515-9265	170515-9266	170515-9267	170515-9268	
		170515-9273	170515-9274	170515-9275	170515-9276	170515-9277	170515-9278	
		170515-9283	170515-9284	170515-9285	170515-9286	170515-9287	170515-9288	
		14	170515-1403	170515-1404	170515-1405	170515-1406	170515-1407	170515-1408
			170515-1413	170515-1414	170515-1415	170515-1416	170515-1417	170515-1418
			170515-1423	170515-1424	170515-1425	170515-1426	170515-1427	170515-1428
			170515-1433	170515-1434	170515-1435	170515-1436	170515-1437	170515-1438
			170515-3403	170515-3404	170515-3405	170515-3406	170515-3407	170515-3408
			170515-3413	170515-3414	170515-3415	170515-3416	170515-3417	170515-3418
			170515-3423	170515-3424	170515-3425	170515-3426	170515-3427	170515-3428
			170515-3433	170515-3434	170515-3435	170515-3436	170515-3437	170515-3438
			170515-3443	170515-3444	170515-3445	170515-3446	170515-3447	170515-3448
170515-3453	170515-3454		170515-3455	170515-3456	170515-3457	170515-3458		
170515-3463	170515-3464		170515-3465	170515-3466	170515-3467	170515-3468		
170515-3473	170515-3474		170515-3475	170515-3476	170515-3477	170515-3478		
170515-3483	170515-3484		170515-3485	170515-3486	170515-3487	170515-3488		
170515-5403	170515-5404		170515-5405	170515-5406	170515-5407	170515-5408		
170515-5413	170515-5414		170515-5415	170515-5416	170515-5417	170515-5418		
170515-5423	170515-5424		170515-5425	170515-5426	170515-5427	170515-5428		
170515-5433	170515-5434		170515-5435	170515-5436	170515-5437	170515-5438		
170515-5443	170515-5444		170515-5445	170515-5446	170515-5447	170515-5448		
170515-5453	170515-5454		170515-5455	170515-5456	170515-5457	170515-5458		
170515-5463	170515-5464		170515-5465	170515-5466	170515-5467	170515-5468		
170515-5473	170515-5474		170515-5475	170515-5476	170515-5477	170515-5478		
170515-5483	170515-5484		170515-5485	170515-5486	170515-5487	170515-5488		
170515-7403	170515-7404		170515-7405	170515-7406	170515-7407	170515-7408		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170515	14	170515-7413	170515-7414	170515-7415	170515-7416	170515-7417	170515-7418
		170515-7423	170515-7424	170515-7425	170515-7426	170515-7427	170515-7428
		170515-7433	170515-7434	170515-7435	170515-7436	170515-7437	170515-7438
		170515-7443	170515-7444	170515-7445	170515-7446	170515-7447	170515-7448
		170515-7453	170515-7454	170515-7455	170515-7456	170515-7457	170515-7458
		170515-7463	170515-7464	170515-7465	170515-7466	170515-7467	170515-7468
		170515-7473	170515-7474	170515-7475	170515-7476	170515-7477	170515-7478
		170515-7483	170515-7484	170515-7485	170515-7486	170515-7487	170515-7488
		170515-9403	170515-9404	170515-9405	170515-9406	170515-9407	170515-9408
		170515-9413	170515-9414	170515-9415	170515-9416	170515-9417	170515-9418
		170515-9423	170515-9424	170515-9425	170515-9426	170515-9427	170515-9428
		170515-9433	170515-9434	170515-9435	170515-9436	170515-9437	170515-9438
		170515-9443	170515-9444	170515-9445	170515-9446	170515-9447	170515-9448
		170515-9453	170515-9454	170515-9455	170515-9456	170515-9457	170515-9458
	170515-9463	170515-9464	170515-9465	170515-9466	170515-9467	170515-9468	
	170515-9473	170515-9474	170515-9475	170515-9476	170515-9477	170515-9478	
	170515-9483	170515-9484	170515-9485	170515-9486	170515-9487	170515-9488	
	16	170515-1603	170515-1604	170515-1605	170515-1606	170515-1607	170515-1608
		170515-1613	170515-1614	170515-1615	170515-1616	170515-1617	170515-1618
		170515-1623	170515-1624	170515-1625	170515-1626	170515-1627	170515-1628
		170515-1633	170515-1634	170515-1635	170515-1636	170515-1637	170515-1638
		170515-3603	170515-3604	170515-3605	170515-3606	170515-3607	170515-3608
		170515-3613	170515-3614	170515-3615	170515-3616	170515-3617	170515-3618
		170515-3623	170515-3624	170515-3625	170515-3626	170515-3627	170515-3628
		170515-3633	170515-3634	170515-3635	170515-3636	170515-3637	170515-3638
		170515-3643	170515-3644	170515-3645	170515-3646	170515-3647	170515-3648
		170515-3653	170515-3654	170515-3655	170515-3656	170515-3657	170515-3658
		170515-3663	170515-3664	170515-3665	170515-3666	170515-3667	170515-3668
		170515-3673	170515-3674	170515-3675	170515-3676	170515-3677	170515-3678
		170515-3683	170515-3684	170515-3685	170515-3686	170515-3687	170515-3688
		170515-5603	170515-5604	170515-5605	170515-5606	170515-5607	170515-5608
		170515-5613	170515-5614	170515-5615	170515-5616	170515-5617	170515-5618
		170515-5623	170515-5624	170515-5625	170515-5626	170515-5627	170515-5628
		170515-5633	170515-5634	170515-5635	170515-5636	170515-5637	170515-5638
170515-5643		170515-5644	170515-5645	170515-5646	170515-5647	170515-5648	
170515-5653		170515-5654	170515-5655	170515-5656	170515-5657	170515-5658	
170515-5663		170515-5664	170515-5665	170515-5666	170515-5667	170515-5668	
170515-5673		170515-5674	170515-5675	170515-5676	170515-5677	170515-5678	
170515-5683		170515-5684	170515-5685	170515-5686	170515-5687	170515-5688	
170515-7603		170515-7604	170515-7605	170515-7606	170515-7607	170515-7608	
170515-7613		170515-7614	170515-7615	170515-7616	170515-7617	170515-7618	
170515-7623		170515-7624	170515-7625	170515-7626	170515-7627	170515-7628	
170515-7633		170515-7634	170515-7635	170515-7636	170515-7637	170515-7638	
170515-7643		170515-7644	170515-7645	170515-7646	170515-7647	170515-7648	
170515-7653		170515-7654	170515-7655	170515-7656	170515-7657	170515-7658	
170515-7663		170515-7664	170515-7665	170515-7666	170515-7667	170515-7668	
170515-7673		170515-7674	170515-7675	170515-7676	170515-7677	170515-7678	
170515-7683		170515-7684	170515-7685	170515-7686	170515-7687	170515-7688	
170515-9613		170515-9614	170515-9615	170515-9616	170515-9617	170515-9618	
170515-9623		170515-9624	170515-9625	170515-9626	170515-9627	170515-9628	
170515-9633		170515-9634	170515-9635	170515-9636	170515-9637	170515-9638	
170515-9643	170515-9644	170515-9645	170515-9646	170515-9647	170515-9648		
170515-9653	170515-9654	170515-9655	170515-9656	170515-9657	170515-9658		
170515-9663	170515-9664	170515-9665	170515-9666	170515-9667	170515-9668		
170515-9673	170515-9674	170515-9675	170515-9676	170515-9677	170515-9678		
170515-9683	170515-9684	170515-9685	170515-9686	170515-9687	170515-9688		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
170515	16	170515-9613	170515-9614	170515-9615	170515-9616	170515-9617	170515-9618
Impact™ 170525	8	170525-1803	170525-1804	170525-1805	170525-1806	170525-1807	170525-1808
		170525-1813	170525-1814	170525-1815	170525-1816	170525-1817	170525-1818
		170525-1823	170525-1824	170525-1825	170525-1826	170525-1827	170525-1828
		170525-1833	170525-1834	170525-1835	170525-1836	170525-1837	170525-1838
		170525-3813	170525-3814	170525-3815	170525-3816	170525-3817	170525-3818
		170525-3823	170525-3824	170525-3825	170525-3826	170525-3827	170525-3828
		170525-3833	170525-3834	170525-3835	170525-3836	170525-3837	170525-3838
		170525-3843	170525-3844	170525-3845	170525-3846	170525-3847	170525-3848
		170525-3853	170525-3854	170525-3855	170525-3856	170525-3857	170525-3858
		170525-3863	170525-3864	170525-3865	170525-3866	170525-3867	170525-3868
		170525-3873	170525-3874	170525-3875	170525-3876	170525-3877	170525-3878
		170525-3883	170525-3884	170525-3885	170525-3886	170525-3887	170525-3888
		170525-3813	170525-3814	170525-3815	170525-3816	170525-3817	170525-3818
		170525-5803	170525-5804	170525-5805	170525-5806	170525-5807	170525-5808
		170525-5813	170525-5814	170525-5815	170525-5816	170525-5817	170525-5818
		170525-5823	170525-5824	170525-5825	170525-5826	170525-5827	170525-5828
		170525-5833	170525-5834	170525-5835	170525-5836	170525-5837	170525-5838
		170525-5843	170525-5844	170525-5845	170525-5846	170525-5847	170525-5848
		170525-5853	170525-5854	170525-5855	170525-5856	170525-5857	170525-5858
		170525-5863	170525-5864	170525-5865	170525-5866	170525-5867	170525-5868
		170525-5873	170525-5874	170525-5875	170525-5876	170525-5877	170525-5878
		170525-5883	170525-5884	170525-5885	170525-5886	170525-5887	170525-5888
		170525-7803	170525-7804	170525-7805	170525-7806	170525-7807	170525-7808
		170525-7813	170525-7814	170525-7815	170525-7816	170525-7817	170525-7818
		170525-7823	170525-7824	170525-7825	170525-7826	170525-7827	170525-7828
		170525-7833	170525-7834	170525-7835	170525-7836	170525-7837	170525-7838
		170525-7843	170525-7844	170525-7845	170525-7846	170525-7847	170525-7848
		170525-7853	170525-7854	170525-7855	170525-7856	170525-7857	170525-7858
		170525-7863	170525-7864	170525-7865	170525-7866	170525-7867	170525-7868
		170525-7873	170525-7874	170525-7875	170525-7876	170525-7877	170525-7878
		170525-7883	170525-7884	170525-7885	170525-7886	170525-7887	170525-7888
		170525-9803	170525-9804	170525-9805	170525-9806	170525-9807	170525-9808
	170525-9813	170525-9814	170525-9815	170525-9816	170525-9817	170525-9818	
	170525-9823	170525-9824	170525-9825	170525-9826	170525-9827	170525-9828	
	170525-9833	170525-9834	170525-9835	170525-9836	170525-9837	170525-9838	
	170525-9843	170525-9844	170525-9845	170525-9846	170525-9847	170525-9848	
	170525-9853	170525-9854	170525-9855	170525-9856	170525-9857	170525-9858	
	170525-9863	170525-9864	170525-9865	170525-9866	170525-9867	170525-9868	
	170525-9873	170525-9874	170525-9875	170525-9876	170525-9877	170525-9878	
	170525-9883	170525-9884	170525-9885	170525-9886	170525-9887	170525-9888	
	10	170525-1103	170525-1104	170525-1105	170525-1106	170525-1107	170525-1108
		170525-1113	170525-1114	170525-1115	170525-1116	170525-1117	170525-1118
		170525-1123	170525-1124	170525-1125	170525-1126	170525-1127	170525-1128
		170525-1133	170525-1134	170525-1135	170525-1136	170525-1137	170525-1138
		170525-3103	170525-3104	170525-3105	170525-3106	170525-3107	170525-3108
		170525-3113	170525-3114	170525-3115	170525-3116	170525-3117	170525-3118
		170525-3123	170525-3124	170525-3125	170525-3126	170525-3127	170525-3128
		170525-3133	170525-3134	170525-3135	170525-3136	170525-3137	170525-3138
170525-3143		170525-3144	170525-3145	170525-3146	170525-3147	170525-3148	
170525-3153		170525-3154	170525-3155	170525-3156	170525-3157	170525-3158	
170525-3163		170525-3164	170525-3165	170525-3166	170525-3167	170525-3168	
170525-3173		170525-3174	170525-3175	170525-3176	170525-3177	170525-3178	
170525-3183		170525-3184	170525-3185	170525-3186	170525-3187	170525-3188	
170525-5103		170525-5104	170525-5105	170525-5106	170525-5107	170525-5108	
170525-5113		170525-5114	170525-5115	170525-5116	170525-5117	170525-5118	

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.						
Impact™ 170525	10	170525-5123	170525-5124	170525-5125	170525-5126	170525-5127	170525-5128	
		170525-5133	170525-5134	170525-5135	170525-5136	170525-5137	170525-5138	
		170525-5143	170525-5144	170525-5145	170525-5146	170525-5147	170525-5148	
		170525-5153	170525-5154	170525-5155	170525-5156	170525-5157	170525-5158	
		170525-5163	170525-5164	170525-5165	170525-5166	170525-5167	170525-5168	
		170525-5173	170525-5174	170525-5175	170525-5176	170525-5177	170525-5178	
		170525-5183	170525-5184	170525-5185	170525-5186	170525-5187	170525-5188	
		170525-7103	170525-7104	170525-7105	170525-7106	170525-7107	170525-7108	
		170525-7113	170525-7114	170525-7115	170525-7116	170525-7117	170525-7118	
		170525-7123	170525-7124	170525-7125	170525-7126	170525-7127	170525-7128	
		170525-7133	170525-7134	170525-7135	170525-7136	170525-7137	170525-7138	
		170525-7143	170525-7144	170525-7145	170525-7146	170525-7147	170525-7148	
		170525-7153	170525-7154	170525-7155	170525-7156	170525-7157	170525-7158	
		170525-7163	170525-7164	170525-7165	170525-7166	170525-7167	170525-7168	
		170525-7173	170525-7174	170525-7175	170525-7176	170525-7177	170525-7178	
		170525-7183	170525-7184	170525-7185	170525-7186	170525-7187	170525-7188	
		170525-9103	170525-9104	170525-9105	170525-9106	170525-9107	170525-9108	
		170525-9113	170525-9114	170525-9115	170525-9116	170525-9117	170525-9118	
		170525-9123	170525-9124	170525-9125	170525-9126	170525-9127	170525-9128	
		170525-9133	170525-9134	170525-9135	170525-9136	170525-9137	170525-9138	
		170525-9143	170525-9144	170525-9145	170525-9146	170525-9147	170525-9148	
		170525-9153	170525-9154	170525-9155	170525-9156	170525-9157	170525-9158	
		170525-9163	170525-9164	170525-9165	170525-9166	170525-9167	170525-9168	
		170525-9173	170525-9174	170525-9175	170525-9176	170525-9177	170525-9178	
		170525-9183	170525-9184	170525-9185	170525-9186	170525-9187	170525-9188	
		12	170525-1203	170525-1204	170525-1205	170525-1206	170525-1207	170525-1208
			170525-1213	170525-1214	170525-1215	170525-1216	170525-1217	170525-1218
			170525-1223	170525-1224	170525-1225	170525-1226	170525-1227	170525-1228
			170525-1233	170525-1234	170525-1235	170525-1236	170525-1237	170525-1238
			170525-1203	170525-1204	170525-1205	170525-1206	170525-1207	170525-1208
			170525-3203	170525-3204	170525-3205	170525-3206	170525-3207	170525-3208
			170525-3213	170525-3214	170525-3215	170525-3216	170525-3217	170525-3218
			170525-3223	170525-3224	170525-3225	170525-3226	170525-3227	170525-3228
			170525-3233	170525-3234	170525-3235	170525-3236	170525-3237	170525-3238
			170525-3243	170525-3244	170525-3245	170525-3246	170525-3247	170525-3248
			170525-3253	170525-3254	170525-3255	170525-3256	170525-3257	170525-3258
			170525-3263	170525-3264	170525-3265	170525-3266	170525-3267	170525-3268
			170525-3273	170525-3274	170525-3275	170525-3276	170525-3277	170525-3278
			170525-3283	170525-3284	170525-3285	170525-3286	170525-3287	170525-3288
			170525-5203	170525-5204	170525-5205	170525-5206	170525-5207	170525-5208
			170525-5213	170525-5214	170525-5215	170525-5216	170525-5217	170525-5218
			170525-5223	170525-5224	170525-5225	170525-5226	170525-5227	170525-5228
			170525-5233	170525-5234	170525-5235	170525-5236	170525-5237	170525-5238
			170525-5243	170525-5244	170525-5245	170525-5246	170525-5247	170525-5248
			170525-5253	170525-5254	170525-5255	170525-5256	170525-5257	170525-5258
	170525-5263		170525-5264	170525-5265	170525-5266	170525-5267	170525-5268	
	170525-5273		170525-5274	170525-5275	170525-5276	170525-5277	170525-5278	
	170525-5283		170525-5284	170525-5285	170525-5286	170525-5287	170525-5288	
	170525-7203		170525-7204	170525-7205	170525-7206	170525-7207	170525-7208	
	170525-7213		170525-7214	170525-7215	170525-7216	170525-7217	170525-7218	
	170525-7223		170525-7224	170525-7225	170525-7226	170525-7227	170525-7228	
	170525-7233		170525-7234	170525-7235	170525-7236	170525-7237	170525-7238	
	170525-7243		170525-7244	170525-7245	170525-7246	170525-7247	170525-7248	
	170525-7253	170525-7254	170525-7255	170525-7256	170525-7257	170525-7258		
	170525-7263	170525-7264	170525-7265	170525-7266	170525-7267	170525-7268		
	170525-7273	170525-7274	170525-7275	170525-7276	170525-7277	170525-7278		

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170525	12	170525-7283	170525-7284	170525-7285	170525-7286	170525-7287	170525-7288
		170525-9203	170525-9204	170525-9205	170525-9206	170525-9207	170525-9208
		170525-9213	170525-9214	170525-9215	170525-9216	170525-9217	170525-9218
		170525-9223	170525-9224	170525-9225	170525-9226	170525-9227	170525-9228
		170525-9233	170525-9234	170525-9235	170525-9236	170525-9237	170525-9238
		170525-9243	170525-9244	170525-9245	170525-9246	170525-9247	170525-9248
		170525-9253	170525-9254	170525-9255	170525-9256	170525-9257	170525-9258
		170525-9263	170525-9264	170525-9265	170525-9266	170525-9267	170525-9268
		170525-9273	170525-9274	170525-9275	170525-9276	170525-9277	170525-9278
		170525-9283	170525-9284	170525-9285	170525-9286	170525-9287	170525-9288
	16	170525-1603	170525-1604	170525-1605	170525-1606	170525-1607	170525-1608
		170525-1613	170525-1614	170525-1615	170525-1616	170525-1617	170525-1618
		170525-1623	170525-1624	170525-1625	170525-1626	170525-1627	170525-1628
		170525-1633	170525-1634	170525-1635	170525-1636	170525-1637	170525-1638
		170525-3603	170525-3604	170525-3605	170525-3606	170525-3607	170525-3608
		170525-3613	170525-3614	170525-3615	170525-3616	170525-3617	170525-3618
		170525-3623	170525-3624	170525-3625	170525-3626	170525-3627	170525-3628
		170525-3633	170525-3634	170525-3635	170525-3636	170525-3637	170525-3638
		170525-3643	170525-3644	170525-3645	170525-3646	170525-3647	170525-3648
		170525-3653	170525-3654	170525-3655	170525-3656	170525-3657	170525-3658
		170525-3663	170525-3664	170525-3665	170525-3666	170525-3667	170525-3668
		170525-3673	170525-3674	170525-3675	170525-3676	170525-3677	170525-3678
		170525-3683	170525-3684	170525-3685	170525-3686	170525-3687	170525-3688
		170525-5603	170525-5604	170525-5605	170525-5606	170525-5607	170525-5608
		170525-5613	170525-5614	170525-5615	170525-5616	170525-5617	170525-5618
		170525-5623	170525-5624	170525-5625	170525-5626	170525-5627	170525-5628
		170525-5633	170525-5634	170525-5635	170525-5636	170525-5637	170525-5638
		170525-5643	170525-5644	170525-5645	170525-5646	170525-5647	170525-5648
		170525-5653	170525-5654	170525-5655	170525-5656	170525-5657	170525-5658
		170525-5663	170525-5664	170525-5665	170525-5666	170525-5667	170525-5668
		170525-5673	170525-5674	170525-5675	170525-5676	170525-5677	170525-5678
		170525-5683	170525-5684	170525-5685	170525-5686	170525-5687	170525-5688
		170525-7603	170525-7604	170525-7605	170525-7606	170525-7607	170525-7608
		170525-7613	170525-7614	170525-7615	170525-7616	170525-7617	170525-7618
		170525-7623	170525-7624	170525-7625	170525-7626	170525-7627	170525-7628
		170525-7633	170525-7634	170525-7635	170525-7636	170525-7637	170525-7638
		170525-7643	170525-7644	170525-7645	170525-7646	170525-7647	170525-7648
		170525-7653	170525-7654	170525-7655	170525-7656	170525-7657	170525-7658
		170525-7663	170525-7664	170525-7665	170525-7666	170525-7667	170525-7668
		170525-7673	170525-7674	170525-7675	170525-7676	170525-7677	170525-7678
170525-7683	170525-7684	170525-7685	170525-7686	170525-7687	170525-7688		
170525-9603	170525-9604	170525-9605	170525-9606	170525-9607	170525-9608		
170525-9613	170525-9614	170525-9615	170525-9616	170525-9617	170525-9618		
170525-9623	170525-9624	170525-9625	170525-9626	170525-9627	170525-9628		
170525-9633	170525-9634	170525-9635	170525-9636	170525-9637	170525-9638		
170525-9643	170525-9644	170525-9645	170525-9646	170525-9647	170525-9648		
170525-9653	170525-9654	170525-9655	170525-9656	170525-9657	170525-9658		
170525-9663	170525-9664	170525-9665	170525-9666	170525-9667	170525-9668		
170525-9673	170525-9674	170525-9675	170525-9676	170525-9677	170525-9678		
170525-9683	170525-9684	170525-9685	170525-9686	170525-9687	170525-9688		
Impact™ 170535	10	170535-1103	170535-1104	170535-1105	170535-1106	170535-1107	170535-1108
		170535-1113	170535-1114	170535-1115	170535-1116	170535-1117	170535-1118
		170535-1123	170535-1124	170535-1125	170535-1126	170535-1127	170535-1128
		170535-1133	170535-1134	170535-1135	170535-1136	170535-1137	170535-1138
		170535-3103	170535-3104	170535-3105	170535-3106	170535-3107	170535-3108
		170535-3113	170535-3114	170535-3115	170535-3116	170535-3117	170535-3118

Backplane Header Removal Tool

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170535	10	170535-3123	170535-3124	170535-3125	170535-3126	170535-3127	170535-3128
		170535-3133	170535-3134	170535-3135	170535-3136	170535-3137	170535-3138
		170535-3143	170535-3144	170535-3145	170535-3146	170535-3147	170535-3148
		170535-5103	170535-5104	170535-5105	170535-5106	170535-5107	170535-5108
		170535-5113	170535-5114	170535-5115	170535-5116	170535-5117	170535-5118
		170535-5123	170535-5124	170535-5125	170535-5126	170535-5127	170535-5128
		170535-5133	170535-5134	170535-5135	170535-5136	170535-5137	170535-5138
		170535-5143	170535-5144	170535-5145	170535-5146	170535-5147	170535-5148
		170535-7103	170535-7104	170535-7105	170535-7106	170535-7107	170535-7108
		170535-7113	170535-7114	170535-7115	170535-7116	170535-7117	170535-7118
		170535-7123	170535-7124	170535-7125	170535-7126	170535-7127	170535-7128
		170535-7133	170535-7134	170535-7135	170535-7136	170535-7137	170535-7138
		170535-9103	170535-9104	170535-9105	170535-9106	170535-9107	170535-9108
		170535-9113	170535-9114	170535-9115	170535-9116	170535-9117	170535-9118
		170535-9123	170535-9124	170535-9125	170535-9126	170535-9127	170535-9128
		170535-9133	170535-9134	170535-9135	170535-9136	170535-9137	170535-9138
		170535-9143	170535-9144	170535-9145	170535-9146	170535-9147	170535-9148
		14	170535-1403	170535-1404	170535-1405	170535-1406	170535-1407
	170535-1413		170535-1414	170535-1415	170535-1416	170535-1417	170535-1418
	170535-1423		170535-1424	170535-1425	170535-1426	170535-1427	170535-1428
	170535-1433		170535-1434	170535-1435	170535-1436	170535-1437	170535-1438
	170535-3403		170535-3404	170535-3405	170535-3406	170535-3407	170535-3408
	170535-3413		170535-3414	170535-3415	170535-3416	170535-3417	170535-3418
	170535-3423		170535-3424	170535-3425	170535-3426	170535-3427	170535-3428
	170535-3433		170535-3434	170535-3435	170535-3436	170535-3437	170535-3438
	170535-3443		170535-3444	170535-3445	170535-3446	170535-3447	170535-3448
	170535-5403		170535-5404	170535-5405	170535-5406	170535-5407	170535-5408
	170535-5413		170535-5414	170535-5415	170535-5416	170535-5417	170535-5418
	170535-5423		170535-5424	170535-5425	170535-5426	170535-5427	170535-5428
	170535-5433		170535-5434	170535-5435	170535-5436	170535-5437	170535-5438
	170535-5443		170535-5444	170535-5445	170535-5446	170535-5447	170535-5448
	170535-7403		170535-7404	170535-7405	170535-7406	170535-7407	170535-7408
	170535-7413		170535-7414	170535-7415	170535-7416	170535-7417	170535-7418
	170535-7423		170535-7424	170535-7425	170535-7426	170535-7427	170535-7428
	170535-7433		170535-7434	170535-7435	170535-7436	170535-7437	170535-7438
	170535-7443	170535-7444	170535-7445	170535-7446	170535-7447	170535-7448	
	170535-9403	170535-9404	170535-9405	170535-9406	170535-9407	170535-9408	
	170535-9413	170535-9414	170535-9415	170535-9416	170535-9417	170535-9418	
	170535-9423	170535-9424	170535-9425	170535-9426	170535-9427	170535-9428	
	170535-9433	170535-9434	170535-9435	170535-9436	170535-9437	170535-9438	
	170535-9443	170535-9444	170535-9445	170535-9446	170535-9447	170535-9448	
	16	170535-1603	170535-1604	170535-1605	170535-1606	170535-1607	170535-1608
170535-1613		170535-1614	170535-1615	170535-1616	170535-1617	170535-1618	
170535-1623		170535-1624	170535-1625	170535-1626	170535-1627	170535-1628	
170535-1633		170535-1634	170535-1635	170535-1636	170535-1637	170535-1638	
170535-3603		170535-3604	170535-3605	170535-3606	170535-3607	170535-3608	
170535-3613		170535-3614	170535-3615	170535-3616	170535-3617	170535-3618	
170535-3623		170535-3624	170535-3625	170535-3626	170535-3627	170535-3628	
170535-3633		170535-3634	170535-3635	170535-3636	170535-3637	170535-3638	
170535-3643		170535-3644	170535-3645	170535-3646	170535-3647	170535-3648	
170535-5603		170535-5604	170535-5605	170535-5606	170535-5607	170535-5608	
170535-5613		170535-5614	170535-5615	170535-5616	170535-5617	170535-5618	
170535-5623		170535-5624	170535-5625	170535-5626	170535-5627	170535-5628	
170535-5633		170535-5634	170535-5635	170535-5636	170535-5637	170535-5638	
170535-5643		170535-5644	170535-5645	170535-5646	170535-5647	170535-5648	
170535-7603	170535-7604	170535-7605	170535-7606	170535-7607	170535-7608		

Series No.	Column No.	Backplane Header Order No.					
Impact™ 170535	16	170535-7613	170535-7614	170535-7615	170535-7616	170535-7617	170535-7618
		170535-7623	170535-7624	170535-7625	170535-7626	170535-7627	170535-7628
		170535-7633	170535-7634	170535-7635	170535-7636	170535-7637	170535-7638
		170535-7643	170535-7644	170535-7645	170535-7646	170535-7647	170535-7648
		170535-9603	170535-9604	170535-9605	170535-9606	170535-9607	170535-9608
		170535-9613	170535-9614	170535-9615	170535-9616	170535-9617	170535-9618
		170535-9623	170535-9624	170535-9625	170535-9626	170535-9627	170535-9628
		170535-9633	170535-9634	170535-9635	170535-9636	170535-9637	170535-9638
170535-9643	170535-9644	170535-9645	170535-9646	170535-9647	170535-9648		
76710	8	76710-6008	76710-6108	76710-6208	76710-6308		
TinMan Dual End	10	76710-6010	76710-6110	76710-6210	76710-6308		
76922 GbX-U™	45	76922-0001					
76923 GbX-U™	45	76923-0001					
76932 GbX-U™ Dual Guide	10	76932-6103	76932-6104	76932-6105	76932-6113	76932-6114	76932-6115
		76932-6123	76932-6124	76932-6125	76932-6133	76932-6134	76932-6125
		76932-6143	76932-6144	76932-6145	76932-6153	76932-6154	76932-6155
		76932-6163	76932-6164	76932-6165	76932-6173	76932-6174	76932-6175
		76932-6183	76932-6184	76932-6185			
76933 GbX-U™ Dual Guide	10	76933-6103	76933-6104	76933-6105	76933-6113	76933-6114	76933-6115
		76933-6123	76933-6124	76933-6125	76933-6133	76933-6134	76933-6135
		76933-6143	76933-6144	76933-6145	76933-6153	76933-6154	76933-6155
		76933-6163	76933-6164	76933-6165	76933-6173	76933-6174	76933-6175
		76933-6183	76933-6184	76933-6185			

DESCRIPTION

Figure 1 illustrates the principal parts of the removal tool.

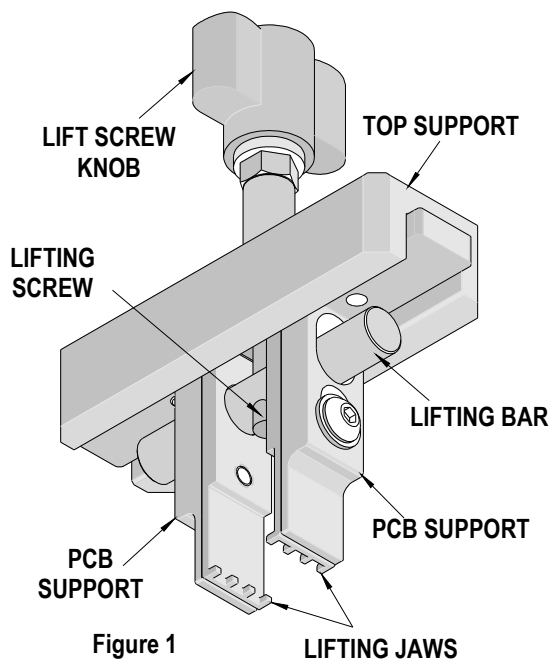


Figure 1

Tool Restrictions




In order for this tool to function, there is a “Keep-Out Zone” of .197” (5.00mm) around the header that needs to be clear of other components. See Figure 2. This is a general requirement, regardless of the header being removed.

Note: Be sure that all parts of the removal tool will clear any components on the printed circuit board during use. Tape may also be placed over circuit traces or on the bottom of the PCB Support for added protection of the printed circuit board.

Tool Operation

Note: Some longer-length headers may need the following steps repeated, with the tool being re-applied along the length of the assembly.

1. Slide the PCB Supports and Lifting Jaws fully open. See Figure 3. Turn the Lifting Screw Knob counter-clockwise (CCW) until the Lifting Jaws are slightly below the PCB Supports. At this point, the end of the Lifting Screw will be nearly flush with the bottom of the Lifting Bar.

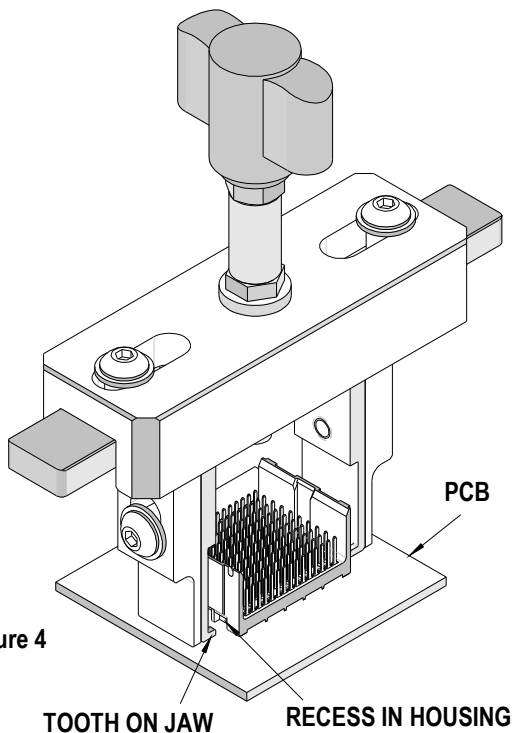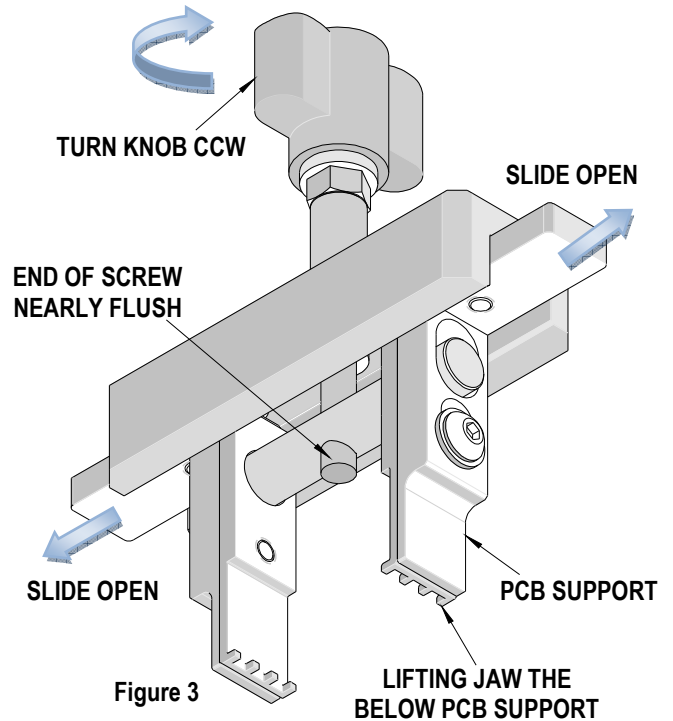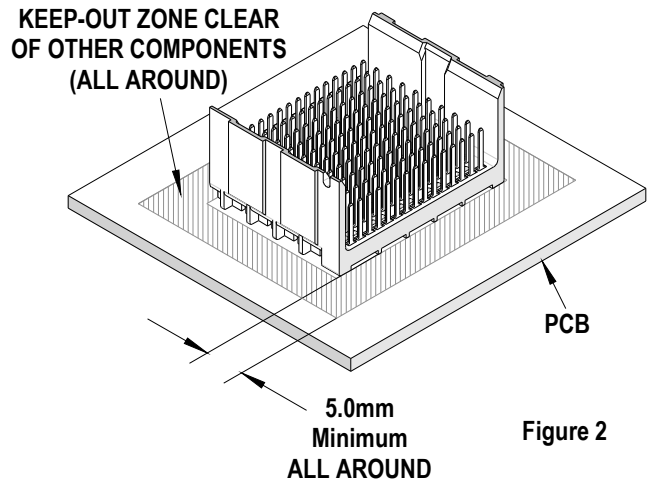

2. Move the tool down over the outside walls of the backplane housing. Note that the jaws have “teeth” that engage the recessed area of the housing (near the PCB surface). See Figure 4.

Note: The lifting jaws must engage the recesses in the housing so it can be lifted off the PCB.

3. Close the Lifting Jaws onto the backplane header housing. When the teeth are properly engaged in the recesses, the inside of the Lifting Jaws should be very close to the sides of the header housing. See Figure 5.

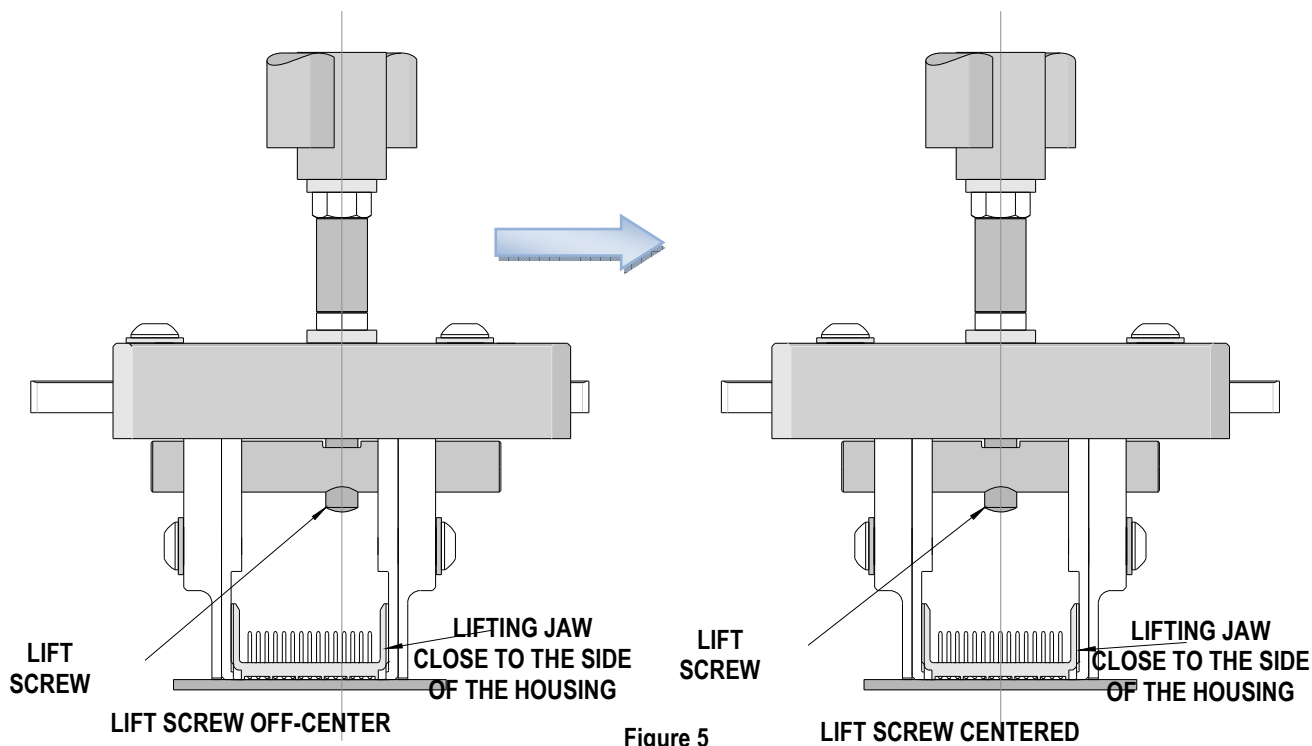


Figure 5

4. Ideally, the Lift Screw should be centered on the width of the backplane assembly. This will prevent the header assembly from tilting as it is removed from the PCB. If the screw is off-center, the top of the tool (screw, Lifting Bar, and Top Support) can be slid over until centered. See Figure 5.
5. Turn the Lift Screw Knob clockwise (CW) until the PCB Supports contact the printed circuit board.
6. Continue turning the Lift Screw Knob clockwise (CW) until the backplane header is removed from the printed circuit board. See Figure 6.
7. Move the extraction tool away from the printed circuit board. Slide the PCB Supports and Lifting Jaws open to release the header from the tool. Discard the header.

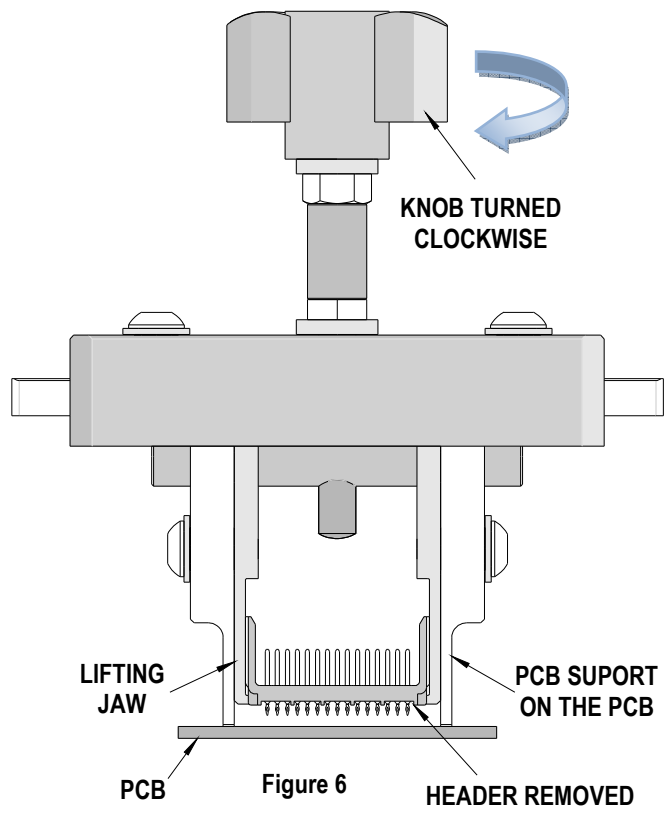


Figure 6

Note: After the backplane header is removed from the PCB, some terminals or shield blades may be left in the PCB. This is not a tooling malfunction. If there are terminals left in the PCB use a pair of long nose pliers to remove them carefully so no damage is caused to the PCB. Caution is required when using this method; if a terminal is incorrectly gripped or pulled away at an angle, it could break off inside the PCB hole. After terminals are pulled out of the PCB, they should be discarded. The PCB should be free of any contact debris.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
2. Do not use any abrasive materials that could damage the tool.
3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively.
4. When tool is not in use, store in a clean, dry area.

CAUTION: Molex specifications are valid only when used with Molex terminals, applicators and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at <http://www.molex.com>